


## Board Layout and Jumper Settings

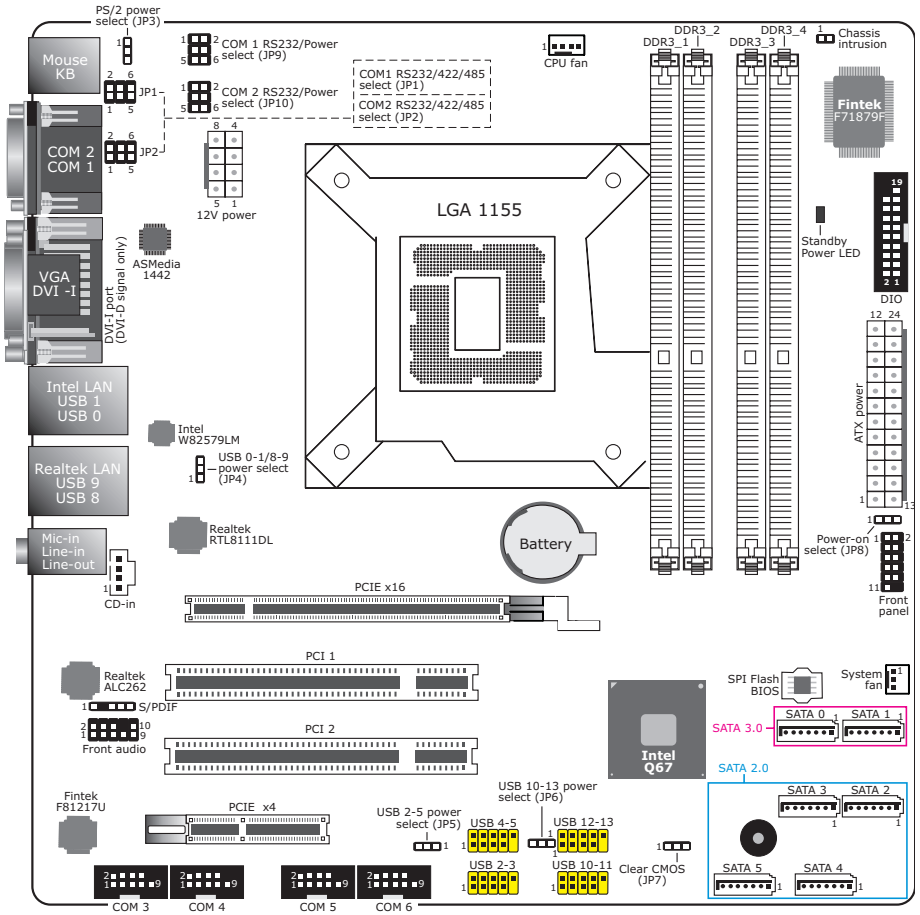

USB Power: 0-1/8-9 (JP4), 2-5 (JP5), 10-13 (JP6)	
+5V (default)	1-2 On
+5V_standby	2-3 On

Power-on Select	
	JP8
Power-on via power button (default)	1-2 On
Power-on via AC power or via WOL After G3	2-3 On

Clear CMOS Data	
	JP7
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

PS/2 Power	
	JP3
+5V (default)	1-2 On
+5V_standby	2-3 On

RS232/Power: COM 1 (JP9), COM 2 (JP10)	
RS232 (default)	1-3 (RI), 2-4 (DCD) On
RS232 with power	3-5 (+5V), 4-6 (+12V) On

RS232/RS422/RS485 Select: COM 1 (JP1), COM 2 (JP2)	
RS232 (default)	1-2 On
RS422 Full Duplex	3-4 On
RS485	5-6 On



DFI reserves the right to change the specifications at any time prior to the product's release. This QR may be based on editions that do not resemble your actual products. For more documentation and drivers, please visit the download page at [go.dfi.com/SB330-CRM](http://go.dfi.com/SB330-CRM), or via the QR code to the right.

