


Board Layout and Jumper Settings

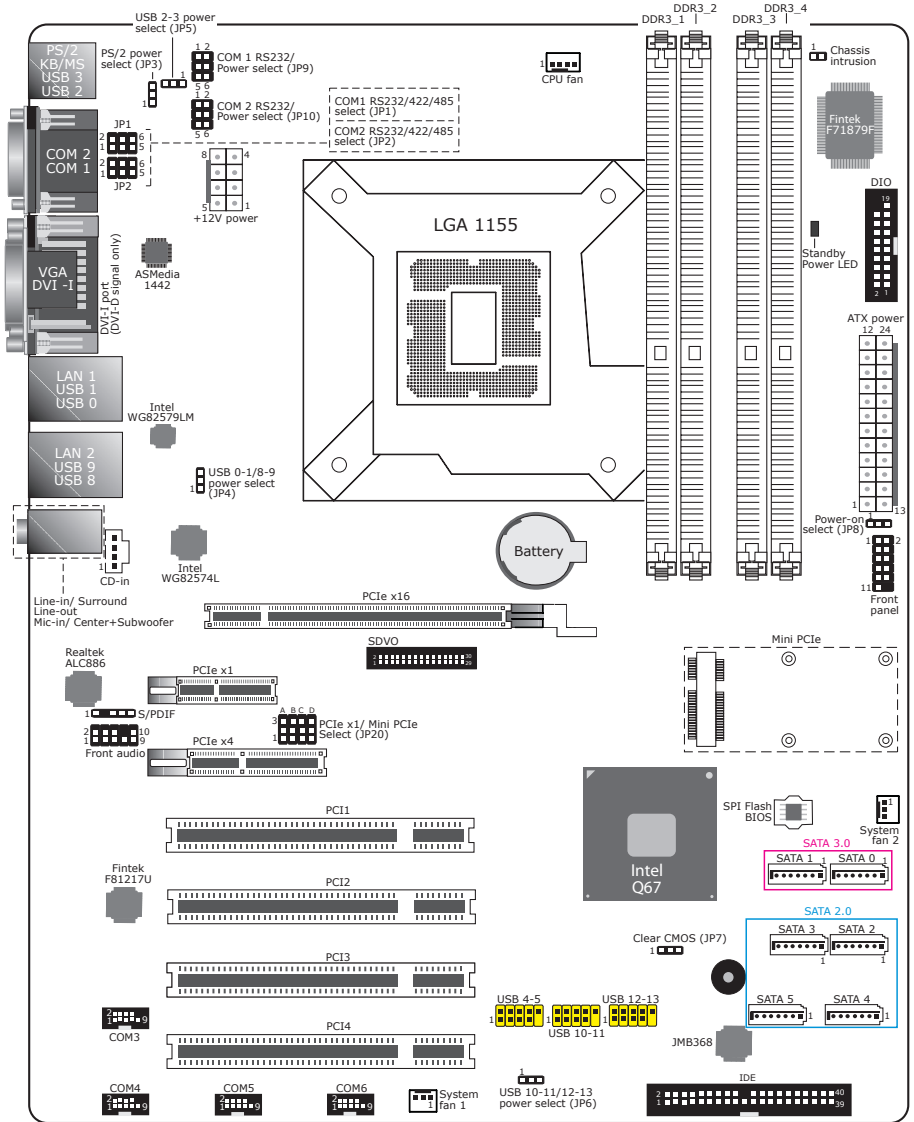

USB Power: 0-1/8-9 (JP4), 2-3 (JP5), 10-11/12-13 (JP6)	
+5V (default)	1-2 On
+5V_standby	2-3 On

Note: USB 4-5 power select only supports +5V.

Power-on Select	
JP8	
Power-on via power button (default)	1-2 On
Power-on via AC power or via WOL After G3	2-3 On

Clear CMOS Data	
JP7	
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

PS/2 Power	
JP3	
+5V (default)	1-2 On
+5V_standby and KB/MS auto swap	2-3 On

Note: Auto swap is applicable only when the PS/2 port is connected with the provided PS/2 cable.

RS232/Power: COM 1 (JP9), COM 2 (JP10)	
RS232 (default)	1-3 (RI), 2-4 (DCD) On
RS232 with power	3-5 (+5V), 4-6 (+12V) On

Note: The SDVO connector supports the optional SDVO-LVDS daughterboard.

RS232/RS422/RS485 Select: COM 1 (JP1), COM 2 (JP2)	
RS232 (default)	1-2 On
RS422 Full Duplex	3-4 On
RS485	5-6 On

PCIe x1/ Mini PCIe (JP20)	PCIe x1	Mini PCIe
A	1-2 On	2-3 On
B	1-2 On	2-3 On
C	1-2 On	2-3 On
D	1-2 On	2-3 On



DFI reserves the right to change the specifications at any time prior to the product's release. This QR may be based on editions that do not resemble your actual products. For more documentation and drivers, please visit the download page at go.dfi.com/SB630-CRM, or via the QR code to the right.

