


PT630-NRM

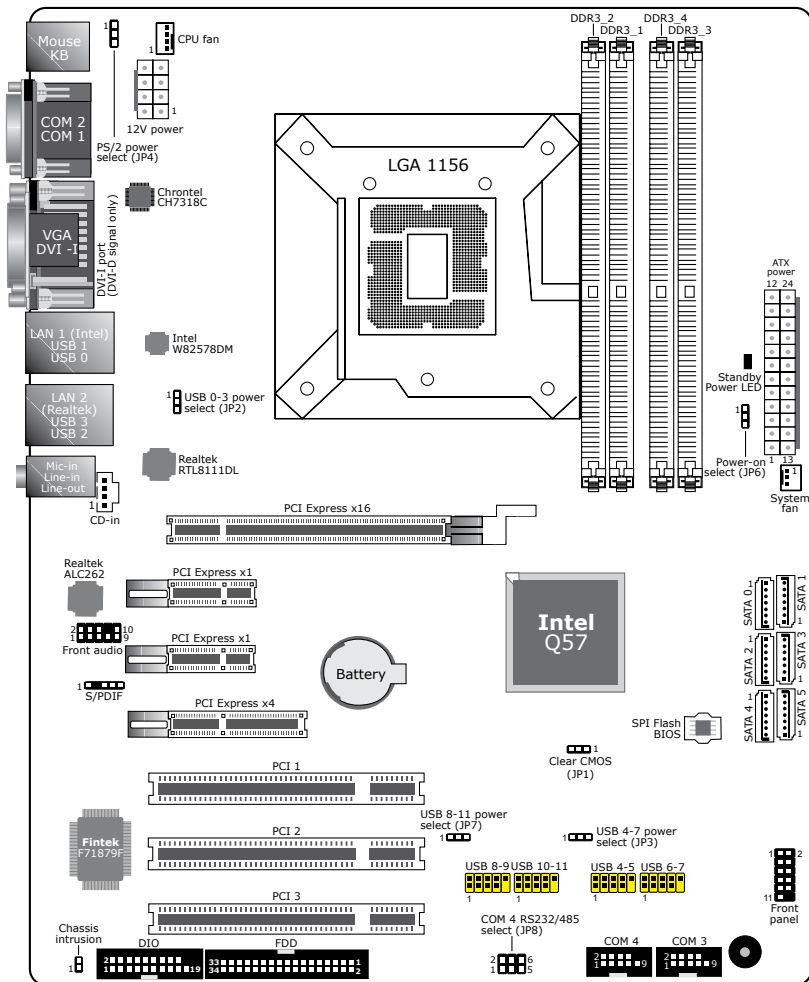

USB Power: 0-3 (JP2), 4-7 (JP3), 8-11 (JP7)	
5V (default)	1-2 On
5V_standby	2-3 On

PS/2 Power	JP4
5V (default)	1-2 On
5V_standby	2-3 On

Clear CMOS Data	JP1
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

Power-on Select		JP6
Power-on via power button (default)		1-2 On
Power-on via AC power;		2-3 On
Power-on via WOL After G3		

COM 4 RS232/RS485 Select		JP8
RS232 (default)		1-2 On
RS485		5-6 On