


Board Layout and Jumper Settings

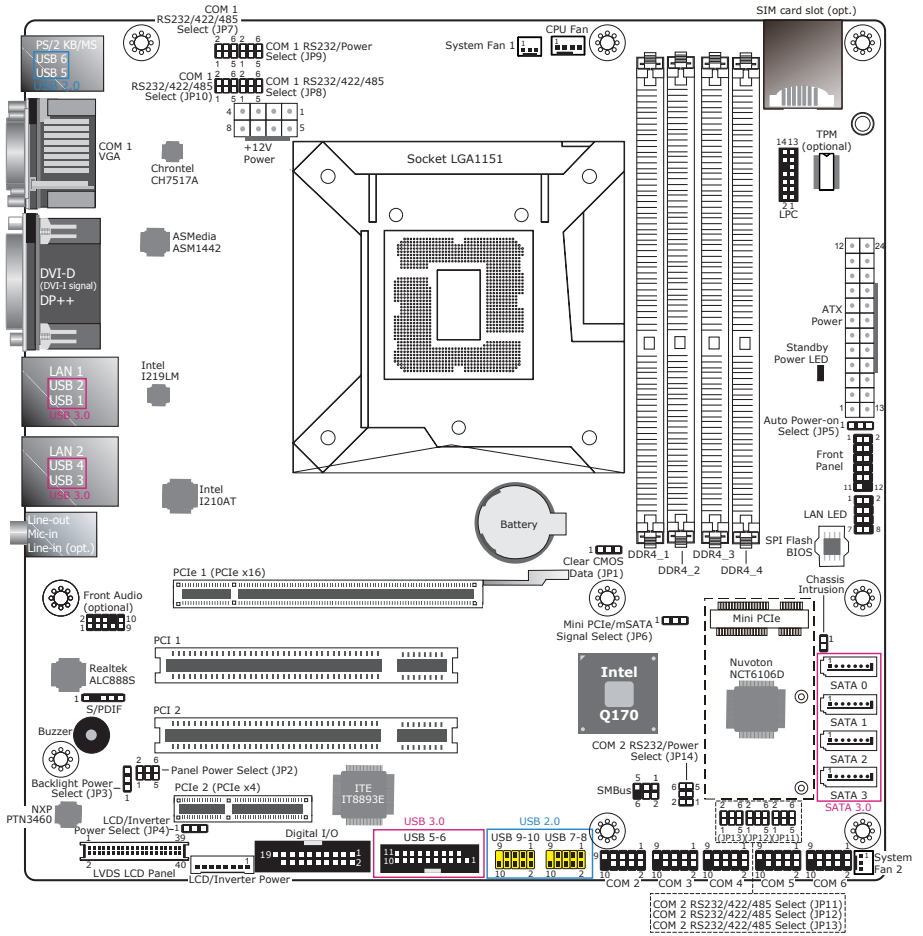

- Note:
- When COM 1 RS232/422/485 is selected, JP8 and JP10 must be set in accordance to JP7.
 - When COM 2 RS232/422/485 is selected, JP12 and JP13 must be set in accordance to JP11.

Panel Power Select	JP2
+12V	1-2 On
+5V	3-4 On
+3.3V (default)	5-6 On

Backlight Power Select	JP3
+3.3V (default)	1-2 On
+5V	2-3 On

LCD/Inverter Power Select	JP4
+12V (default)	1-2 On
+5V	2-3 On

Mini PCIe/mSATA Signal Select	JP6
Mini PCIe (default)	1-2 On
mSATA	2-3 On

Power-on Select	JP5
Power-on via power button (default)	1-2 On
Power-on via AC power	2-3 On

Clear CMOS Data	JP1
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

RS232/422/485 Select	JP7 (COM 1), JP11 (COM 2)	JP8/JP10 (COM 1), JP12/JP13 (COM 2)
RS232 (default)	1-2 On	1-3, 2-4 On
RS422 Full Duplex	3-4 On	3-5, 4-6 On
RS485	5-6 On	3-5, 4-6 On

RS232/Power: COM 1 (JP9), COM 2 (JP14)	
RS232 (default)	1-3 (RI), 2-4 (DCD) On
RS232 with power	3-5 (+5V), 4-6 (+12V) On



DFI reserves the right to change the specifications at any time prior to the product's release. This QR may be based on editions that do not resemble your actual products. For more documentation and drivers, please visit the download page at go.dfi.com/SD330-Q170, or via the QR code to the right.

