


DFI®

Q7A-551

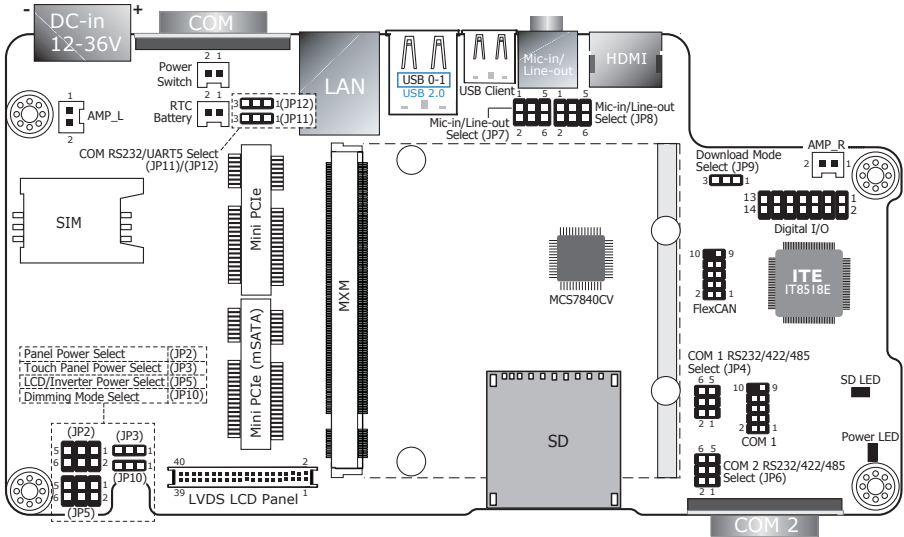

| RS232/422/485 Select: COM 1 (JP4), COM 2 (JP6) | |
|--|--------|
| RS232 (default) | 1-2 On |
| RS422 Full Duplex | 3-4 On |
| RS485 | 5-6 On |

| COM RS232/UART5 Select | JP11/JP12 |
|------------------------|-----------|
| RS232 (default) | 1-2 On |
| UART5 | 2-3 On |

| Panel Power Select | JP2 |
|-----------------------|--------|
| +12V | 1-2 On |
| +5V_standby | 3-4 On |
| +3V_standby (default) | 5-6 On |

| Touch Panel Power Select | JP3 |
|--------------------------|--------|
| +5V standby | 1-2 On |
| +3V_standby (default) | 2-3 On |

| Download Mode Select | JP9 |
|-----------------------|--------|
| Serial Download Mode | 1-2 On |
| Normal Boot (default) | 2-3 On |

| Line-out/Mic-in Select | JP7/JP8 |
|------------------------|----------------------------|
| Mic-in (default) | JP8 1-2 On, 3-4 On, 5-6 On |
| Line-out | JP7 1-2 On, 3-4 On, 5-6 On |

| LCD/Inverter Power Select | JP5 |
|---------------------------|--------|
| +12V | 1-2 On |
| +5V_standby (default) | 3-4 On |
| +3V_standby | 5-6 On |

| Dimming Mode Select | JP10 |
|---------------------|--------|
| PWM Mode (default) | 1-2 On |
| Voltage Mode | 2-3 On |

Note:
JP11 and JP12 must be set simultaneously.