


**Board Layout and Jumper Settings**

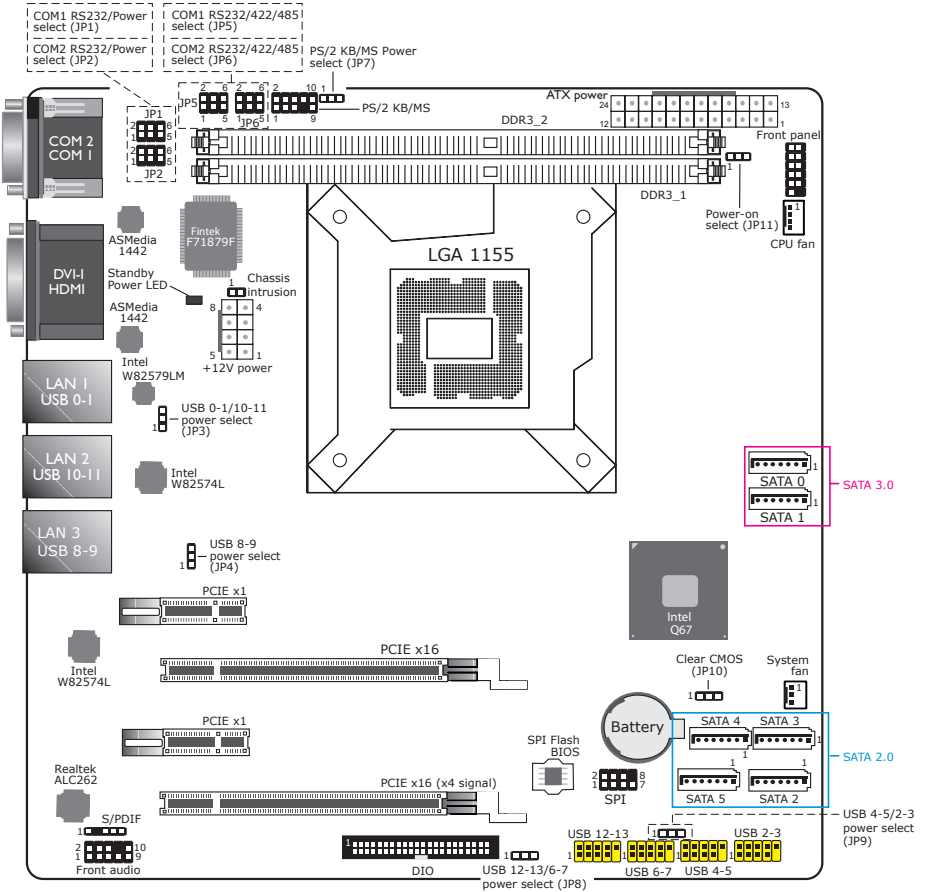

|   |   |
|---|---|
| <b>Auto Power-on Select</b>             | <b>JP11</b>   |
| Power-on via power button (default)     | 1-2 On  |
| Power-on via AC power / WOL After G3    | 2-3 On  |
| <b>RS232 Power Select</b>               | <b>COM 1 (JP1), COM 2 (JP2)</b>   |
| RS232 (default)                         | 1-3 On (RI), 2-4 On (DCD)   |
| RS232 with power                        | 3-5 On (+5V), 4-6 On (+12V)   |
| <b>Clear CMOS Data</b>                  | <b>JP10</b>   |
| Normal (default)                        | 1-2 On  |
| Clear CMOS Data                         | 2-3 On  |
| <b>PS/2 Keyboard/Mouse Power Select</b> | <b>JP7</b>  |
| +5V (default)                           | 1-2 On  |
| +5V_standby                             | 2-3 On  |
| <b>Serial Mode Select</b>               | <b>COM 1 (JP5), COM 2 (JP6)</b>   |
| RS232 (default)                         | 1-2 On  |
| RS422 Full Duplex                       | 3-4 On  |
| RS485                                   | 5-6 On  |
| <b>USB Power Select</b>                 | <b>USB 0-1 &amp; 10-11 (JP3), 8-9 (JP4), 12-13 &amp; 6-7 (JP8), 4-5 &amp; 2-3 (JP9)</b> |
| +5V (default)                           | 1-2 On  |
| +5V_standby                             | 2-3 On  |



DFI reserves the right to change the specifications at any time prior to the product's release. This QR may be based on editions that do not resemble your actual products. For more documentation and drivers, please visit the download page at [go.dfi.com/SB331-IPM](http://go.dfi.com/SB331-IPM), or via the QR code to the right.

