


CP330-NRM

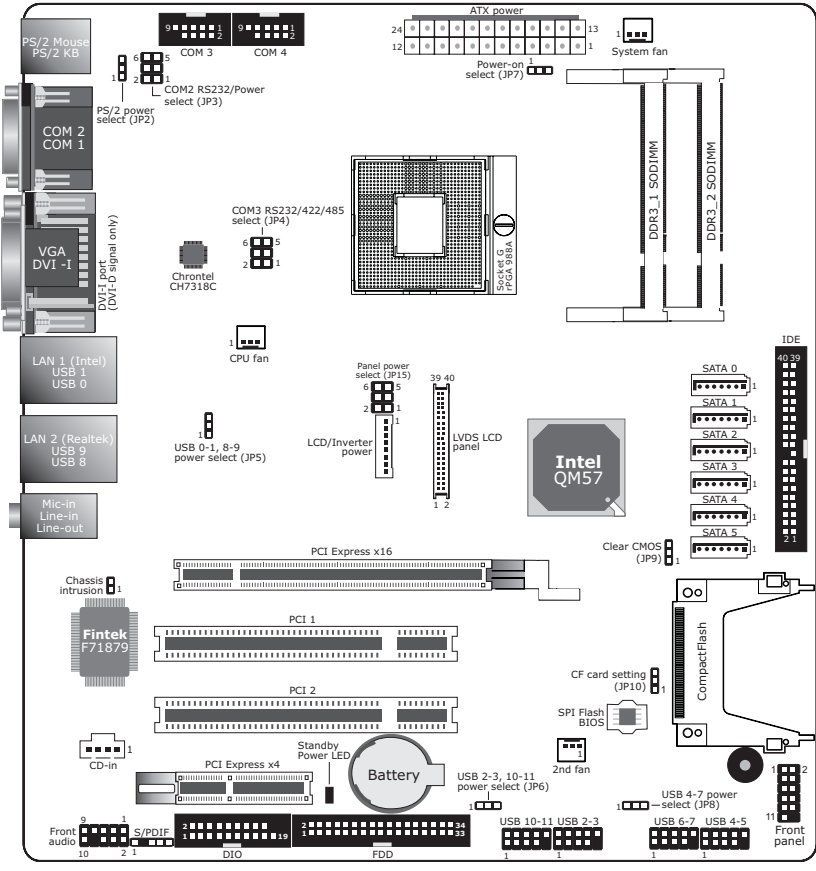

USB 0-1/8-9 (JP5), 2-3/10-11 (JP6), USB 4-7 (JP8) Power	
5V (default)	1-2 On
5V_standby	2-3 On

COM 2 RS232/Power	JP3
RS232 (default)	1-3, 2-4 On
RS232 with power	3-5 (12V), 4-6 (5V) On

COM 3 RS232/RS422/RS485 Select	JP4
RS232 (default)	1-2 On
RS422 Half Duplex	3-4 On
RS485	5-6 On

Power-on Select	JP7
Power-on via power button (default)	1-2 On
Power-on via AC power; Power-on via WOL After G3	2-3 On

Panel Power Select	JP15
+12V	1-2 On
+5V	3-4 On
+3.3V (default)	5-6 On

Clear CMOS Data	JP9
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

PS/2 Power	JP2
5V (default)	1-2 On
5V_standby	2-3 On

CF Card Setting	JP10
Master (default)	1-2 On
Slave	2-3 On