


# DFI® SB600-C

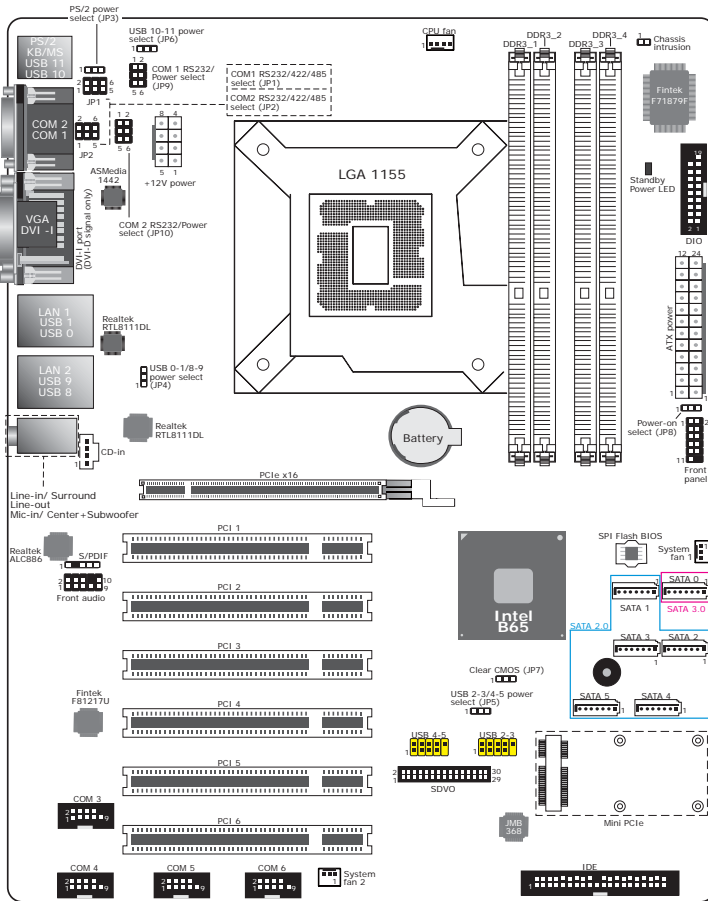

USB Power: 0-1/8-9 (JP4), 2-3/4-5 (JP5), 10-11 (JP6)	
+5V (default)	1-2 On
+5V_standby	2-3 On

RS232/RS422/RS485 Select: COM 1 (JP1), COM 2 (JP2)	
RS232 (default)	1-2 On
RS422 Full Duplex	3-4 On
RS485	5-6 On

Power-on Select	
Power-on via power button (default)	1-2 On
Power-on via AC power: Power-on via WOL After G3	2-3 On

Clear CMOS Data	
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

PS/2 Power	
+5V (default)	1-2 On
+5V_standby and supports PS/2 keyboard/ mouse auto swap function	2-3 On

RS232/Power: COM 1 (JP9), COM 2 (JP10)	
RS232 (default)	1-3 (RI), 2-4 (DCD) On
RS232 with power	3-5 (+5V), 4-6 (+12V) On

Note: The SDVO connector supports the optional SDVO-LVDS daughterboard.



## Battery Notice

### Battery Usage

The lithium ion battery powers the real-time clock and CMOS memory. It is an auxiliary source of power when the main power is shut off.

### Safety Measures

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommend by the manufacturer.
- Dispose of used batteries according to local ordinance.

### Mesure de Sécurité de l'usage de Batterie

Batterie:

- Danger d'explosion si la batterie n'est pas correctement remplacée.
- Remplacez seulement avec le même type ou équivalent recommandé par le fabricant.
- Traitez des batteries usées selon le règlement local.