



RPSPIC

Full Size PICMG 1.3
User's Manual

Copyright

This publication contains information that is protected by copyright. No part of it may be reproduced in any form or by any means or used to make any transformation/adaptation without the prior written permission from the copyright holders.

This publication is provided for informational purposes only. The manufacturer makes no representations or warranties with respect to the contents or use of this manual and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. The user will assume the entire risk of the use or the results of the use of this document. Further, the manufacturer reserves the right to revise this publication and make changes to its contents at any time, without obligation to notify any person or entity of such revisions or changes.

Changes after the publication's first release will be based on the product's revision. The website will always provide the most updated information.

© 2025. All Rights Reserved.

Trademarks

Product names or trademarks appearing in this manual are for identification purpose only and are the properties of the respective owners.

FCC and DOC Statement on Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables must be used in order to comply with the emission limits.

Table of Contents

Chapter 1 - Introduction.....	6
Specifications	6
Block Diagram	10
Dimension	10
Chapter 2 - Hardware Installation.....	11
Board Layout.....	11
For Intel® R680E Chipset.....	11
For Intel® H610E Chipset.....	11
Installing the heat sink.....	12
Installing the Heat Sink	12
Jumper Settings	13
ATX/AT Mode Select (SOJP26).....	13
Pin Assignment	14
RTC Battery (J4)	14
Case Open (SOJ1)	14
Clear CMOS (SW1)	15
ATX/AT Mode Select (SOJP26).....	15
M.2_M-KEY Power Select (M2JP31).....	16
System Fan (J7).....	16
EXT-DDI Power (DPCN1).....	17
EXT-DDI Power (DPCN2).....	17
CPU Fan (J8).....	17
SMBUS/I2C (J37)	18
ATX_8 PIN (CN2).....	18
Audio (AUJ2).....	19
SATA0 (J32) SATA1 (J23)	19
SATA2 (J17) SATA3 (J46).....	19
SATA4 (J47) SATA5 (J31).....	19
USB2.0 (UBJ2)	20
USB2.0 (UBJ3)	20
DIO (SOJ3)	21
Front Panel (J18).....	21
RS232_422_485_COM1 (TSJ25)	22
RS232_COM3 (TSJ27).....	22
RS232_COM4 (TSJ28).....	23
RS232_422_485_COM2 (TSJ53)	23
eSPI (J1).....	24
USB3.2 (UBJ44).....	25
USB3.2 (UBJ45).....	26
EXT-DDIB (DPJ1).....	27
EXT-DDIC (DPJ2).....	28
LPT Port (SOJ4).....	29
Expansion Slots.....	30
Installing the M.2 Module	30
Chapter 3 - BIOS Settings.....	32
Overview	32
Main.....	33
Advanced	33
CPU Configuration.....	34
Power & Performance.....	34
Power & Performance ▶ CPU- Power Management Control	35
Power & Performance ▶ GT- Power Management Control	35
PCH-FW Configuration	36

Trusted Computing.....	36
IT8786 Super IO Configuration.....	37
IT8786 Super IO Configuration ▶ Serial Port 1, 2 Configuration	37
IT8786 Super IO Configuration ▶ Serial Port 3, 4 Configuration	38
IT8786 Super IO Configuration ▶ Parallel Port Configuration	38
IT8786 Hardware Monitor.....	39
IT8786 HW Monitor ▶ Smart FAN Function	39
IT8786 HW Monitor ▶ Smart FAN Function ▶ CPU_FAN Setting.....	40
IT8786 HW Monitor ▶ Smart FAN Function ▶ SYS_FAN1 Setting.....	40
Serial Port Console Redirection	41
Serial Port Console Redirection ▶ Console Redirection Settings.....	41
ACPI Settings	42
Network Stack Configuration.....	43
DFI WDT Configuration.....	44
USB Power Control	44
Tls Auth Configuration	45
Chipset	45
System Agent (SA) Configuration	46
System Agent (SA) Configuration ▶ Graphics Configuration	46
System Agent (SA) Configuration ▶ VMD setup menu	47
System Agent (SA) Configuration ▶ PCI Express Configuration	47
PCH-IO Configuration	48
PCH-IO Configuration ▶ PCI Express Configuration	48
PCH-IO Configuration ▶ SATA Configuration	49
PCH-IO Configuration ▶ HD Audio Configuration	49
Security	50
Secure Boot.....	50
Boot	51
Save & Exit	51
Updating the BIOS.....	52
Notice: BIOS SPI ROM.....	52

About this Manual

This manual can be downloaded from the website.

The manual is subject to change and update without notice, and may be based on editions that do not resemble your actual products. Please visit our website or contact our sales representatives for the latest editions.

Warranty

1. Warranty does not cover damages or failures that occur from misuse of the product, inability to use the product, unauthorized replacement or alteration of components and product specifications.
2. The warranty is void if the product has been subjected to physical abuse, improper installation, modification, accidents or unauthorized repair of the product.
3. Unless otherwise instructed in this user's manual, the user may not, under any circumstances, attempt to perform service, adjustments or repairs on the product, whether in or out of warranty. It must be returned to the purchase point, factory or authorized service agency for all such work.
4. We will not be liable for any indirect, special, incidental or consequential damages to the product that has been modified or altered.

Static Electricity Precautions

It is quite easy to inadvertently damage your PC, system board, components or devices even before installing them in your system unit. Static electrical discharge can damage computer components without causing any signs of physical damage. You must take extra care in handling them to ensure against electrostatic build-up.

1. To prevent electrostatic build-up, leave the system board in its anti-static bag until you are ready to install it.
2. Wear an antistatic wrist strap.
3. Do all preparation work on a static-free surface.
4. Hold the device only by its edges. Be careful not to touch any of the components, contacts or connections.
5. Avoid touching the pins or contacts on all modules and connectors. Hold modules or connectors by their ends.



Important:

Electrostatic discharge (ESD) can damage your processor, disk drive and other components. Perform the upgrade instruction procedures described at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

Safety Measures

- To avoid damage to the system, use the correct AC input voltage range.
- To reduce the risk of electric shock, unplug the power cord before removing the system chassis cover for installation or servicing. After installation or servicing, cover the system chassis before plugging the power cord.

About the Package

The package contains the following items. If any of these items are missing or damaged, please contact your dealer or sales representative for assistance.

- 1 RPSPIC-R680E/H610E Board
- 1 Cooler/Heat sink - A71-101161-000G
- 1 SATA Cable, L=300mm A81-002101-016G
- 1 USB2.0 Cable (with bracket), L=350mm A81-001066-016G

The board and accessories in the package may not come similar to the information listed above. This may differ in accordance with the sales region or models in which it was sold. For more information about the standard package in your region, please contact your dealer or sales representative.

Before Using the System Board

When installing the system board in a new system, you will need at least the following internal components.

- Memory module
- Storage device such as a hard disk drive.
- Power supply

External system peripherals may also be required for navigation and display, including at least a keyboard, a mouse and a video display monitor.

Chapter 1 - Introduction

► Specifications


Specifications		RPSPIC-R680E	RPSPIC-H610E
SYSTEM	Processor	<p>Intel® Bartlett Lake-S Hybrid LGA 1700 Socket Processors</p> <p>Intel® Core™ 7 251E (24 Cores, 36M Cache, up to 5.6 GHz); 65W Intel® Core™ 7 251TE (24 Cores, 36M Cache, up to 5.4 GHz); 45W Intel® Core™ 5 221E (14 Cores, 24M Cache, up to 5.2 GHz); 65W Intel® Core™ 5 221TE (14 Cores, 24M Cache, up to 5.0 GHz); 45W Intel® Core™ 5 211E (10 Cores, 20M Cache, up to 4.9 GHz); 65W Intel® Core™ 5 211TE (10 Cores, 20M Cache, up to 4.8 GHz); 45W Intel® Core™ 3 201E (4 Cores, 12M Cache, up to 4.8 GHz); 60W Intel® Core™ 3 201TE (4 Cores, 12M Cache, up to 4.6 GHz); 45W Intel® 300 (2 Cores, 6M Cache, up to 3.9 GHz); 45W Intel® 300T (2 Cores, 6M Cache, up to 3.4 GHz); 35W</p> <p>14th Generation Intel® LGA 1700 Socket Processors, TDP support up to 65W</p> <p>Intel® Core™ i9-14900 (24 Cores, 36M Cache, up to 5.8 GHz); 65W Intel® Core™ i9-14900T (24 Cores, 36M Cache, up to 5.5 GHz); 35W Intel® Core™ i7-14700 (20 Cores, 33M Cache, up to 5.4 GHz); 65W Intel® Core™ i7-14700T (20 Cores, 33M Cache, up to 5.2 GHz); 35W Intel® Core™ i5-14500 (14 Cores, 24M Cache, up to 5.0 GHz); 65W Intel® Core™ i5-14500T (14 Cores, 24M Cache, up to 4.8 GHz); 35W Intel® Core™ i5-14400 (10 Cores, 20M Cache, up to 4.7 GHz); 65W Intel® Core™ i5-14400T (10 Cores, 20M Cache, up to 4.5 GHz); 35W Intel® Core™ i3-14100 (4 Cores, 12M Cache, up to 4.7 GHz); 60W Intel® Core™ i3-14100T (4 Cores, 12M Cache, up to 4.4 GHz); 35W Intel® 300 (2 Cores, 6M Cache, 3.9 GHz); 46W Intel® 300T (2 Cores, 6M Cache, 3.4 GHz); 35W</p>	

Specifications		RPSPIC-R680E	RPSPIC-H610E
SYSTEM	Processor	<p>13th Generation Intel® LGA 1700 Socket Processors, TDP support up to 65W</p> <p>Intel® Core™ I9-13900E (24 Cores, 36M Cache, up to 5.2 GHz); 65W Intel® Core™ I9-13900TE (24 Cores, 36M Cache, up to 5.0 GHz); 35W Intel® Core™ I9-13900 (24 Cores, 36M Cache, up to 5.6 GHz); 65W Intel® Core™ I7-13700E (16 Cores, 30M Cache, up to 5.1 GHz); 65W Intel® Core™ I7-13700TE (16 Cores, 30M Cache, up to 4.8 GHz); 35W Intel® Core™ I7-13700 (16 Cores, 30M Cache, up to 5.2 GHz); 65W Intel® Core™ I7-13700T (16 Cores, 30M Cache, up to 4.9 GHz); 35W Intel® Core™ I5-13500E (14 Cores, 24M Cache, up to 4.6 GHz); 65W Intel® Core™ I5-13500TE (14 Cores, 24M Cache, up to 4.5 GHz); 35W Intel® Core™ I5-13500 (14 Cores, 24M Cache, up to 4.8 GHz); 65W Intel® Core™ I5-13500T (14 Cores, 24M Cache, up to 4.6 GHz); 35W Intel® Core™ I5-13400E (10 Cores, 20M Cache, up to 4.6 GHz); 65W Intel® Core™ I5-13400 (10 Cores, 20M Cache, up to 4.6 GHz); 65W Intel® Core™ I3-13100E (4 Cores, 12M Cache, up to 4.4 GHz); 65W Intel® Core™ I3-13100TE (4 Cores, 12M Cache, up to 4.1 GHz); 35W Intel® Core™ I3-13100 (4 Cores, 12M Cache, up to 4.5 GHz); 65W Intel® Core™ I3-13100T (4 Cores, 12M Cache, up to 4.2 GHz); 35W Intel® G7400E (2 Cores, 6M Cache, 3.6 GHz); 46W Intel® G7400TE (2 Cores, 6M Cache, 3.0 GHz); 35W Intel® G6900E (2 Cores, 4M Cache, 3.0 GHz); 46W Intel® G6900TE (2 Cores, 4M Cache, 2.4 GHz); 35W</p> <p>12th Generation Intel® LGA 1700 Socket Processors, TDP support up to 65W</p> <p>Intel® Core™ i9-12900E (16 Cores, 30M Cache, up to 5.0 GHz); 65W Intel® Core™ i9-12900TE (16 Cores, 30M Cache, up to 4.8 GHz); 35W Intel® Core™ i9-12900 (16 Cores, 30M Cache, up to 5.0 GHz); 65W Intel® Core™ i7-12700E (12 Cores, 25M Cache, up to 4.8 GHz); 65W Intel® Core™ i7-12700TE (12 Cores, 25M Cache, up to 4.7 GHz); 35W Intel® Core™ i7-12700 (12 Cores, 25M Cache, up to 4.8 GHz); 65W Intel® Core™ i5-12500E (6 Cores, 18M Cache, up to 4.5 GHz); 65W Intel® Core™ i5-12500TE (6 Cores, 18M Cache, up to 4.3 GHz); 35W Intel® Core™ i5-12500 (6 Cores, 18M Cache, up to 4.6 GHz); 65W Intel® Core™ i5-12400 (6 Cores, 18M Cache, up to 4.4 GHz); 65W Intel® Core™ i3-12100E (4 Cores, 12M Cache, up to 4.2 GHz); 60W Intel® Core™ i3-12100TE (4 Cores, 12M Cache, up to 4.0 GHz); 35W Intel® Core™ i3-12100 (4 Cores, 12M Cache, up to 4.3 GHz); 60W Intel® G7400E (2 Cores, 6M Cache, 3.6 GHz); 46W Intel® G7400TE (2 Cores, 6M Cache, 3.0 GHz); 35W Intel® G6900E (2 Cores, 4M Cache, 3.0 GHz); 46W Intel® G6900TE (2 Cores, 4M Cache, 2.4 GHz); 35W</p>	
	Chipset	Intel® R680E Chipset	Intel® H610E Chipset
	Memory	4 288-pin UDIMM up to 192GB (ECC/Non-ECC) Dual Channel DDR5 5600 MHz	2 288-pin UDIMM up to 96GB (Non-ECC) Dual Channel DDR5 5600 MHz
	BIOS	AMI SPI 256Mbit	


Specifications		RPSPIC-R680E	RPSPIC-H610E
GRAPHICS	Controller	Intel® UHD Graphics 700 series	
	Feature	3D graphics HW acceleration:DX12, Open GL 4.6, Vulkan 1.2 HW Video Decode: 8K60 12b 4:2:0 HEVC/VP9/SCC 8K30 10b 4:2:0 AV1 5K60 10b 4:4:4 HEVC/VP9/SCC 4K60 8b 4:2:0 AVC HW Video Encode: 8K30 or 5K60 8b/10b 4:2:0 HEVC/VP9/SCC 4K60 10b 4:4:4 HEVC/VP9/SCC 4K60 8b 4:2:0 AVC	
	Display	1x VGA 2x DFI display extension port (DP/HDMI/VGA available) VGA: resolution up to 1920x1200 @ 60Hz HDMI: resolution up to 1920x1080 @ 60Hz DP: resolution up to 1920x1200 @ 60Hz	
	Triple Displays	VGA DFI display extension port(DP/HDMI/VGA available)	
AUDIO	Audio Codec	Realtek ALC888S	
REAR I/O	Ethernet	2 x 2.5GbE (RJ-45)	
	USB	2 x USB 3.2 Gen2 1 x USB 2.0	
	Display	1 x VGA	
INTERNAL I/O	Serial	2 x RS232/422/485 w/o Power (2.0 pitch BOX) by BIOS select 2 x RS232 w/o Power, 2.0 pitch BOX	
	USB	4 x USB 3.2 Gen 1 BOX, 4 x USB 2.0 (2x5 2.0mm pitch header)	4 x USB 2.0 (2x5 2.0mm pitch header)
	Display	2 x DFI display extension port (DP/HDMI/VGA available)	
	Audio	1 x Front Audio Header (1 x Line-out, 1 x Mic-in)	
	SATA	6 x SATA 3.0 (up to 6Gb/s) RAID 0/1/5/10	4 x SATA 3.0 (up to 6Gb/s) RAID 0/1/5/10
	DIO	1 x 4 IN 4 OUT 8 BIT DIO	
	SMBus	1 x SMBus & I2C	
	LPT Port	1 x Parallel Port	

Specifications		RPSPIC-R680E	RPSPIC-H610E
EXPANSION	Interface	1 x M.2 2230 E Key (USB 2.0x1/CNVix1/PCIe3.0 x1) 1 x M.2 2280 M Key (PCIe 4.0x4) 1 x M.2 3042 A Key for M2A-OOB	1 x M.2 2230 E Key (USB 2.0x1/CNVix1/PCIe3.0 x1) 1 x M.2 3042 A Key for M2A-OOB
ETHERNET	Controller	1 x Intel® I226-LM (Core i9/i7/i5 support iAMT) 1 x Intel® I226-V (colay i210AT)	1 x Intel® I226-V 1 x Intel® I226-V (colay i210AT)
WATCHDOG TIMER	Output & Interval	System Reset, Programmable via Software from 1 to 255 Seconds	
SECURITY	TPM	Nuvoton TPM 2.0	
POWER	Type	ATX	
	Connector	8-pin CPU ATX 12V power Expansion Goldfinger	
	Consumption	Idle: Intel i9-14900E (65W): ATX PSU total 80.194W Max: Intel i9-14900E (65W): ATX PSU total 135.96W	TBD
	RTC Battery	CR2032 Coin Cell	
OS SUPPORT	Microsoft	Windows 10 IoT Enterprise 64-bit Windows 11 LTSC	
	Linux	Linux	
ENVIRONMENT	Temperature	Operating: -5 to 65°C Storage: -40 to 85°C	
	Humidity	Operating: 5 to 95% RH Storage: 5 to 95% RH	
	MTBF	RPSPIC-R680DB 379,337 hrs @ 25°C; 164,133 hrs @ 45°C; 73,750 hrs @ 60°C; Calculation model: Telcordia Issue 4 Environment: GB, GC – Ground Benign, Controlled	TBD
MECHANISM	Dimensions	Full Size PICMG 1.3	
	Height	PCB: 1.6mm TOP Side : 19.85mm TOP Side with cooler: 71.20mm BOT side: 2.35mm BOT side with cooler: 5.90mm	
STANDARDS AND CERTIFICATIONS	Certifications	CE, FCC Class B, RoHS	

► Block Diagram

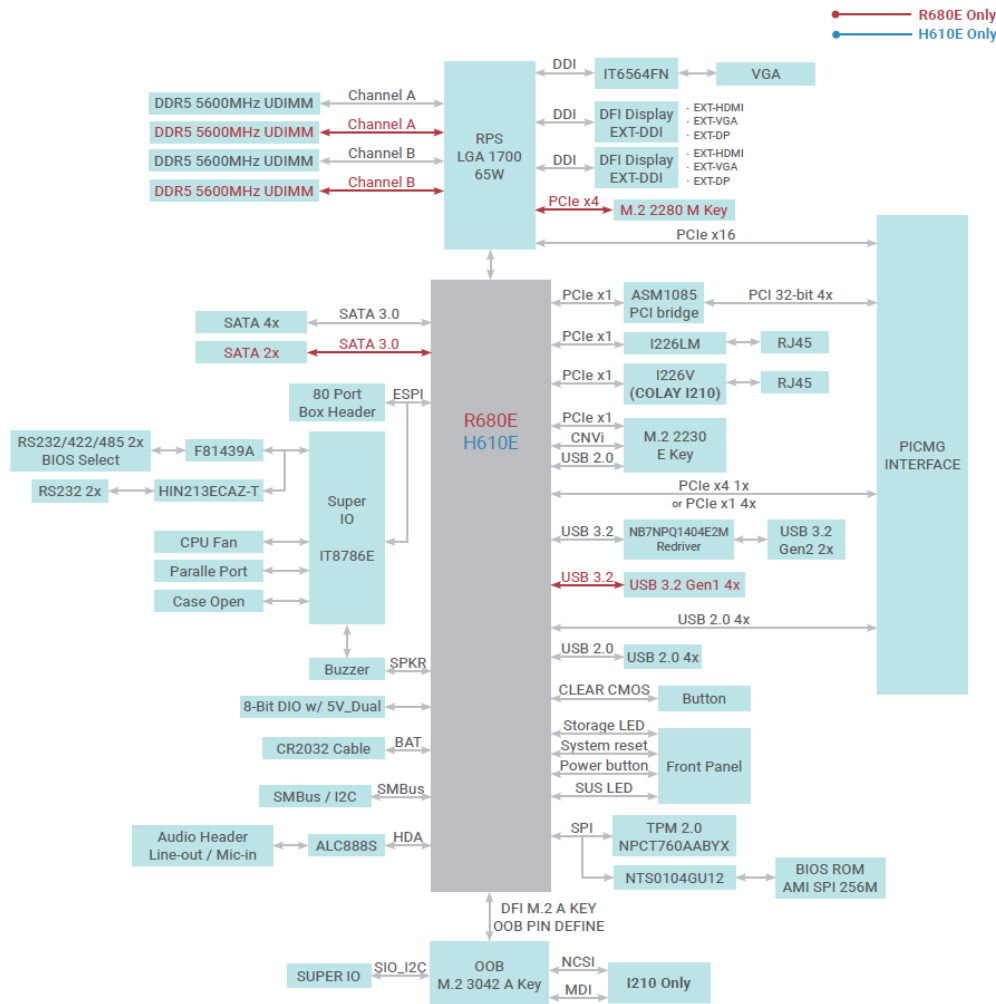


► Dimension

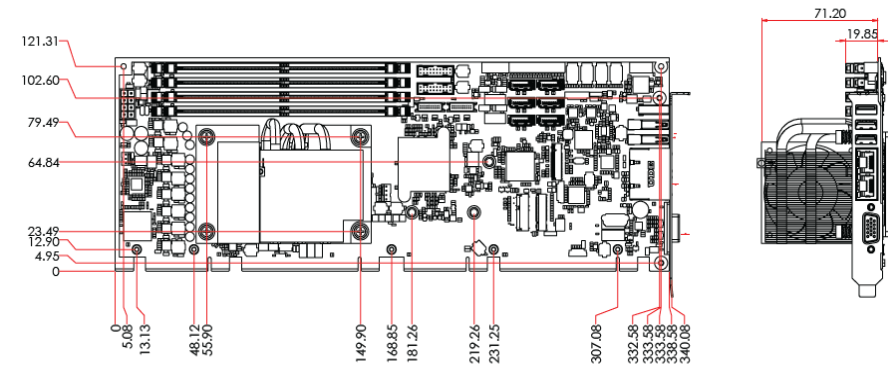


Chapter 2 - Hardware Installation

► Board Layout

For Intel® R680E Chipset

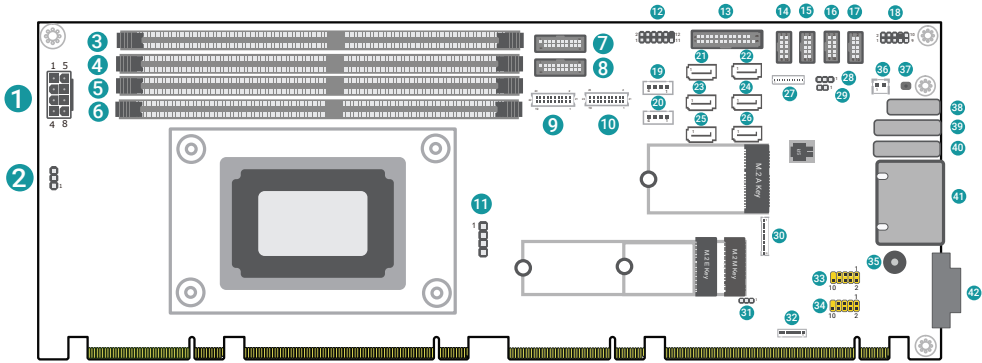

For Intel® H610E Chipset

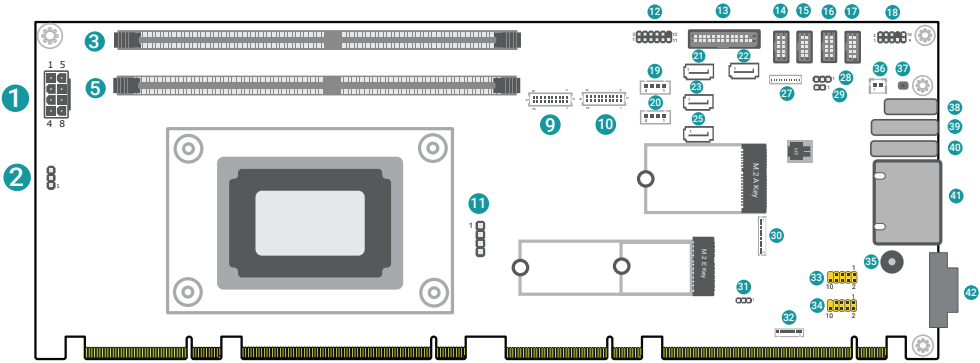

- 1 ATX_8 PIN
- 2 System Fan
- 3 DIMM4
- 4 DIMM3
- 5 DIMM2
- 6 DIMM1
- 7 USB3.2
- 8 USB3.2
- 9 EXT-DDIC
- 10 EXT-DDIB
- 11 CPU Fan
- 12 Front Panel
- 13 LPT Port
- 14 RS232_422_485_COM1
- 15 RS232_422_485_COM2
- 16 RS232_COM3
- 17 RS232_COM4
- 18 Audio
- 19 EXT-DDI Power
- 20 EXT-DDI Power
- 21 SATA2 (R6)
- 22 SATA5 (R4)
- 23 SATA1 (R7)
- 24 SATA4 (R2)
- 25 SATA0 (R5)
- 26 SATA3 (R3)
- 27 eSPI
- 28 ATX/AT Mode Select
- 29 Case Open
- 30 DIO
- 31 M.2_M-KEY Power Select
- 32 SMBUS/I2C
- 33 USB2.0
- 34 USB2.0
- 35 Buzzer
- 36 RTC Battery
- 37 Clear CMOS
- 38 USB2.0
- 39 USB3.2 Gen2
- 40 USB3.2 Gen2
- 41 2.5G LAN
- 42 VGA

► Installing the heat sink


Installing the Heat Sink

The CPU must be kept cool by using a heat sink, otherwise the CPU will overheat damaging both the CPU and system board.

1. Before you install the fan / heat sink, you must apply a thermal paste onto the top of the CPU. The thermal paste is usually supplied when you purchase the fan / heat sink assembly. Do not spread the paste all over the surface. When you later place the heat sink on top of the CPU, the compound will disperse evenly.


Some heat sinks come with a patch of preapplied thermal paste. Do not apply thermal paste if the fan / heat sink already has a patch of thermal paste on its underside. Peel the strip that covers the paste before you place the fan / heat sink on top of the CPU.

2. Place the heat sink on top of the CPU. The 4 spring screws around the heat sink, which are used to secure the heat sink onto the system board, must match the 4 mounting holes around the board.
3. Screw tight two of the spring screws at opposite corners into the mounting holes. And then proceed with the other two spring screws.

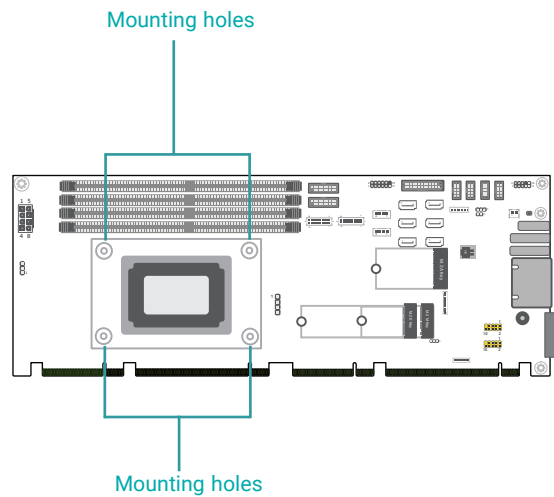

► Jumper Settings

ATX/AT Mode Select (SOJP26)

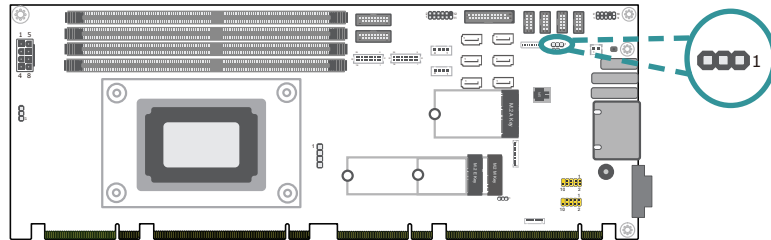


■ 1-2 On: ATX Mode (Default)



■ 2-3 On: AT Mode


► Pin Assignment

RTC Battery (J4)

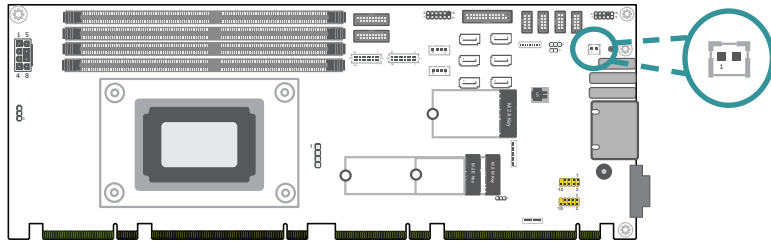


Pin	Assignment
1	Battery
2	GND

Case Open (SOJ1)

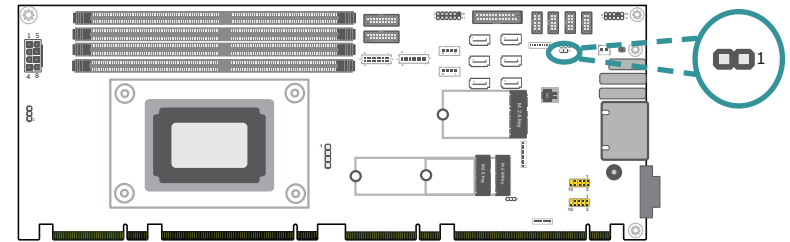


Pin	Assignment
1	CASEOPEN#
2	GND

Clear CMOS (SW1)

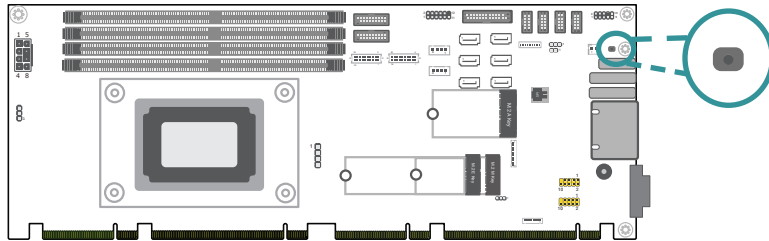


Pin	Assignment
1	GND
2	RTC RESET

ATX/AT Mode Select (SOJP26)

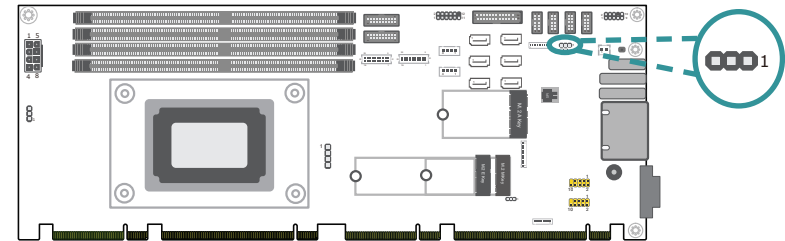


Pin	Assignment
1	3V3SB
2	SOUT5
3	GND

M.2_M-KEY Power Select (M2JP31)

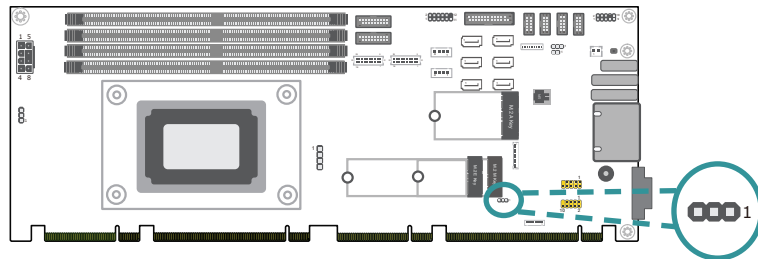


Pin	Assignment
1	3V3
2	3V3_MINI_1
3	3V3DU

System Fan (J7)

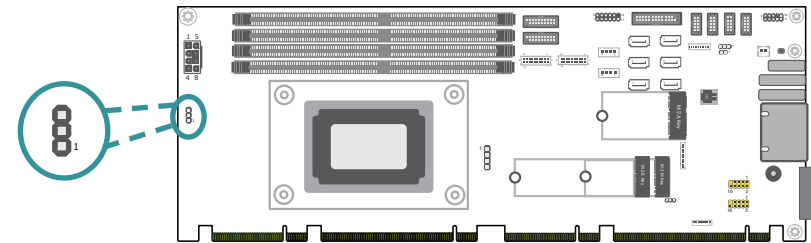


Pin	Assignment
1	GND
2	SYSFANOUT1
3	SYSFANIN1

EXT-DDI Power (DPCN1)
EXT-DDI Power (DPCN2)

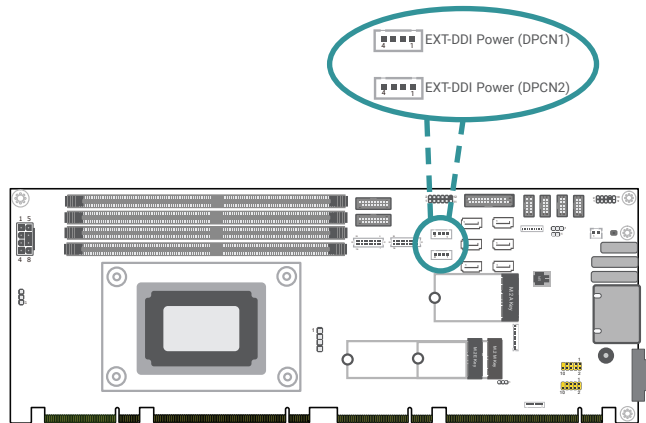


Pin	Assignment
1	+12V
2	GND
3	GND
4	5V

CPU Fan (J8)

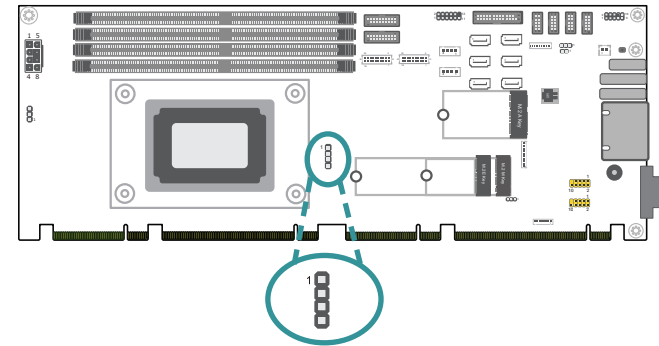


Pin	Assignment
1	GND
2	+12V
3	CPUFANIN
4	CPUFANOUT

SMBUS/I2C (J37)

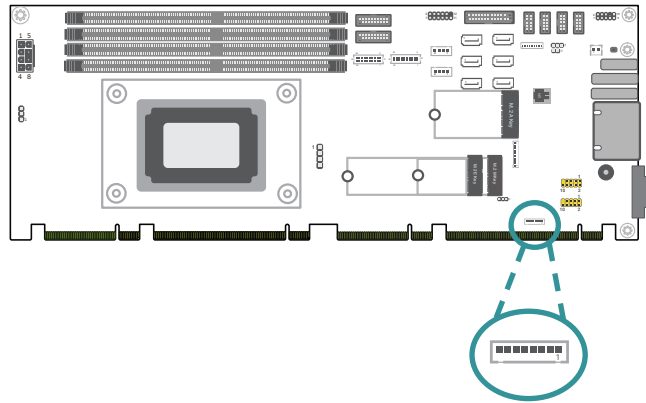


Pin	Assignment
1	3V3DU
2	GND
3	SMB_CLK_RESUME
4	SMB_DATA_RESUME
5	SMBALERT_PCH-
6	I2C2_SCL
7	I2C2_SDA
8	I2C2_INT

ATX_8 PIN (CN2)

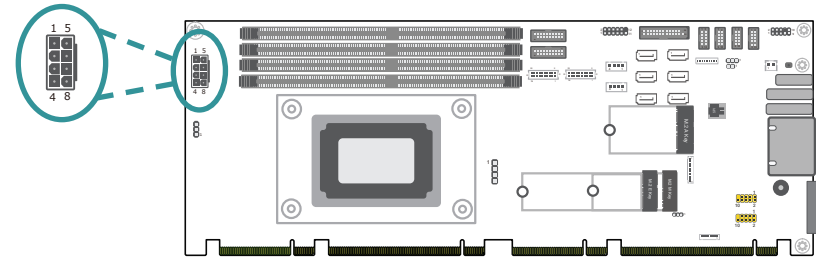


Pin	Assignment
1	GND
2	GND
3	GND
4	GND
5	AUX12V
6	AUX12V
7	AUX12V
8	AUX12V

Audio (AUJ2)

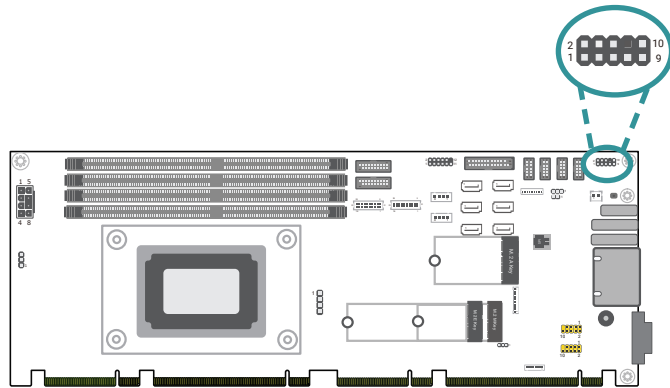


Pin	Assignment
1	MIC2-L
2	AUD_GND
3	MIC2-R
4	NC
5	LINE2-R
6	MIC2-JD
7	JD3_P7
8	NC
9	LINE2-L
10	LINE2-JD


- SATA0 (J32) SATA1 (J23)
- SATA2 (J17) SATA3 (J46)
- SATA4 (J47) SATA5 (J31)

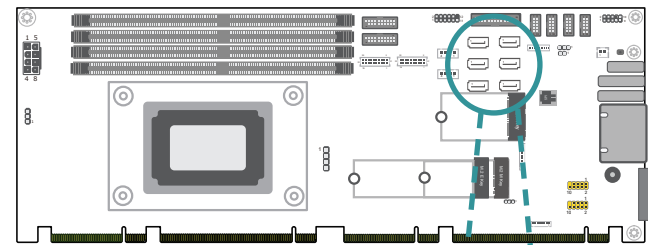

Pin	Assignment
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

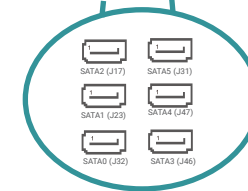


USB2.0 (UBJ2)

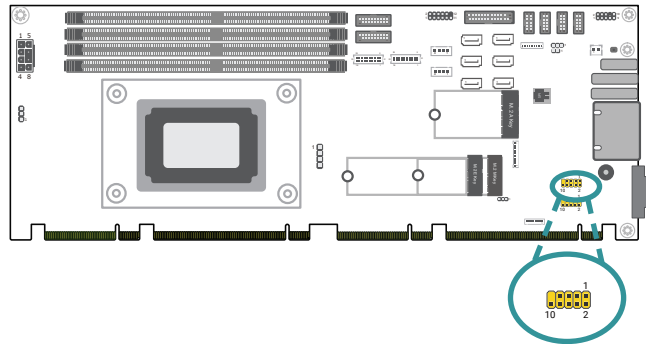


Pin	Assignment
1	SBV5
2	SBV5
3	USB2_1_HUB_C_N
4	USB2_2_HUB_C_N
5	USB2_1_HUB_C_P
6	USB2_2_HUB_C_P
7	GND
8	GND
9	NC
10	NC

USB2.0 (UBJ3)

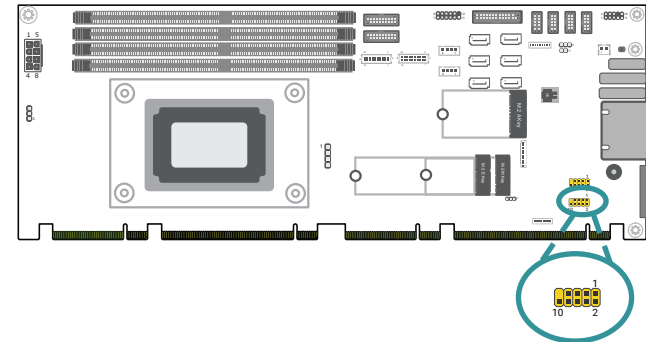


Pin	Assignment
1	SBV5
2	SBV5
3	USB2_3_HUB_C_N
4	USB2_4_HUB_C_N
5	USB2_3_HUB_C_P
6	USB2_4_HUB_C_P
7	GND
8	GND
9	NC
10	NC

DIO (SOJ3)

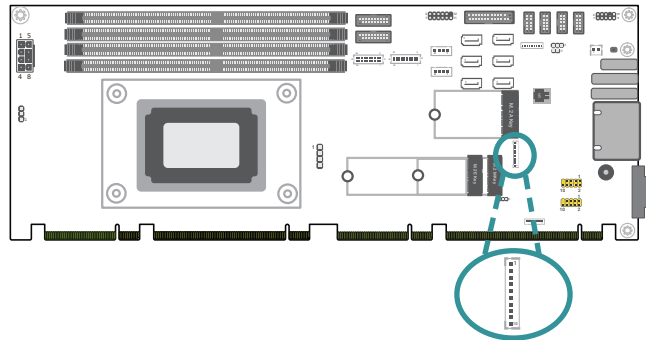


Pin	Assignment
1	DI_3
2	DI_2
3	DI_1
4	DI_0
5	DO_3
6	DO_2
7	DO_1
8	DO_0
9	5VDU
10	GND

Front Panel (J18)

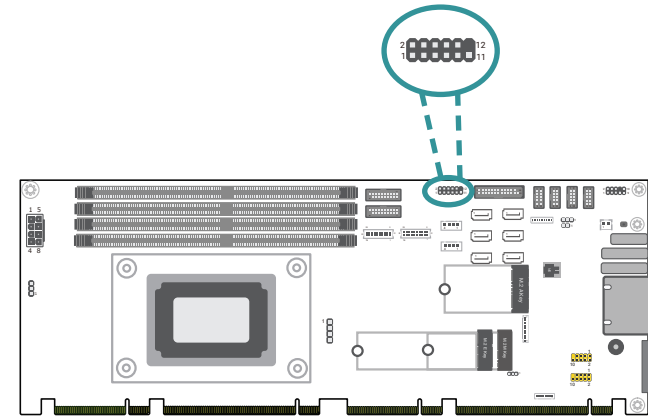


Pin	Assignment
1	NC
2	V_SUS_LED
3	3V3
4	V_SUS_LED
5	HD_LED
6	SUS_LED
7	GND
8	GND
9	SYSTEM_RESET
10	Power Button
11	NC
12	NC

RS232_422_485_COM1 (TSJ25)

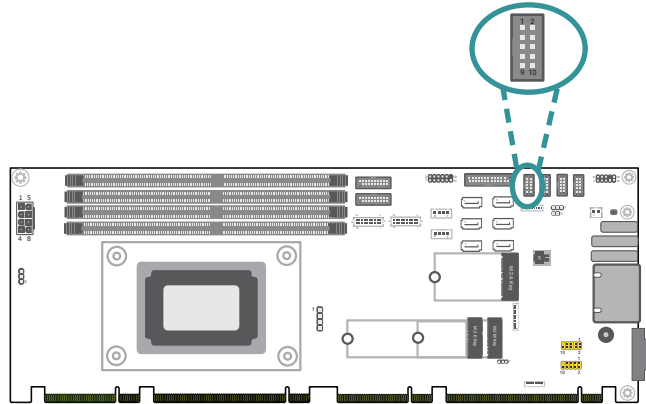


Pin	Assignment
1	MDCD1#
2	MSIN1
3	MSOUT1
4	MDTR1#
5	GND
6	MDSR1#
7	MRTS1#
8	MCTS1#
9	MRI1#
10	NC

RS232_COM3 (TSJ27)

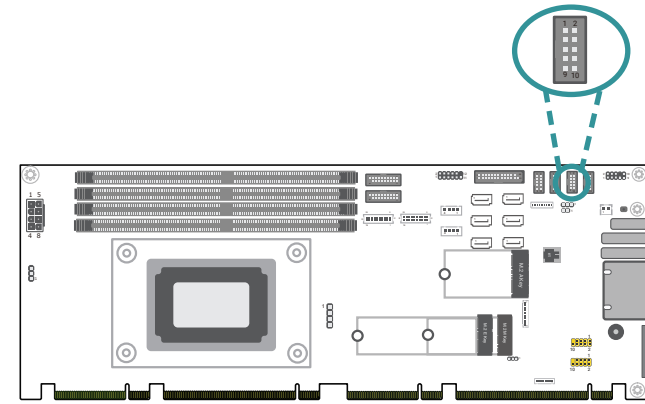


Pin	Assignment
1	MDCD3-
2	MSIN3-
3	MSO3-
4	MDTR3-
5	GND
6	MDSR3-
7	MRTS3-
8	MCTS3-
9	MRI3-
10	NC

RS232_COM4 (TSJ28)

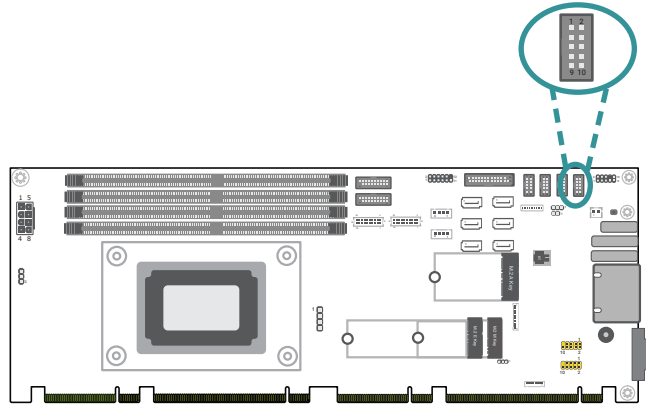


Pin	Assignment
1	MDCD4-
2	MSIN4-
3	MSO4-
4	MDTR4-
5	GND
6	MDSR4-
7	MRTS4-
8	MCTS4-
9	MRI4-
10	NC

RS232_422_485_COM2 (TSJ53)

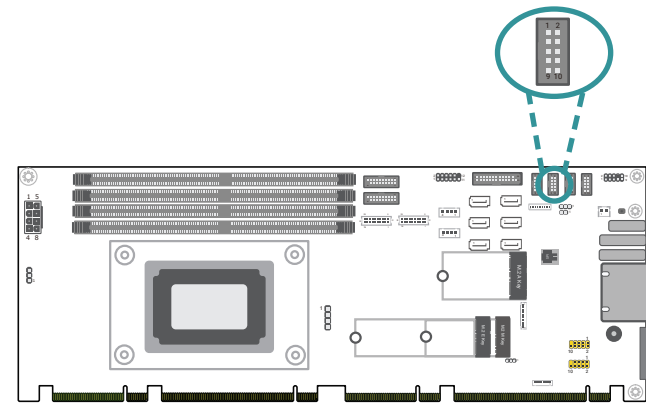


Pin	Assignment
1	MDCD2#
2	MSIN2
3	MSOUT2
4	MDTR2#
5	GND
6	MDSR2#
7	MRTS2#
8	MCTS2#
9	MRI2#
10	NC

eSPI (J1)

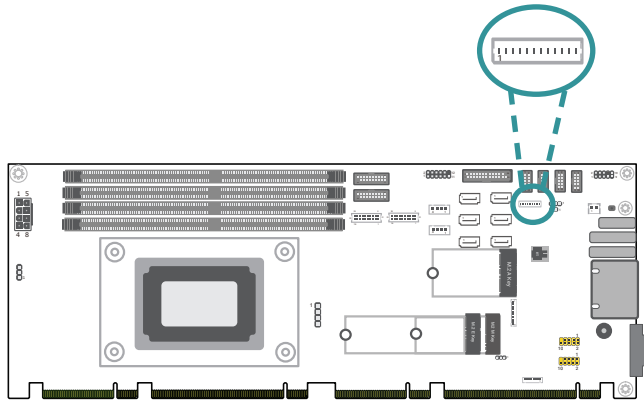


Pin	Assignment
1	3V3DU
2	ESPI_RST
3	ESPI_ALERT1
4	ESPI_IO_0
5	ESPI_IO_1
6	ESPI_IO_2
7	ESPI_IO_3
8	ESPI_CLK
9	ESPI_CS0
10	UART1_RX
11	UART1_TX
12	GND

USB3.2 (UBJ44)

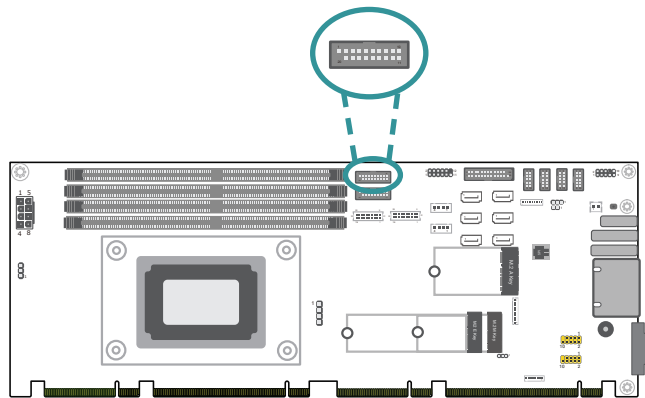


Pin	Assignment
1	SBV2
2	USB3_RX3_DN
3	USB3_RX3_DP
4	GND
5	USB3_TX3_DN
6	USB3_TX3_DP
7	GND
8	USBP_C_10N
9	USBP_C_10P
10	NC
11	USBP_C_11P
12	USBP_C_11N
13	GND
14	USB3_TX4_DP
15	USB3_TX4_DN
16	GND
17	USB3_RX4_DP
18	USB3_RX4_DN
19	SBV2
20	NC

USB3.2 (UBJ45)

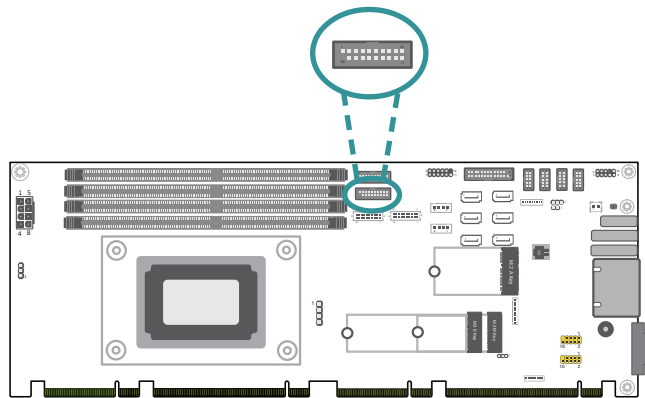


Pin	Assignment
1	SBV3
2	USB3_RX5_DN
3	USB3_RX5_DP
4	GND
5	USB3_TX5_DN
6	USB3_TX5_DP
7	GND
8	USBP_C_12N
9	USBP_C_12P
10	NC
11	USBP_C_13P
12	USBP_C_13N
13	GND
14	USB3_TX6_DP
15	USB3_TX6_DN
16	GND
17	USB3_RX6_DP
18	USB3_RX6_DN
19	SBV3
20	NC

EXT-DDIB (DPJ1)

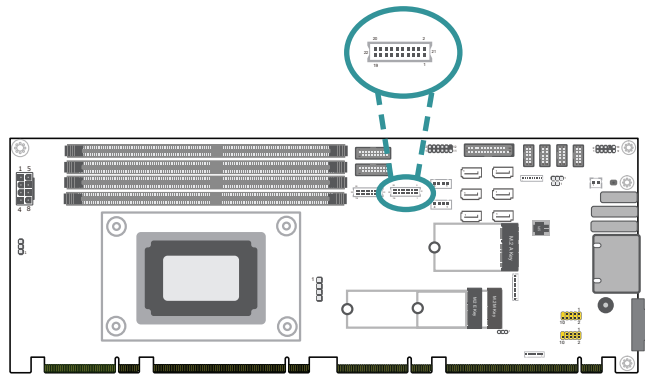


Pin	Assignment
1	DPB_LANE1_N
2	DPB_LANE2_N
3	DPB_LANE1_P
4	DPB_LANE2_P
5	GND
6	GND
7	DPB_LANE0_P
8	DPB_LANE3_N
9	DPB_LANE0_N
10	DPB_LANE3_P
11	GND
12	GND
13	DDIB_AUX_DP
14	DDPB_CTRLCLK_EXT
15	DDIB_AUX_DN
16	DDPB_CTRLDATA_EXT
17	GND
18	PCH_SYSPWROK
19	DDPB_HPD
20	DPB_POWER
21	GND
22	GND

EXT-DDIC (DPJ2)

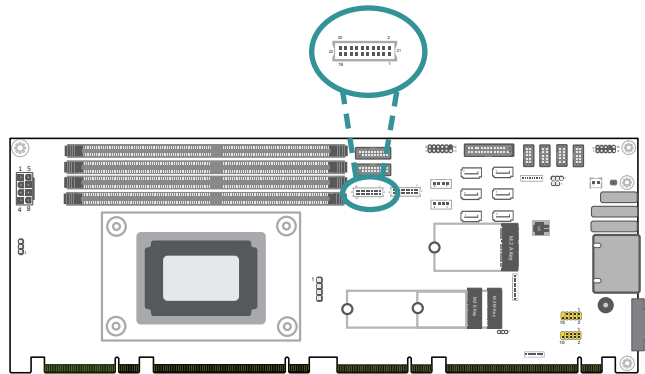

Pin	Assignment
1	DPC_LANE1_N
2	DPC_LANE2_N
3	DPC_LANE1_P
4	DPC_LANE2_P
5	GND
6	GND
7	DPC_LANE0_P
8	DPC_LANE3_N
9	DPC_LANE0_N
10	DPC_LANE3_P
11	GND
12	GND
13	DDIC_AUX_DP
14	DDPC_CTRLCLK_EXT
15	DDIC_AUX_DN
16	DDPC_CTRLDATA_EXT
17	GND
18	PCH_SYSPWROK
19	DDPC_HPD
20	DPC_POWER
21	GND
22	GND

LPT Port (SOJ4)

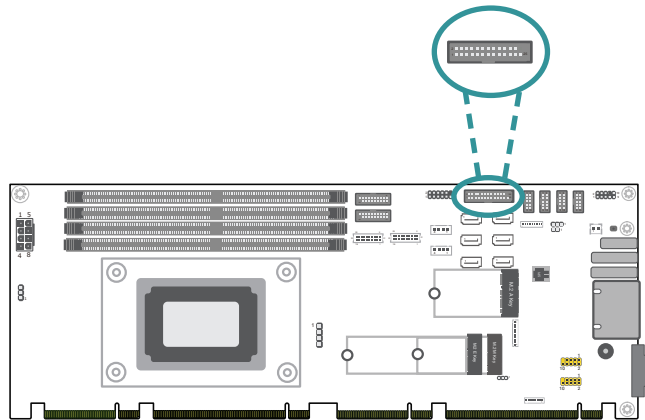


Pin	Assignment
1	STB-
2	AFD-
3	PD_C_0
4	ERP_WAKE-
5	PD_C_1
6	P_INIT-
7	PD_C_2
8	SLIN-
9	PD_C_3
10	GND
11	PD_C_4
12	GND
13	PD_C_5
14	GND
15	PD_C_6
16	GND
17	PD_C_7
18	GND
19	ACK-
20	GND
21	BUSY
22	GND
23	PE
24	GND
25	SLCT
26	NC

► Expansion Slots

Installing the M.2 Module

Before installing the M.2 module into the M.2 socket, please make sure that the following safety cautions are well-attended.


1. Make sure the PC and all other peripheral devices connected to it has been powered down.
2. Disconnect all power cords and cables.
3. Locate the M.2 socket on the system board
4. Make sure the notch on card is aligned to the key on the socket.
5. Make sure the standoff screw is removed from the standoff.

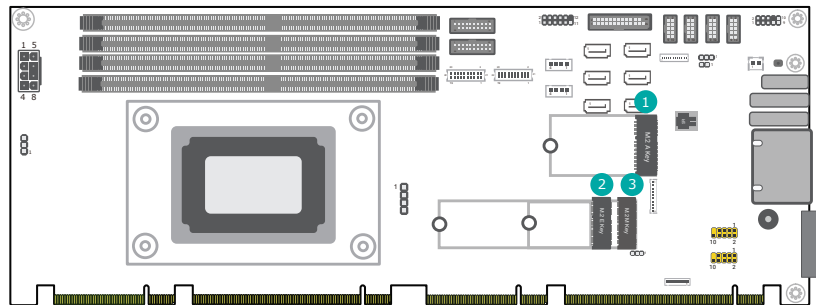


1 M.2 A-Key

2 M.2 E-Key


3 M.2 M-Key

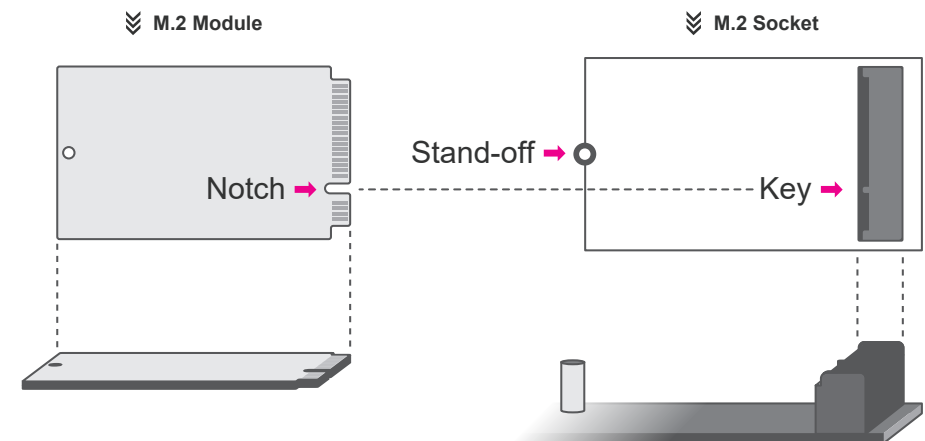


Please follow the steps below to install the card into the socket.

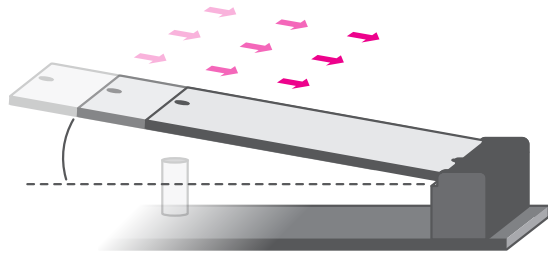

Step 1:
Insert the card into the socket at an angle while making sure the notch and key are perfectly aligned.

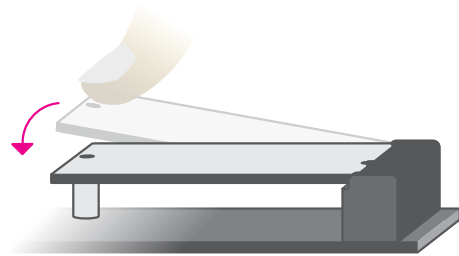

Step 2:
Press the end of the card far from the socket down until against the stand-off.

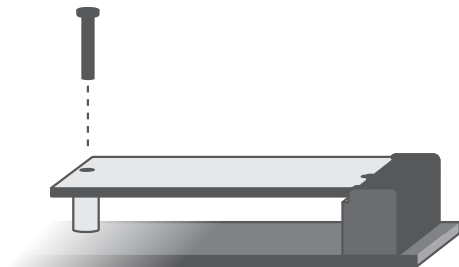

Step 3:
Screw tight the card onto the stand-off with a screw driver and a stand-off screw until the gap between the card and the stand-off closes up. The card should be lying parallel to the board when it's correctly mounted.

Chapter 3 - BIOS Settings

► Overview

The BIOS is a program that takes care of the basic level of communication between the CPU and peripherals. It contains codes for various advanced features found in this system board.

The BIOS allows you to configure the system and save the configuration in a battery-backed CMOS so that the data retains even when the power is off. In general, the information stored in the CMOS RAM of the EEPROM will stay unchanged unless a configuration change has been made such as a hard drive replaced or a device added.

It is possible that the CMOS battery will fail causing CMOS data loss. If this happens, you need to install a new CMOS battery and reconfigure the BIOS settings.



Note:

The BIOS is constantly updated to improve the performance of the system board; therefore the BIOS screens in this chapter may not appear the same as the actual one. These screens are for reference purpose only.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering the BIOS Setup Utility

The BIOS Setup Utility can only be operated from the keyboard and all commands are keyboard commands. The commands are available at the right side of each setup screen.

The BIOS Setup Utility does not require an operating system to run. After you power up the system, the BIOS message appears on the screen and the memory count begins. After the memory test, the message "Press DEL to run setup" will appear on the screen. If the message disappears before you respond, restart the system or press the "Reset" button. You may also restart the system by pressing the <Ctrl> <Alt> and keys simultaneously.

Legends

Keys	Function
Right / Left arrow	Move the highlight left or right to select a menu
Up / Down arrow	Move the highlight up or down between submenus or fields
<Enter>	Enter the highlighted submenu
+ (plus key)/F6	Scroll forward through the values or options of the highlighted field
- (minus key)/F5	Scroll backward through the values or options of the highlighted field
<F1>	Display general help
<F2>	Display previous values
<F9>	Optimized defaults
<F10>	Save and Exit
<Esc>	Return to previous menu

Scroll Bar


When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu

When "►" appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press <Enter>.

► Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

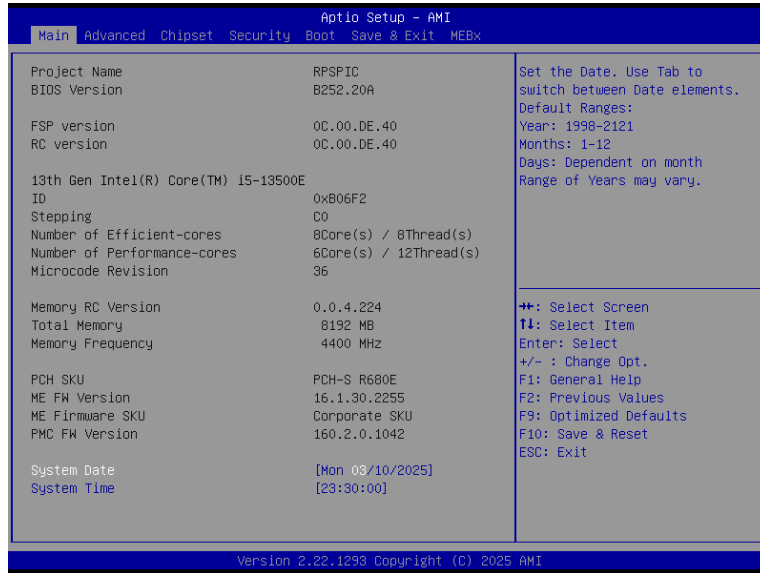

System Date

The date format is <month>, <date>, <year>. Press "Tab" to switch to the next field and press "-" or "+" to modify the value.

System Time


The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

► Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.




Important:
Setting incorrect field values may cause the system to malfunction.

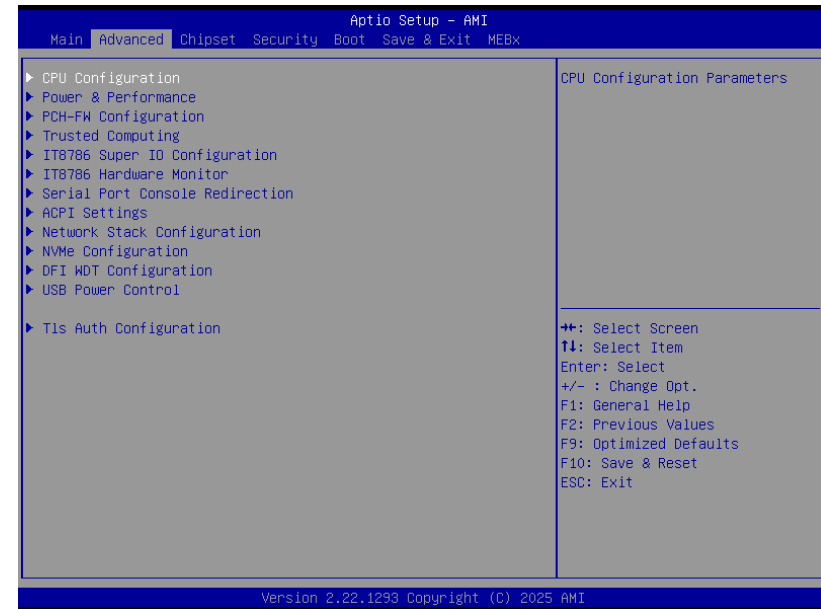

▶ Advanced

CPU Configuration

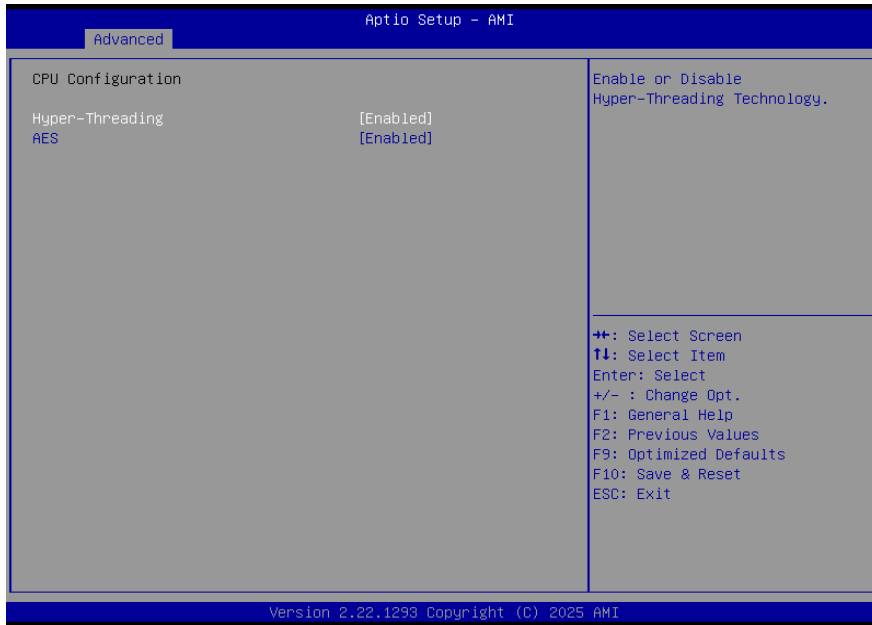

Hyper-threading


Enables this field for Windows XP and Linux which are optimized for Hyper-Threading technology. Select disabled for other OSes not optimized for Hyper-Threading technology. When disabled, only one thread per enabled core is enabled.

AES

Enable / Disable AES (Advanced Encryption Standard).


▶ Advanced

Power & Performance

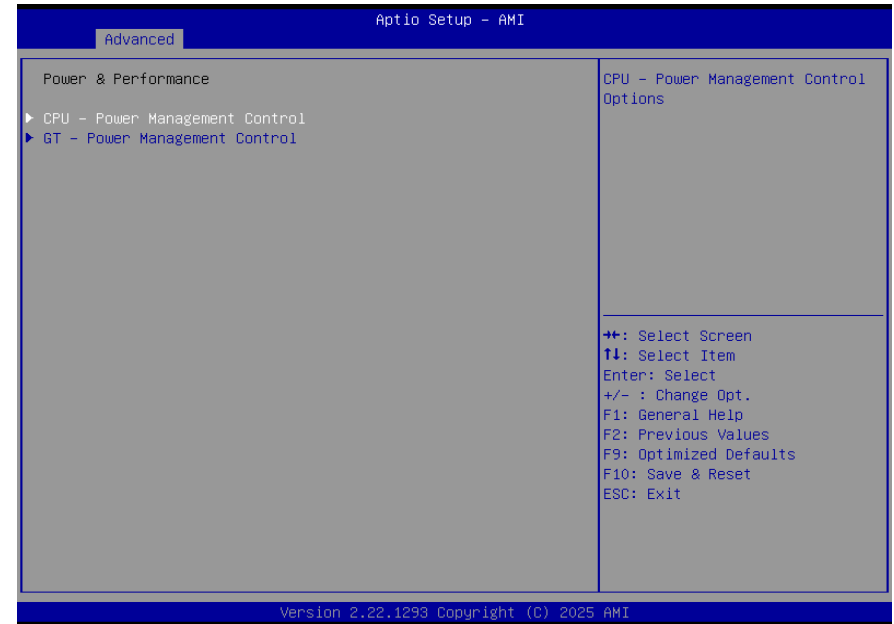

▶ Advanced

Power & Performance ▶ CPU- Power Management Control

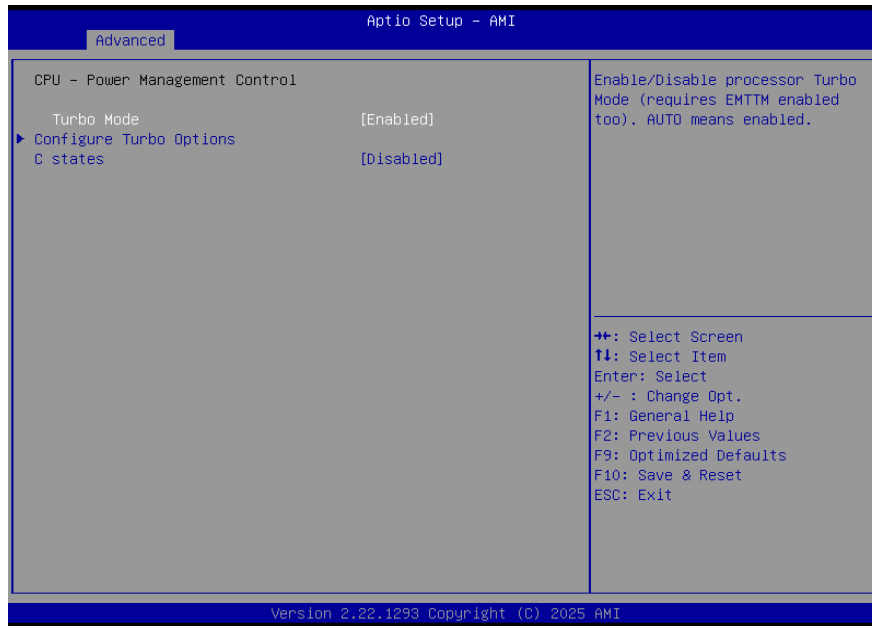

Turbo Mode


Enable/Disable processor Turbo Mode (requires EMTTM enabled too). AUTO means enabled.

C states

Enable or disable CPU Power Management. It allows CPU to enter "C states" when it's idle and nothing is executing.

▶ Advanced

Power & Performance ▶ GT- Power Management Control

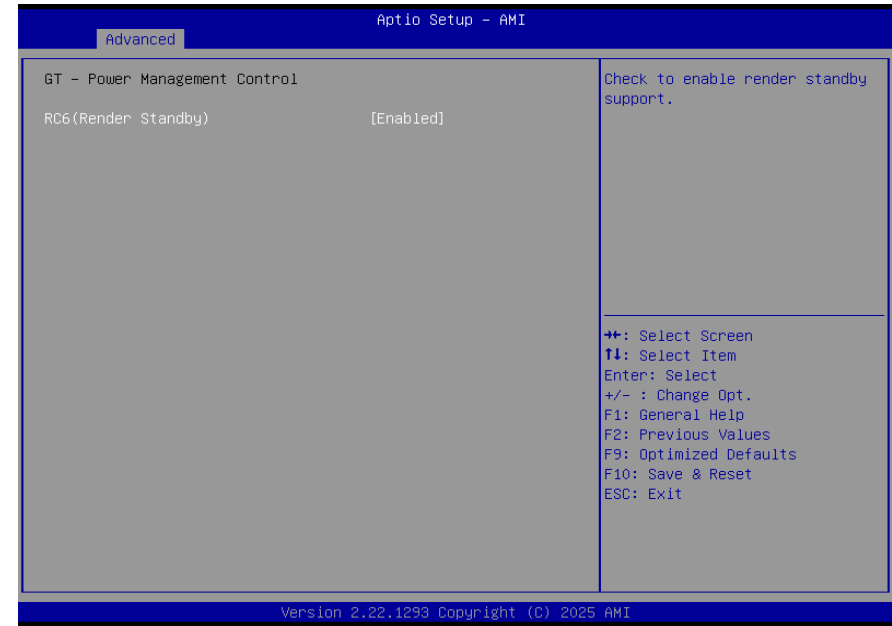


RC6 (Render Standby)

Check to enable render standby support.

▶ Advanced

PCH-FW Configuration

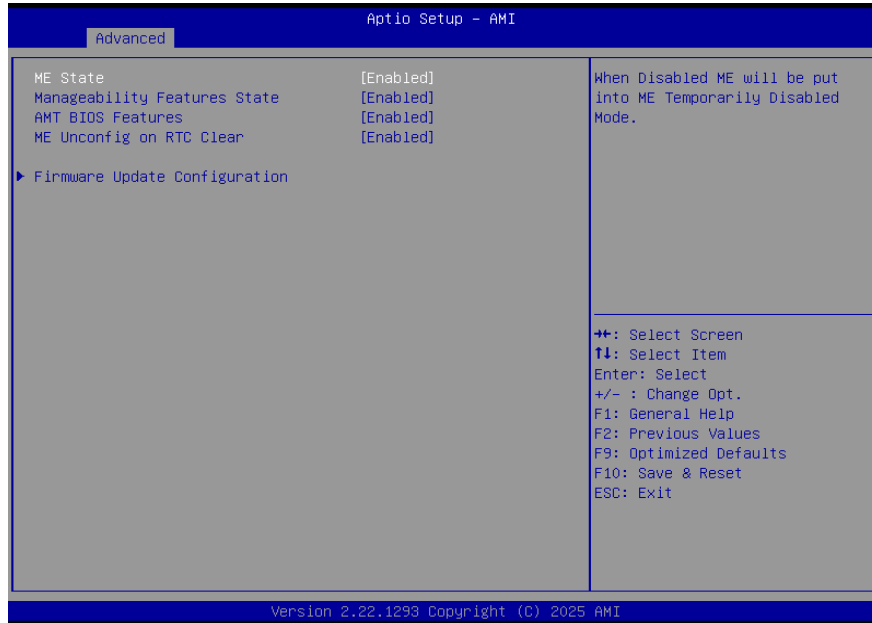

ME State

When this field is set to Disabled, ME will be put into ME Temporarily Disabled Mode.

Manageability Features State

Enable or disable Intel(R) Manageability features. This option disables/enables Manageability Features support in FW. To disable, support platform must be in an unprovisioned state first.

AMT BIOS Features

When disabled, AMT BIOS features are no longer supported and user is no longer able to access MEBx Setup. This option does not disable manageability features in FW.

ME Unconfig on RTC Clear


When disabled, ME will not be unconfigured on RTC Clear.
Firmware Update Configuration

Firmware Update Configuration

Configure Management Engine Technology Parameters.

▶ Advanced

Trusted Computing

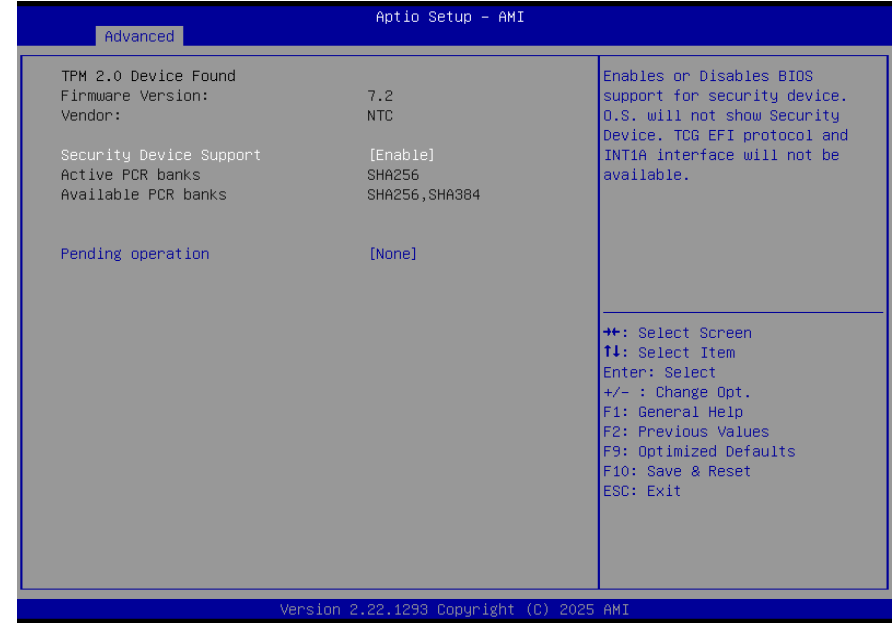

Security Device Support


This field is used to enable or disable BIOS support for the security device such as an TPM 2.0 to achieve hardware-level security via cryptographic keys.

Pending operation

To clear the existing TPM encryption, select "TPM Clear" and restart the system. This field is not available when "Security Device Support" is disabled.


▶ Advanced

IT8786 Super IO Configuration

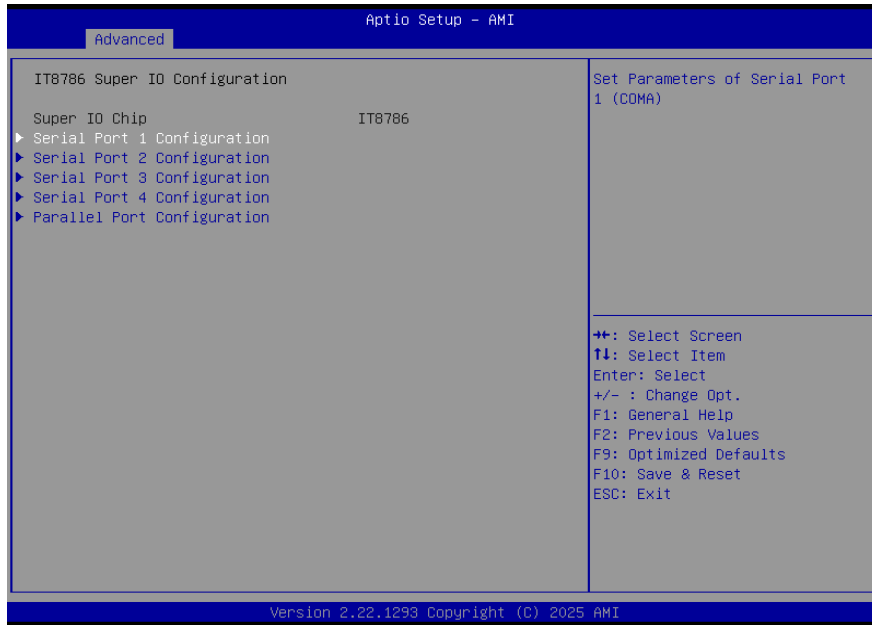

▶ Advanced


IT8786 Super IO Configuration ▶ Serial Port 1, 2 Configuration

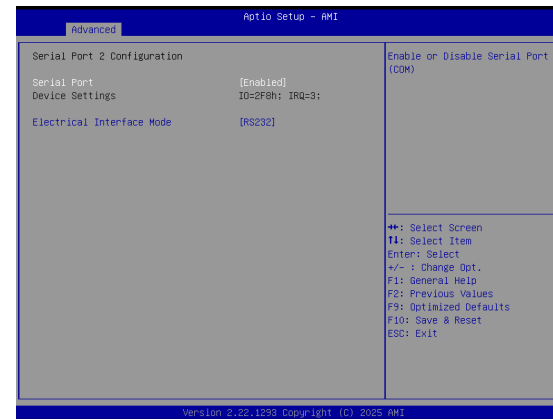

Serial Port
Enable or disable serial port.

▶ Advanced


IT8786 Super IO Configuration ▶ Serial Port 3, 4 Configuration

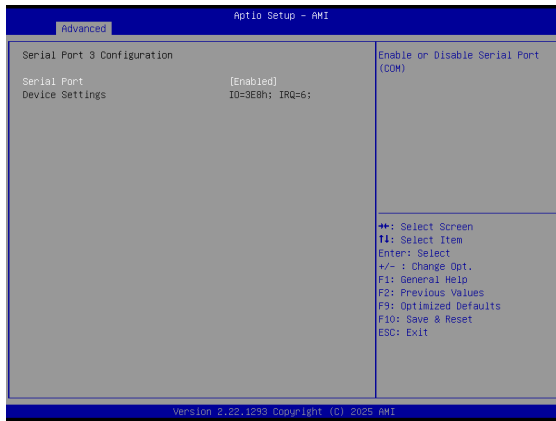

Serial Port
Enable or disable serial port.

▶ Advanced


IT8786 Super IO Configuration ▶ Parallel Port Configuration

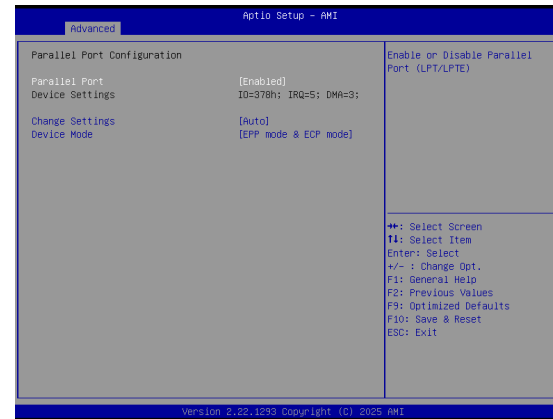

Serial Port
Enable or disable serial port.

▶ Advanced

IT8786 Hardware Monitor

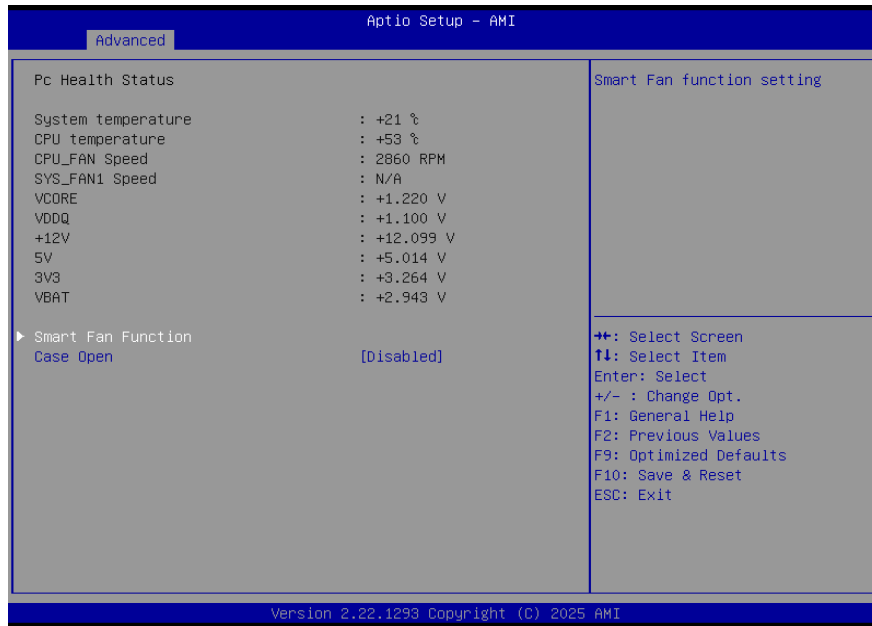

This section displays the system's health information, i.e. voltage readings, CPU and system temperatures, and fan speed readings

Smart Fan Function


Smart Fan Function Setting.

Case Open

Enable or disable the case open detection function.


▶ Advanced

IT8786 HW Monitor ▶ Smart FAN Function

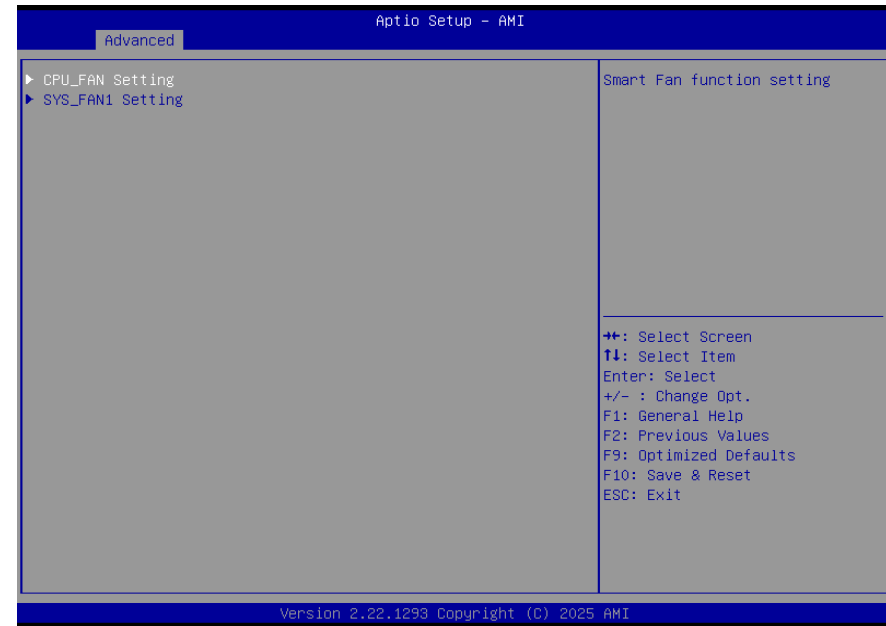

▶ Advanced

IT8786 HW Monitor ▶ Smart FAN Function ▶ CPU FAN Setting

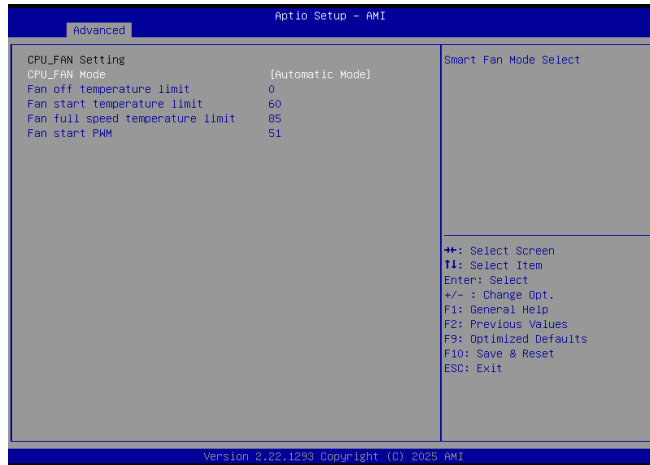

CPU / System Smart Fan Mode

Smart Fan Mode Select.

Fan off temperature limit

Fan will be turned off when the temperature is lower than this limit.

Fan start temperature limit

Fan will start working when the temperature is higher than this limit.


Fan full speed temperature limit

Fan will be full speed when the temperature is higher than this limit.

Fan start PWM


Fan will start with this PWM value.

IT8786 HW Monitor ▶ Smart FAN Function ▶ SYS_FAN1 Setting

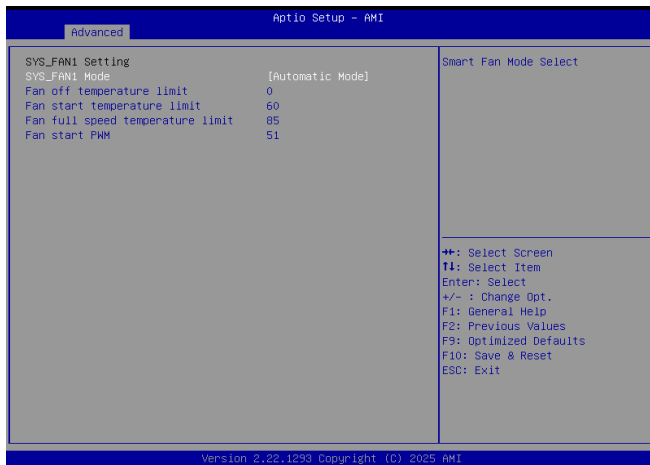

▶ Advanced

Serial Port Console Redirection

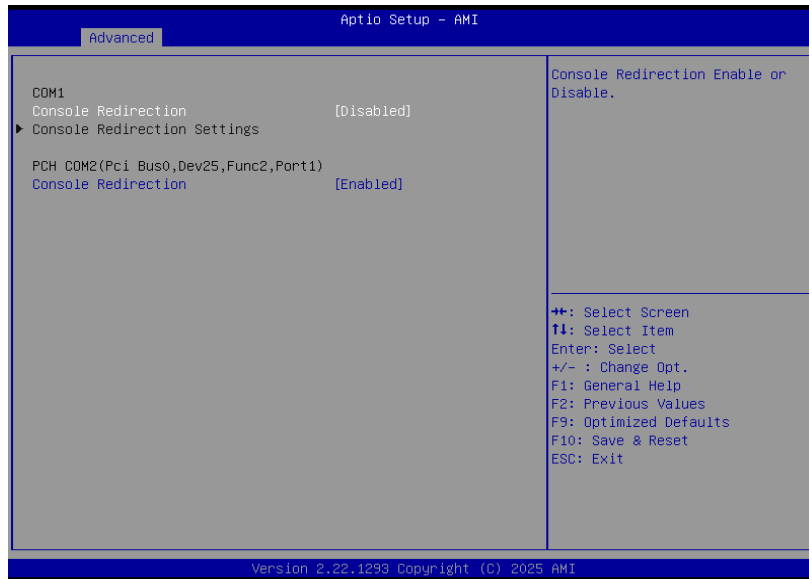


Console Redirection

By enabling Console Redirection of a COM port, the sub-menu of console redirection settings will become available for configuration as detailed in the following.

▶ Advanced

Serial Port Console Redirection ▶ Console Redirection Settings

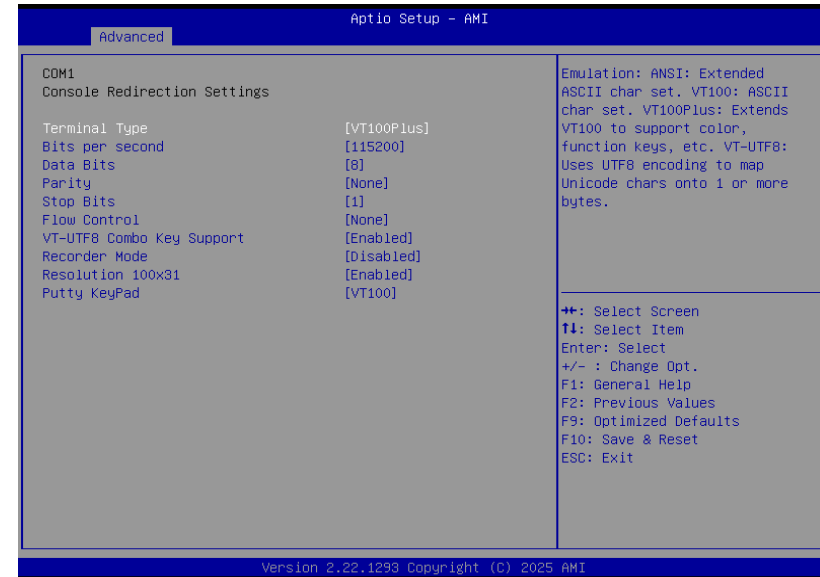

Configure the serial settings of the current COM port.

Terminal Type

Select terminal type: VT100, VT100+, VT-UTF8 or ANSI.

Bits per second

Select serial port transmission speed: 9600, 19200, 38400, 57600 or 115200.

Data Bits

Select data bits: 7 bits or 8 bits.

Parity

Select parity bits: None, Even, Odd, Mark or Space.

Stop Bits

Select stop bits: 1 bit or 2 bits.

Flow Control

Select flow control type: None or Hardware RTS/CTS. Flow Control is for RS485 mode and is only supported by Serial Port 1 (COM1).

VT-UTF8 Combo Key Support

Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.

Recorder Mode

With this mode enabled only text will be sent. This is to capture Terminal data.

Resolution 100x31


Enables or disables extended terminal resolution.

Putty KeyPad

Select FunctionKey and KeyPad on Putty.

▶ Advanced

ACPI Settings

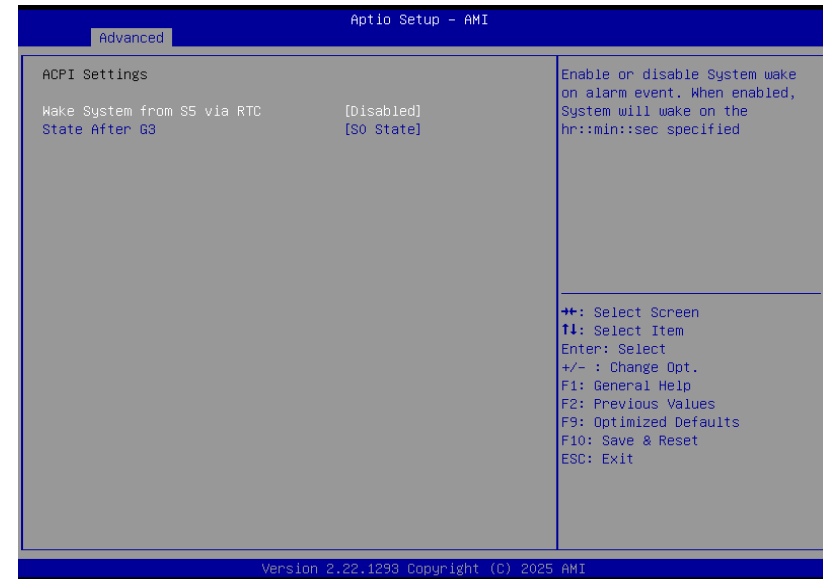

Wake system from S5 via RTC

When Enabled, the system will automatically power up at a designated time every day. Once it's switched to [Enabled], please set up the time of day — hour, minute, and second — for the system to wake up.


State After G3

Select between S0 State, and S5 State. This field is used to specify what state the system is set to return to when power is re-applied after a power failure (G3 state).

- **S0 State** The system automatically powers on after power failure.
- **S5 State** The system enter soft-off state after power failure. Power-on signal input is required to power up the system.

► **Advanced**

Network Stack Configuration

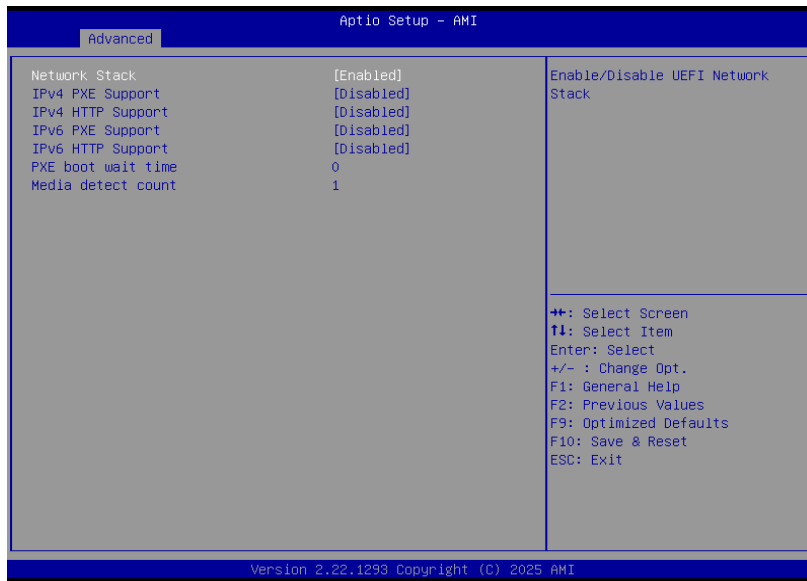

Network Stack

Enable or disable UEFI network stack. The following fields will appear when this field is enabled.

IPv4 PXE Support

Enable or disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.

IPv4 HTTP Support

Enable or disable IPv4 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available.

IPv6 PXE Support

Enable or disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.

IPv6 HTTP Support

Enable or disable IPv6 HTTP boot support. If disabled, IPv6 HTTP boot support will not be available.

PXE boot wait time


Set the wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.

Media detect count

Set the number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

▶ Advanced

DFI WDT Configuration

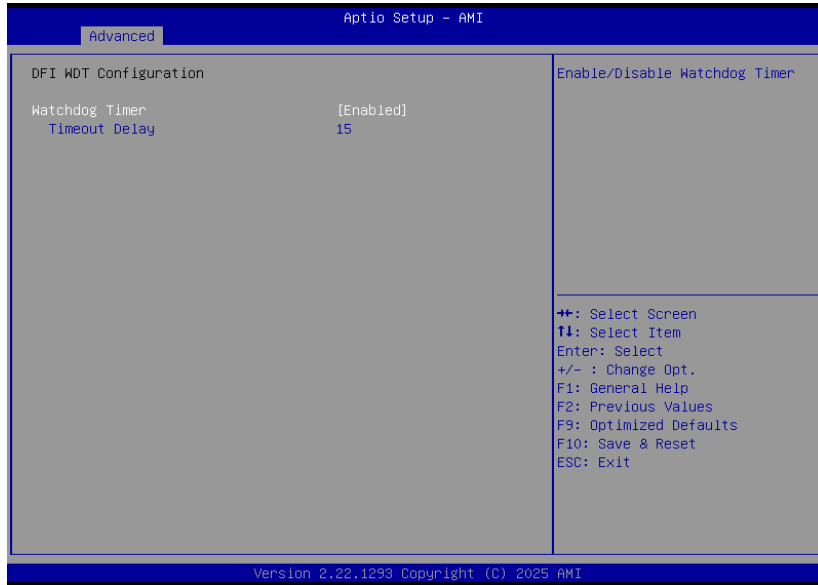


Watchdog Timer

Enable or disable Watchdog Timer.

▶ Advanced

USB Power Control

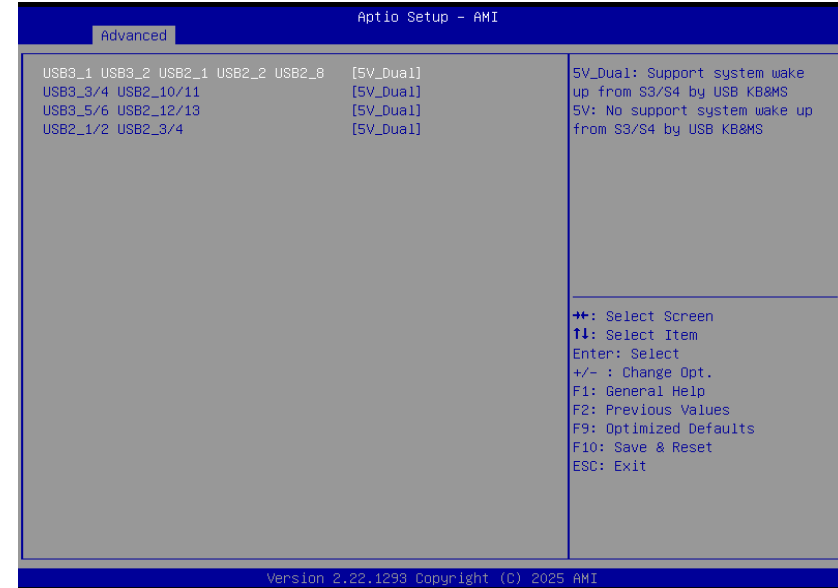


Server CA Configuration

5_Dual: Support system wake up from S3/S4 by USB KB&MS.

5V: No support system wake up from S3/S4 by USB KB&MS.

► Advanced

Tls Auth Configuration

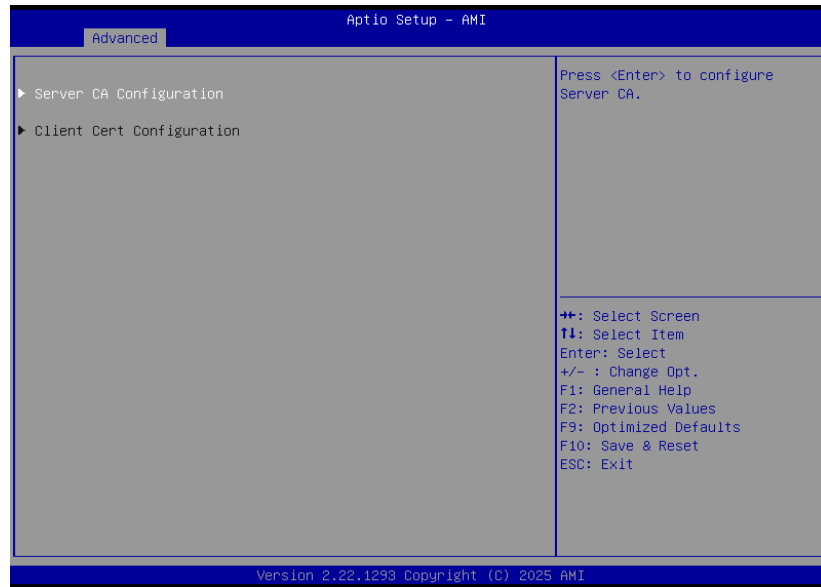

Server CA Configuration

Press <Enter> to configure Server CA.


► Chipset



Please select a submenu and press Enter. The submenus are detailed in the following pages.

► Chipset

System Agent (SA) Configuration

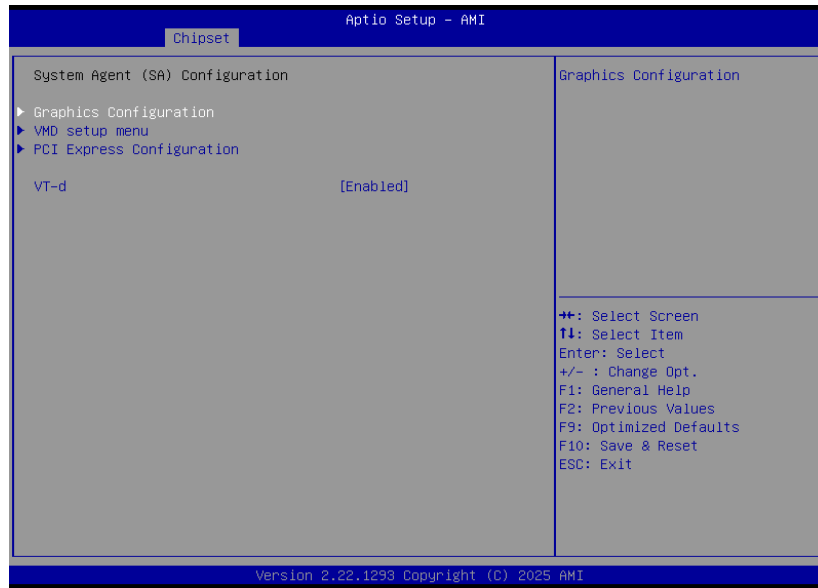

Graphics Configuration

Settings about graphic.

VMD setup menu

VMD Configuration Settings.

PCI Express Configuration


PCI Express Configuration Settings.

VT-d

VT-d capability.

► Chipset

System Agent (SA) Configuration ► Graphics Configuration

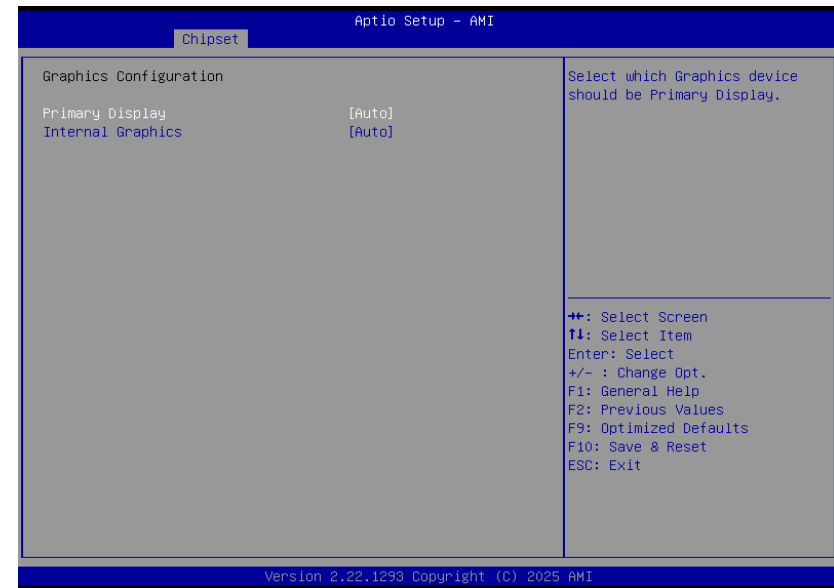

Primary Display


Select which graphics device should be primary display.

Internal Graphics

Keep IGFX enabled based on the setup options.

► Chipset

System Agent (SA) Configuration ► VMD setup menu

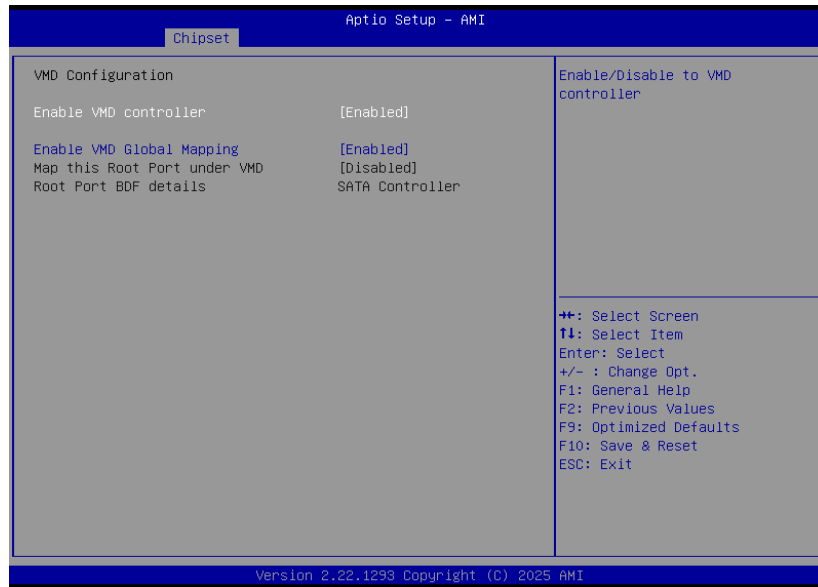


Enable VMD Controller

Enable/Disable to VMD controller.

► Chipset

System Agent (SA) Configuration ► PCI Express Configuration

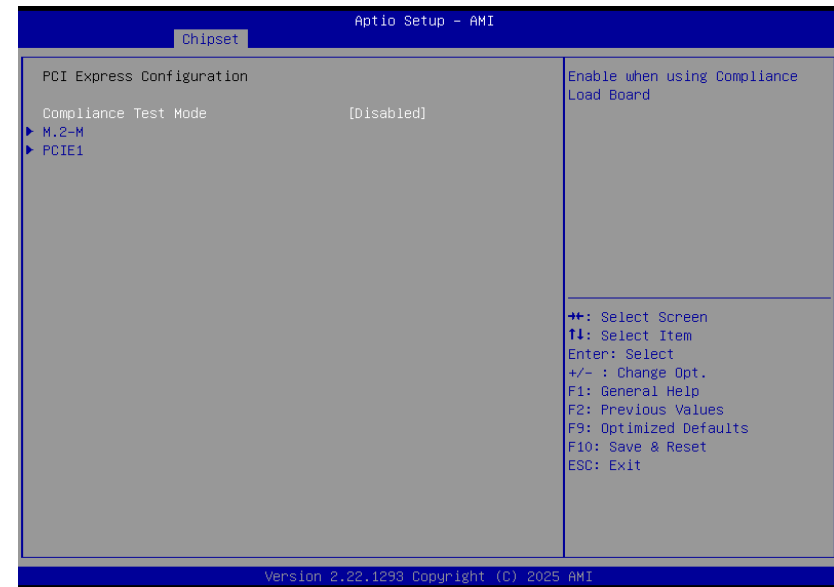

Compliance Test Mode

Enable when using compliance Load Board.

M.2-M


M.2-M Port Settings.

PCIE1

PCIE1 Port Settings.

► Chipset

PCH-IO Configuration

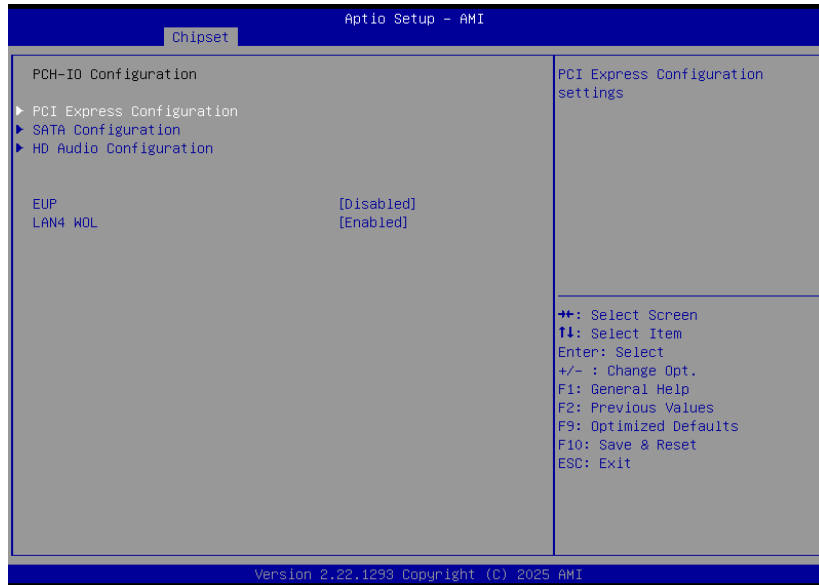

PCI Express Configuration

PCI Express Configuration Settings.

SATA Configuration


SATA Device Options Settings.

HD Audio Configuration

HD Audio Subsystem Configuration Settings.

► Chipset

PCH-IO Configuration ► PCI Express Configuration

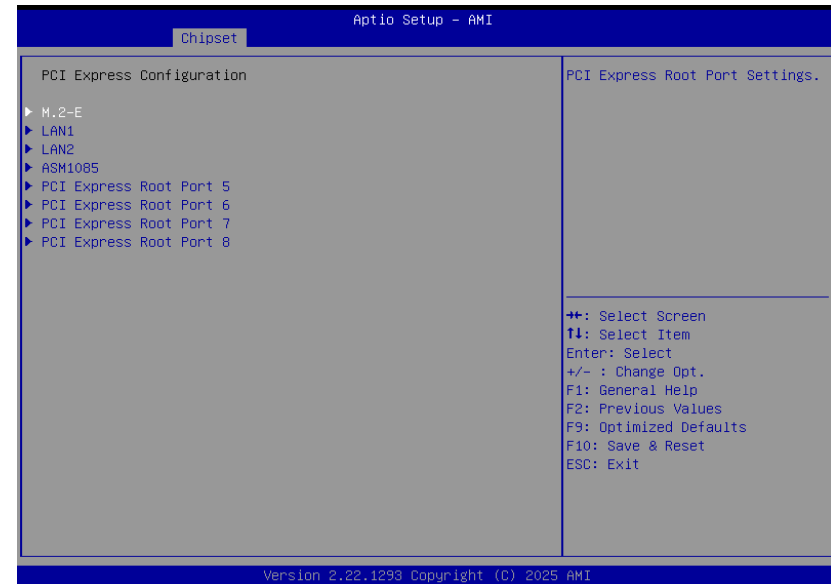


Select one of the PCI Express channels and press enter to configure the following settings.

M.2-E, LAN1, LAN2, ASM1085, PCI Express Root Port 5, 6, 7, 8

Control the PCI Express Root Port.

► Chipset

PCH-IO Configuration ► SATA Configuration

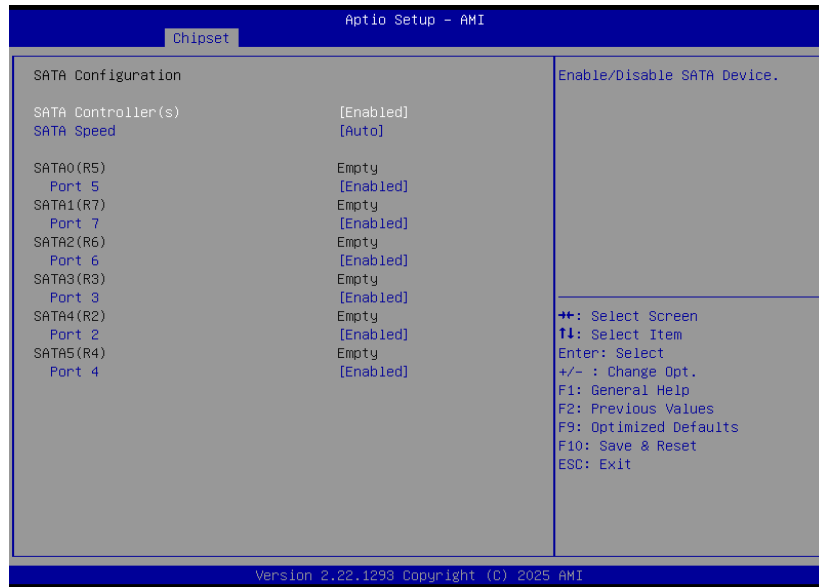

SATA Controller(s)

This field is used to enable or disable the Serial ATA controller.

SATA Speed

This field is used to select SATA speed generation limit: Auto, Gen1, Gen2 or Gen3.

Ports

Enable or disable the Serial ATA port function.

► Chipset

PCH-IO Configuration ► HD Audio Configuration




HD Audio

Control the detection of the HD Audio device.

- **Disabled** HDA will be unconditionally disabled.
- **Enabled** HDA will be unconditionally enabled.

► Security

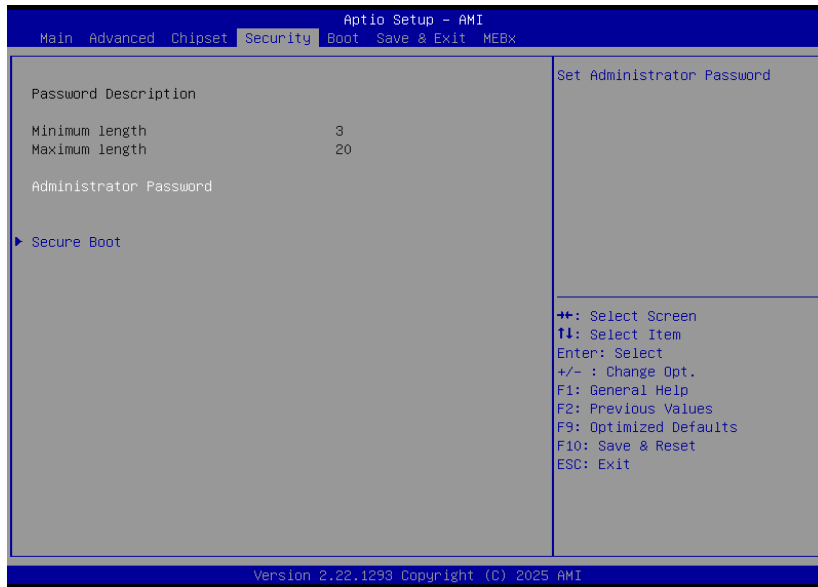

Administrator Password

Set the administrator password. To clear the password, input nothing and press enter when a new password is asked. Administrator Password will be required when entering the BIOS.

User Password

Set the user password. To clear the password, input nothing and press enter when a new password is asked. User Password will be required when powering up the system.

► Security

Secure Boot



Secure Boot

The Secure Boot store a database of certificates in the firmware and only allows the OSEs with authorized signatures to boot on the system. To activate Secure Boot, please make sure that "Secure Boot" is "[Enabled]", Platform Key (PK) is enrolled, "System Mode" is "User", and CSM is disabled. After enabling/disabling Secure Boot, please save the configuration and restart the system. When configured and activated correctly, the Secure Boot status will be "Active".

Secure Boot Mode

Select the secure boot mode – Standard or Custom. When set to Custom, the following fields will be configurable for the user to manually modify the key database.

Restore Factory Keys

Force system to User Mode. Load OEM-defined factory defaults of keys and databases onto the Secure Boot. Press Enter and a prompt will show up for you to confirm.


Reset To Setup Mode

Clear the database from the NVRAM, including all the keys and signatures installed in the Key Management menu. Press Enter and a prompt will show up for you to confirm.

Expert Key Management

Enables expert users to modify Secure Boot Policy variables without full authentication.

► Boot

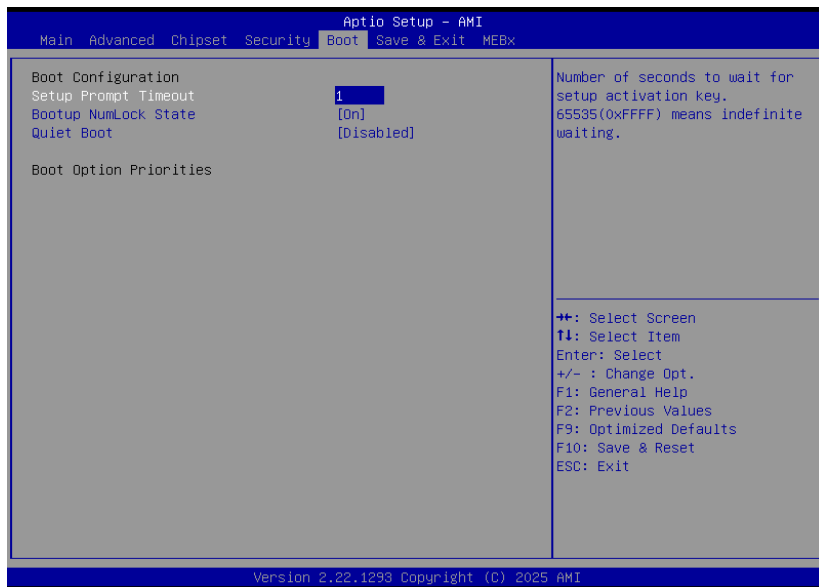

Setup Prompt Timeout

Set the number of seconds to wait for the setup activation key. 65535 (0xFFFF) denotes indefinite waiting.

Bootup NumLock State

Select the keyboard NumLock state: On or Off.


Quiet Boot

This section is used to enable or disable quiet boot option.

Boot Option Priorities

Rearrange the system boot order of available boot devices.

► Save & Exit

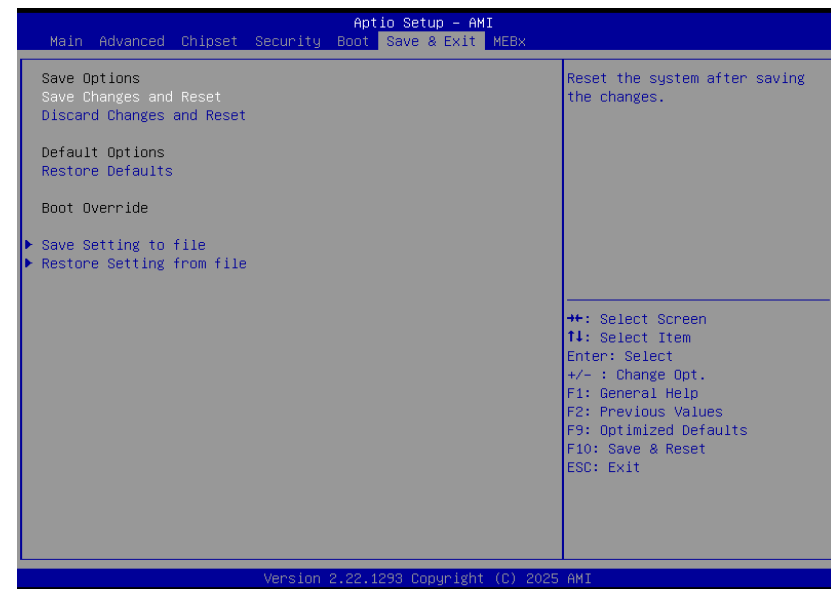

Save Changes and Reset

To save the changes, select this field and then press <Enter>. A dialog box will appear. Select Yes to reset the system after saving all changes made.

Discard Changes and Reset

To discard the changes, select this field and then press <Enter>. A dialog box will appear. Select Yes to reset the system setup without saving any changes.

Restore Defaults

To restore and load the optimized default values, select this field and then press <Enter>. A dialog box will appear. Select Yes to restore the default values of all the setup options.

Boot Override

Move the cursor to an available boot device and press Enter, and then the system will immediately boot from the selected boot device. The Boot Override function will only be effective for the current boot. The "Boot Option Priorities" configured in the Boot menu will not be changed.

- **Save Setting to file** Select this option to save BIOS configuration settings to a USB flash device.
- **Restore Setting from file** This field will appear only when a USB flash device is detected. Select this field to restore setting from the USB flash device.

► Updating the BIOS

To update the BIOS, you will need the new BIOS file and a flash utility. Please contact technical support or your sales representative for the files and specific instructions about how to update BIOS with the flash utility.

► Notice: BIOS SPI ROM

1. The Intel® Management Engine has already been integrated into this system board. Due to the safety concerns, the BIOS (SPI ROM) chip cannot be removed from this system board and used on another system board of the same model.
2. The BIOS (SPI ROM) on this system board must be the original equipment from the factory and cannot be used to replace one which has been utilized on other system boards.
3. If you do not follow the methods above, the Intel® Management Engine will not be updated and will cease to be effective.



Note:

- a. You can take advantage of flash tools to update the default configuration of the BIOS (SPI ROM) to the latest version anytime.
- b. When the BIOS IC needs to be replaced, you have to populate it properly onto the system board after the EEPROM programmer has been burned and follow the technical person's instructions to confirm that the MAC address should be burned or not.
- c. After updating unique MAC Address from manufacturing, NVM will be protected immediately after power cycle. Users cannot update NVM or MAC address.