



EC70B-SU

User's Manual

Copyright

This publication contains information that is protected by copyright. No part of it may be reproduced in any form or by any means or used to make any transformation/adaptation without the prior written permission from the copyright holders.

This publication is provided for informational purposes only. The manufacturer makes no representations or warranties with respect to the contents or use of this manual and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. The user will assume the entire risk of the use or the results of the use of this document. Further, the manufacturer reserves the right to revise this publication and make changes to its contents at any time, without obligation to notify any person or entity of such revisions or changes.

Changes after the publication's first release will be based on the product's revision. The website will always provide the most updated information.

© 2018. All Rights Reserved.

Trademarks

Product names or trademarks appearing in this manual are for identification purpose only and are the properties of the respective owners.

FCC and DOC Statement on Class A

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables must be used in order to comply with the emission limits.

Table of Contents

Copyright	2
Trademarks	2
FCC and DOC Statement on Class A.....	2
About this Manual	4
Warranty	4
Static Electricity Precautions.....	4
Safety Measures.....	4
Safety Precautions	5
About the Package	5
Chapter 1 - Introduction	6
Overview	6
Key Features	6
Specifications	7
Getting to Know the EC70B-SU	8
Mechanical Dimensions	9
Chapter 2 - Getting Started.....	10
Chapter 3 - Installing the Devices.....	11
Removing the Chassis Cover.....	11
Installing an M.2 card.....	11
Installing a Mini PCIe Card	12
Chapter 4 - Jumper Settings.....	13
Clear CMOS Data	13
Auto Power-on Select	13
Mini PCIe/SATA Signal Select	14
COM4/DIO Select.....	14
Chapter 5 - Ports and Connectors	15
Display Interfaces	15

USB Ports	16
COM (Serial) Ports.....	17
RJ45 LAN Ports	18
Audio	18
I/O Connectors	19
Serial ATA Connector & Serial ATA Power Connector	19
Expansion Slots	19
Front Panel Connector.....	20
Standby Power LED	21
Battery.....	21
COM (Serial) Ports (expansion board).....	22
LAN Ports (expansion board).....	22
Digital I/O Connector (expansion board)	23
Expansion Slots (expansion board)	23
Display Interfaces (expansion board)	24
15~36V DC-in/DC-out (expansion board).....	24
USB Ports (expansion board)	25
Chapter 6 - Mounting Options	26
Chapter 7 - BIOS Setup	29
Main	30
Advanced	30
Security.....	40
Boot	42
Exit.....	43
Chapter 8 - Supported Software	45
Chapter 9 - Intel AMT Settings	53

About this Manual

An electronic file of this manual is included in the CD. To view the user's manual in the CD, insert the CD into a CD-ROM drive. The autorun screen (Main Board Utility CD) will appear. Click "User's Manual" on the main menu.

Warranty

1. Warranty does not cover damages or failures that arise from misuse of the product, inability to use the product, unauthorized replacement or alteration of components and product specifications.
2. The warranty is void if the product has been subjected to physical abuse, improper installation, modification, accidents or unauthorized repair of the product.
3. Unless otherwise instructed in this user's manual, the user may not, under any circumstances, attempt to perform service, adjustments or repairs on the product, whether in or out of warranty. It must be returned to the purchase point, factory or authorized service agency for all such work.
4. We will not be liable for any indirect, special, incidental or damages to the product that has been modified or altered.

Static Electricity Precautions

It is quite easy to inadvertently damage your PC, system board, components or devices even before installing them in your system unit. Static electrical discharge can damage computer components without causing any signs of physical damage. You must take extra care in handling them to ensure against electrostatic build-up.

1. To prevent electrostatic build-up, leave the system board in its anti-static bag until you are ready to install it.
2. Wear an antistatic wrist strap.
3. Do all preparation work on a static-free surface.
4. Hold the device only by its edges. Be careful not to touch any of the components, contacts or connections.
5. Avoid touching the pins or contacts on all modules and connectors. Hold modules or connectors by their ends.



Important:

Electrostatic discharge (ESD) can damage your processor, disk drive and other components. Perform the upgrade instruction procedures described at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

Safety Measures

To avoid damage to the system:

- Use the correct AC input voltage range.

To reduce the risk of electric shock:

- Unplug the power cord before removing the system chassis cover for installation or servicing. After installation or servicing, cover the system chassis before plugging the power cord.

Battery:

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to local ordinance.

Safety Precautions

- Use the correct DC input voltage range.
- Unplug the power cord before removing the system chassis cover for installation or servicing. After installation or servicing, cover the system chassis before plugging the power cord.
- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommend by the manufacturer.
- Dispose of used batteries according to local ordinance.
- Keep this system away from humidity.
- Place the system on a stable surface. Dropping it or letting it fall may cause damage.
- The openings on the system are for air ventilation to protect the system from overheating. DO NOT COVER THE OPENINGS.
- Place the power cord in such a way that it will not be stepped on. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the system and that it matches the voltage and current marked on the system's electrical range label.
- If the system will not be used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
- If one of the following occurs, consult a service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated the system.
 - The system has been exposed to moisture.
 - The system is not working properly.
 - The system dropped or is damaged.
 - The system has obvious signs of breakage.
- The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace the outlet.
- Disconnect the system from the DC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.

About the Package

The package contains the following items. If any of these items are missing or damaged, please contact your dealer or sales representative for assistance.

- 1 EC70B-SU system unit
- Mounting screws for M.2 and Mini PCIe modules

Optional Items

- Wall Mount kit
- Power Cord
- Power Adapter: 120W, 19V/6.31A or 60W, 19V/3.15A


The board and accessories in the package may not come similar to the information listed above. This may differ in accordance to the sales region or models in which it was sold. For more information about the standard package in your region, please contact your dealer or sales representative.

Chapter 1 - Introduction

Overview



Front View

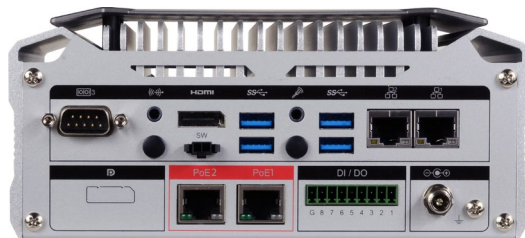

Rear View

Key Features

Model Name	EC70B-SU
Processor	6th Generation Intel® Core™ processors, BGA 1356
LAN	Four LAN ports (two of them are PoE ports)
COM	Six COM ports
Display	VGA (or DP++ available upon request) HDMI (or DP++ available upon request)
Audio	Microphone and Line-out
USB	Six USB 3.0 Type A ports
Power	15~36V DC-in
DIO	8-bit DIO with a physical serial port (selection via jumper settings) Dedicated 8-bit DIO port with a terminal block
Power Switch	Power-on button and distant power-on switch


Specifications

Processor	6th Generation Intel® Core™ Processors, BGA 1356 Intel® Core™ i7-6600U Processor, Dual Core, 4M Cache, 2.6GHz, 15W Intel® Core™ i5-6300U Processor, Dual Core, 3M Cache, 2.4GHz, 15W Intel® Core™ i3-6100U Processor, Dual Core, 3M Cache, 2.3GHz, 15W
Memory	<ul style="list-style-type: none"> • Supports dual-channel DDR4 2133MHz • Supports 4GB/8GB memory onboard
Graphics	Intel® HD Graphics GT Series OpenGL 5.0, DirectX 12, OpenCL 2.1 <ul style="list-style-type: none"> • Supports these codecs: HW Decode: AVC/H.264, MPEG2, VC1/WMV9, JPEG/MJPEG, HEVC/H265, VP8, VP9 HW Encode: AVC/H.264, MPEG2, JPEG, HEVC/H265, VP8, VP9 • Output displays: VGA (or DP++): resolution up to 1920x1200 @ 60Hz HDMI (or DP++): resolution up to 4096x2160 @ 24Hz or 2560x1600 @ 60Hz DP++: resolution up to 4096x2304 @ 60Hz • Dual display: VGA + HDMI, (DP++) + HDMI, VGA + DP++, or (DP++) + DP++
Audio	<ul style="list-style-type: none"> • Realtek ALC888 5.1-channel • Audio ports: Mic-in and Line-out
Storage	<ul style="list-style-type: none"> • 1 x mSATA • 1 x M.2 (2242/2260/2280 B Key) / CFast Slot (CFast slot available upon request)
Ethernet	1 x Intel® I210IT PCIe (10/100/1000Mbps) 1 x Intel® I219LM with iAMT11.0 PCIe (10/100/1000Mbps) (only Core i7/i5 supports iAMT) 2 x Intel® I210IT PCIe (10/100/1000Mbps) for PoE
Expansion	One full-size Mini PCIe (PCIe/USB) One half-size Mini PCIe (PCIe/USB/SATA)
Front Panel I/O Ports	<ul style="list-style-type: none"> • Front Panel <ul style="list-style-type: none"> - One power button with LED - One reset button - One status LED - One HDD LED - Four (Two support RS232/422/485; two support only RS232) and one RS232 (or 8-bit DIO) - Two USB 3.0 Type A ports - One VGA port - One wireless module antenna hole

Rear Panel I/O Ports	<ul style="list-style-type: none"> • Rear Panel <ul style="list-style-type: none"> - One RS-232 (DB-9) - One Line-out and one Mic-in ports - One HDMI port - Four USB 3.0 Type A ports - Four RJ45 LAN ports - One 15~36V DC-in jack - One distant power on/off switch - One 8-bit DIO connector - Two wireless module antenna holes
Power	• Power input voltage: 15~36V DC-in (DC-in jack connector)
Cooling System	• Fanless with heatsink
Environment	<ul style="list-style-type: none"> • Operating Temperature: <ul style="list-style-type: none"> -20 to 60°C (wide temperature SSD or mSATA mini) 0 to 50°C (general SSD or mSATA mini) • Storage Temperature: <ul style="list-style-type: none"> -20 to 85°C • Relative Humidity: <ul style="list-style-type: none"> 5 to 95% RH (non-condensing)
Construction	• Aluminum + Metal Aluminum
Mounting	• Wall/VESA/DIN-rail Mount
Dimensions	• 184mm x 82mm x 118.4mm (W x H x D)
Weight	• 1.6 Kg
OS Support	<ul style="list-style-type: none"> • Windows 7 (32/64-bit) • Windows 8.1 (64-bit) • Windows 10 • Windows Embedded Standard 7 • Windows Embedded 8 Standard
Other Features	System Reset, Programmable via Software from 1 to 255 Seconds
Standards and Certifications	Shock: Operating: 3G, 11ms Non-Operating: 5G, 11ms Vibration: Operating: Random 5~500Hz, IEC68-2-64 (3G) Non-Operating: Sine 10~500Hz, IEC68-2-6 (3G)

Getting to Know the EC70B-SU

Front View

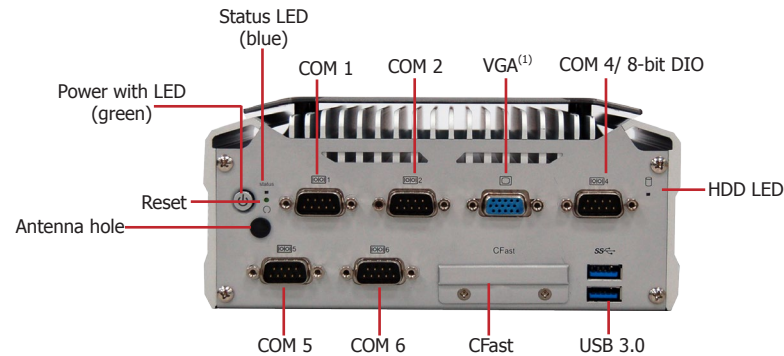

Power button with LED (Green)
Press to power on or power off the system.

Status LED (Blue)
Indicates system status.

Status LED			
Suspend Mode	S0	Sleep	S4, S5
LED Behavior	ON	Blinks	Off

Reset Button
Press to reset the system.

COM Ports
Connect serial devices. COM 1 and COM 2 support RS232/422/485; COM 4 can be selected between an RS232 COM port or 8-bit digital IO via jumper settings; COM 5 and COM 6 support only RS232.


VGA⁽¹⁾
Connects the VGA connector of a monitor.

HDD LED (Blue)
Indicates the status of the hard drive.

HDD LED		
HDD State	Disk access activity	HDD present or HDD not present
LED Behavior	Blink	Off

CFast Slot (only available upon request)
Allows for convenient system capacity expansion.

USB 3.0 Ports
Connect USB 3.0 devices as well as devices based on previous USB versions.

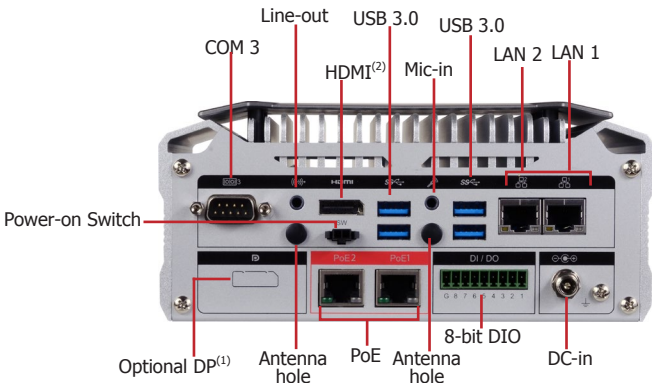

COM Port
Connects serial devices; COM 3 supports only RS232.

Microphone/Line-out Ports
Connect audio devices such as microphones and speakers.

HDMI⁽²⁾
Connects the HDMI connector of an LCD monitor.

USB 3.0 Ports
Connect USB 3.0 devices as well as devices based on previous USB versions.


Power-on Switch
Connects a power switch for distant power on/off control.

Gigabit LAN Ports and PoE Ports
Connect the system to a local area network. The Power over Ethernet (PoE) ports are capable of delivering 15.4W of power to connected devices.

DC-in
DC 15~36V power input via a DC-in jack.

Antenna Holes
Connect a wireless module's antennas.


8-bit Digital Input/Output
Provides 8-bit digital input/output.

**Notes:**


- You can choose to wire either the VGA on the front panel or the optional DP port on the rear panel.
- You can choose to have a DP instead of an HDMI port.

Mechanical Dimensions

Chassis Dimensions

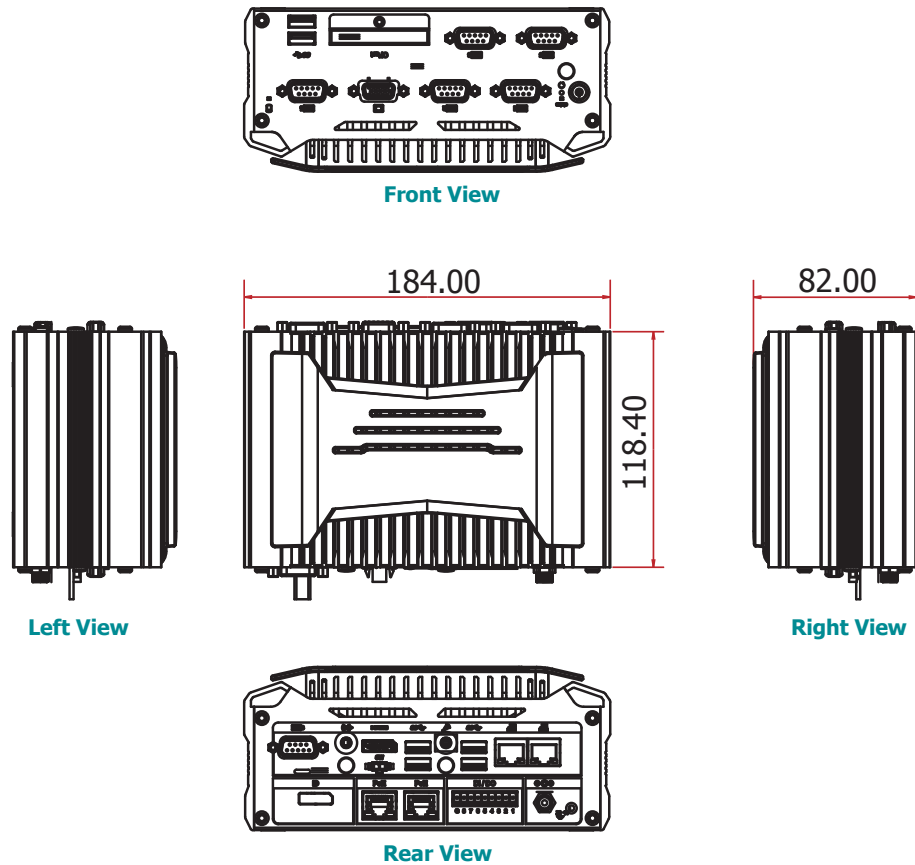

Motherboard Dimensions

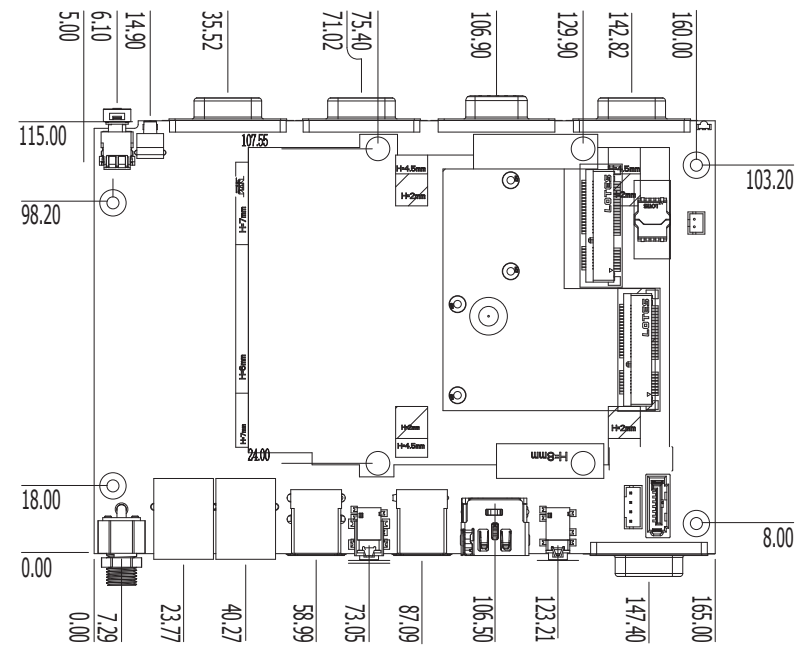

Chapter 2 - Getting Started

Preparing the System

Before you start using the system, you need the following items:

- SATA hard drive
- AC power adapter
- CD-ROM drive (for installing software/drivers)

Installing Devices

The following devices can be installed in the system.

- M.2 module
- Mini PCIe card
- mSATA card

Configuring the BIOS

To get you started, you may need to change configurations such as the date, time and the type of hard disk drive.

1. Power-on the system.
2. After the memory test, the message "Press DEL to run setup" will appear on the screen. Press the Delete key to enter the BIOS setup utility.

Installing the Operating System

Depending on the method you choose to install your system, you may use a USB flash drive or install a CD-ROM drive in order to run the Operating System CD.

Make sure an M.2 or mSATA card is already installed.

1. Refer to the following chapters for information on connecting a CD-ROM drive and installing a SATA drive.
2. Refer to your operating system manual for instructions on installing the operating system.

Installing the Drivers


The system package includes a CD disk. The CD includes drivers that must be installed to provide the best system performance. Refer to the Supported Software chapter for instructions on installing the drivers.

Chapter 3 - Installing the Devices


Removing the Chassis Cover

Please observe the following guidelines and follow the procedure to open the system.

1. Make sure the system and all other peripheral devices connected to it have been powered off.
2. Disconnect all power cords and cables.
3. The 2 mounting screws on the bottom of the system are used to secure the cover to the chassis. Remove these screws and then put them in a safe place for later use.

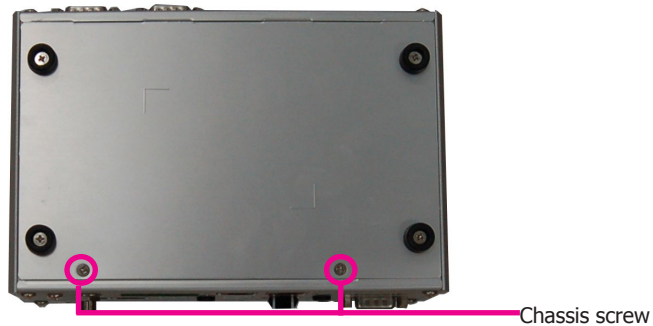

4. Lift the cover to open the system. The M.2 socket on the expansion board is readily accessible after removing the bottom cover.

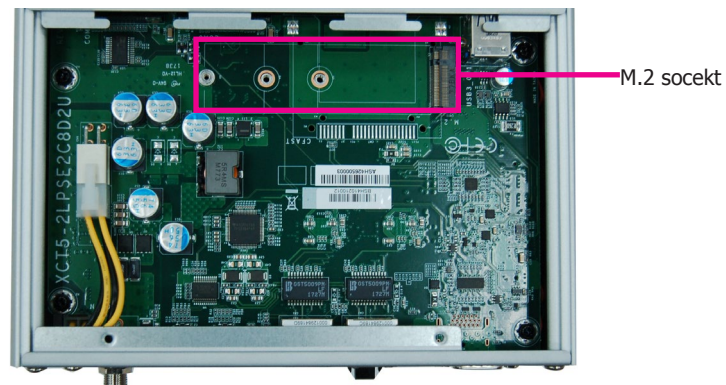

Installing an M.2 card



The system is equipped with one M.2 socket (SATA signals) and supports 42mm, 60mm and 80mm M.2 SSDs.

To install an 80mm M.2 SSD:

1. Align the notch at the edge of the M.2 card with the key in the connector.
2. Insert the M.2 card into the connector.
3. Use the provided mounting screw to secure the card on the system board.

To install a 42mm or 60mm M.2 SSD:




1. Install the standoff at the 42mm or 60mm mounting position.
2. Align the notch at the edge of the M.2 card with the key in the connector.
3. Insert the M.2 card into the connector.
4. Use the provided mounting screw to secure the card on the system board.

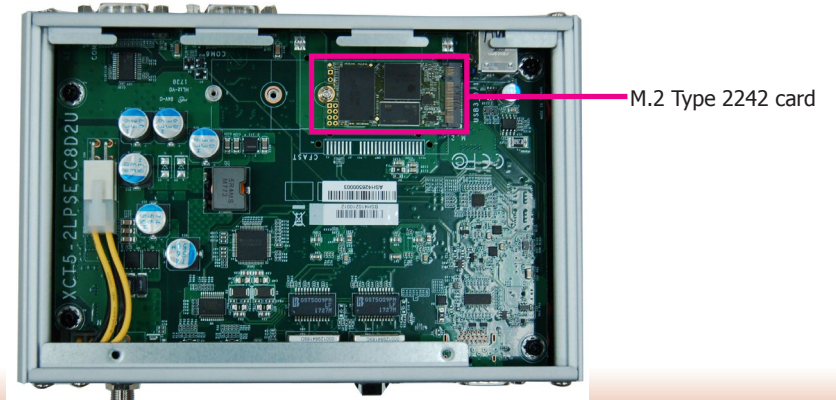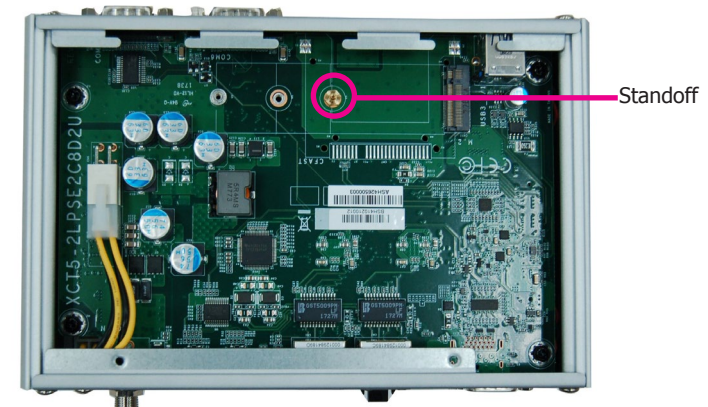


Installing a Mini PCIe Card

The system board is equipped with 2 Mini PCIe slots: one full-size and one half-size slot. Here we will demonstrate the installation of a full-size Mini PCIe card.

The PCIe sockets are located on the main board; to access the main board, detach the expansion board on top of it. Remove the screws that affix the front and back bezels as shown in the following pictures to access the expansion board and uninstall it from the system.

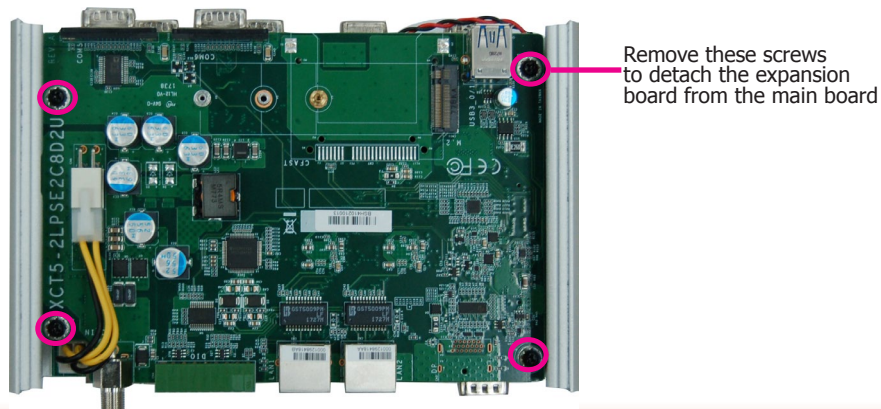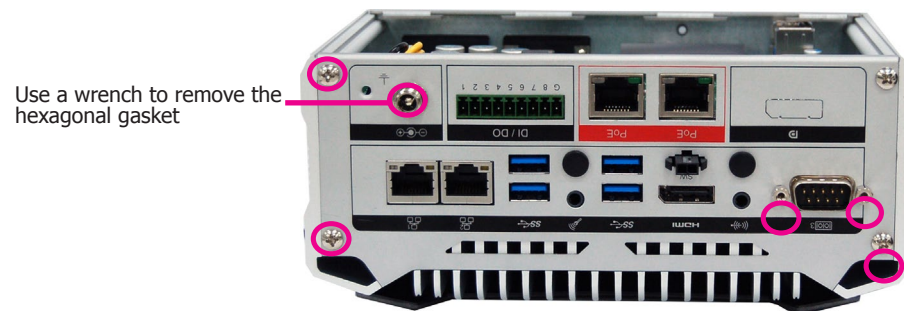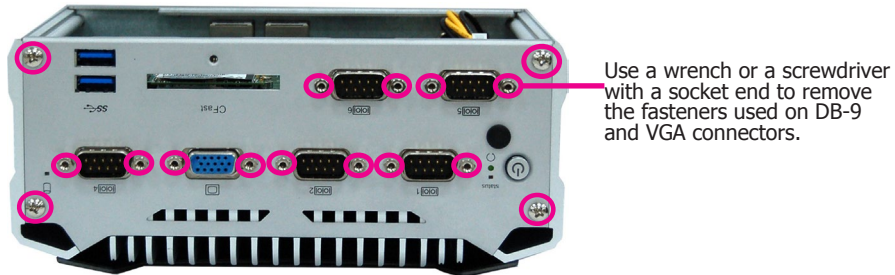

1. Grasp the Mini PCIe card by its edges and align the notch of the PCIe card with the key in the connector on the system board.
2. Push the Mini PCIe card down and use the provided mounting screw to secure the card on the system board.

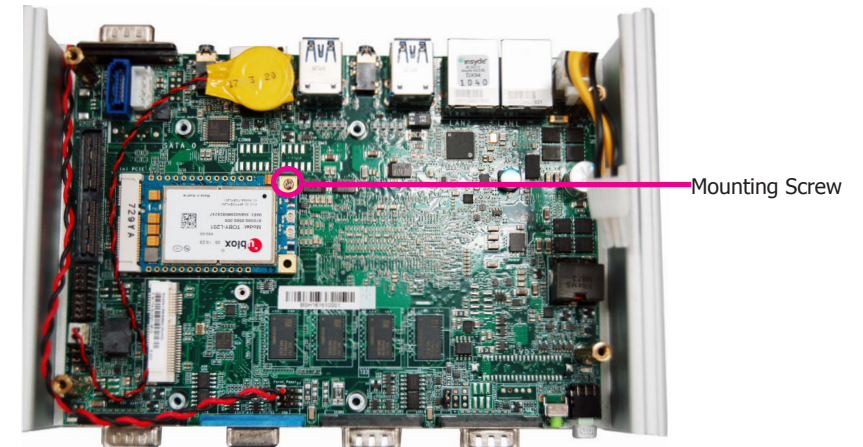


Note:

The system also has a half-size Mini PCIe slot that can accommodate either a Mini PCIe or an mSATA card. Refer to jumper settings for signal selection for this slot.

Chapter 4 - Jumper Settings

Clear CMOS Data

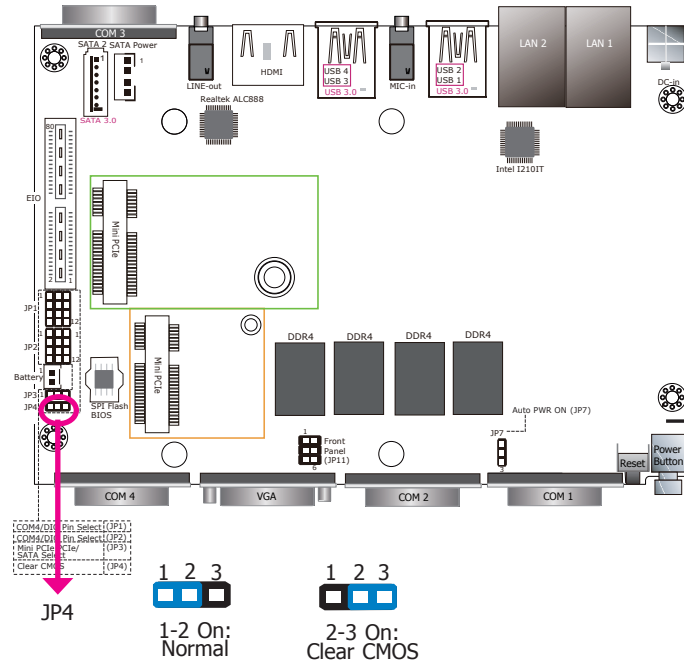


You can reconfigure the system with the default values stored in the ROM BIOS if you encounter the following situations:

- CMOS data becomes corrupted.
- You forgot the supervisor or user password.

To load the default values stored in the ROM BIOS, please follow these steps below.

- Power off the system and unplug the power cord.
- Set jumper pins 2 and 3 to On. Wait for a few seconds and set the jumper back to its default setting, pins 1 and 2 On.
- Now plug the power cord and power on the system.


Auto Power-on Select

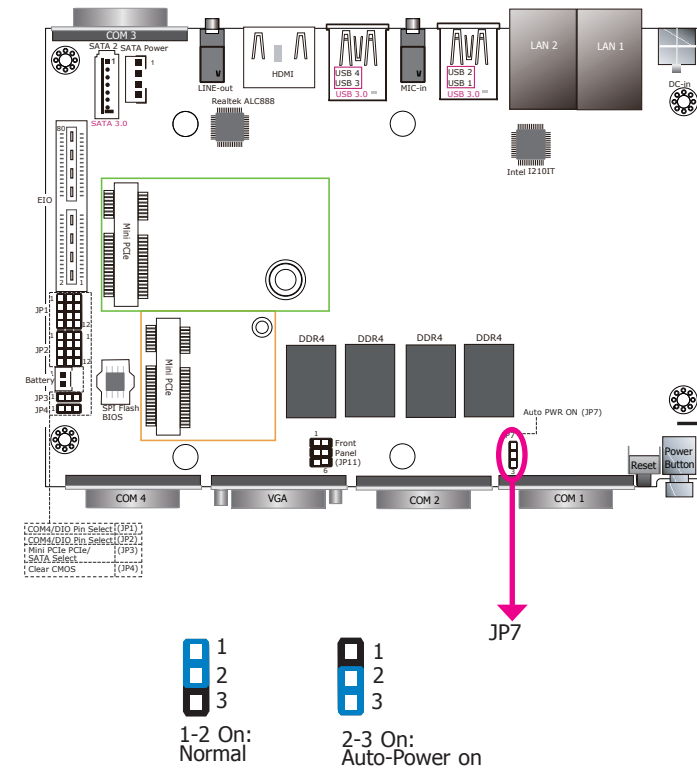

JP7 is used to select the method of powering on the system. If you want the system to power on whenever AC power comes in, set JP7 pins 2 and 3 to On. If you want to use the power button, set pins 1 and 2 to On.


When using the JP7 "Power On" feature to power the system back on after a power failure occurs, the system may not power on if the power lost is resumed within 5 seconds (power flicker).

Mini PCIe/SATA Signal Select

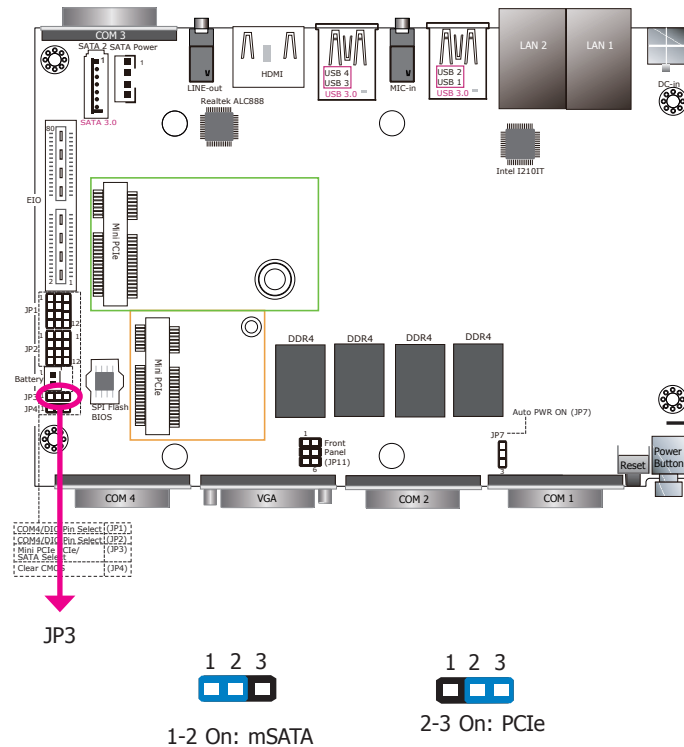

JP3 is used to select the signal for the half-size Mini PCIe slot: PCIe or mSATA (default).

COM4/DIO Select

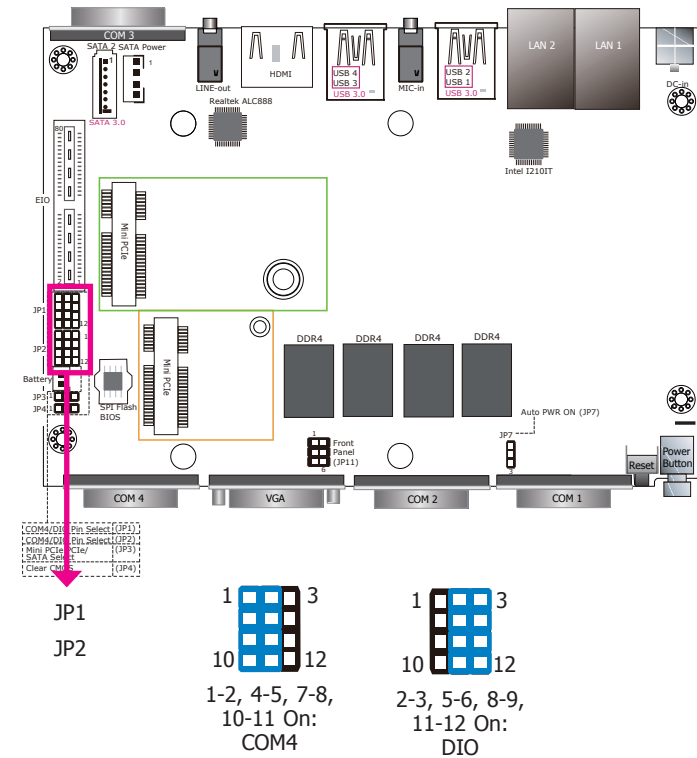

The system board uses JP1 and JP2 to select between RS232 serial communication or 8-bit DIO for the DB-9 connector (COM 4) at the rear panel.



Important:


You cannot use COM 4 and DIO at the same time. Please set JP1 and JP2 together.

Chapter 5 - Ports and Connectors

Display Interfaces

The display ports consist of the following:

- 1 HDMI or DP++ (optional)
- 1 VGA or DP++ (optional)

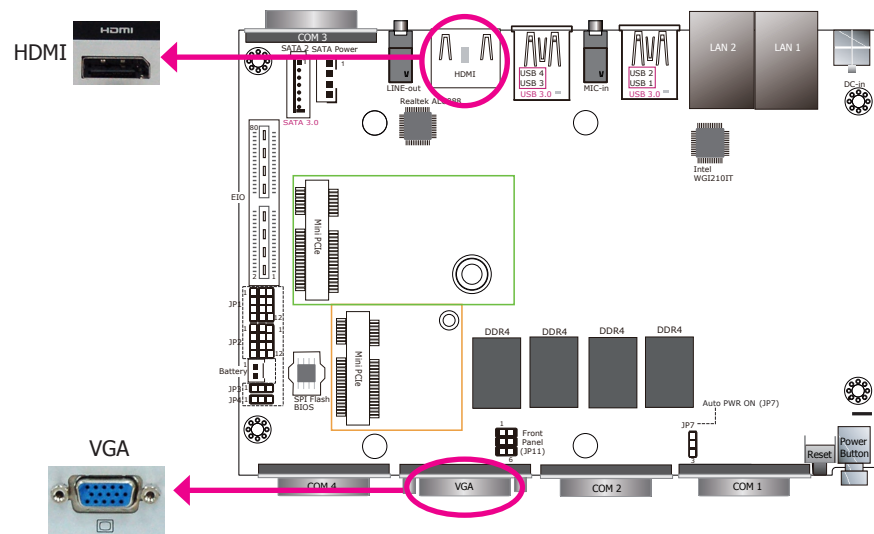

VGA Port

The VGA port is used for connecting a VGA monitor. Connect the monitor's 15-pin D-shell cable connector to the VGA port. After you plug the monitor's cable connector into the VGA port, gently tighten the cable screws to hold the connector in place. Note that if you choose to wire a DP port on the expansion board (BOM option), this VGA port will not be available. Please refer to "Display Interfaces (expansion board)" below.

HDMI Port

The HDMI port, which carries both digital audio and video signals, is used to connect the HDMI port of an LCD monitor or a digital TV. Note that you can choose to wire this port as a DP port (BOM option).

DP Port (optional)

The DP port is a digital display interface used to connect a display device such as a computer monitor. It is used to transmit audio and video simultaneously. The interface, which is developed by VESA, delivers higher performance than any other digital interfaces.


BIOS Setting

Configure the display devices in the Advanced menu ("Video Configuration" submenu) of the BIOS. Refer to Chapter 7 for more information.

Driver Installation

Install the graphics driver. Refer to Chapter 8 for more information.

USB Ports

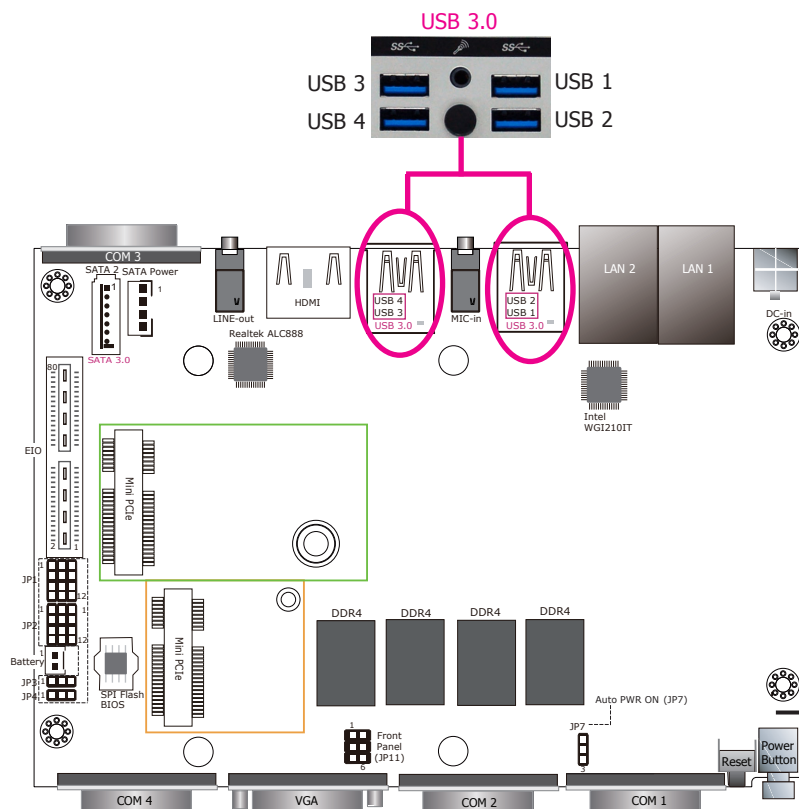

The system board is equipped with four onboard USB 3.0 ports (USB 1-4). USB devices allow data exchange between your computer and a wide range of simultaneously accessible external Plug and Play peripherals.

BIOS Setting

Configure the onboard USB in the Advanced menu ("USB Configuration" submenu) of the BIOS. Refer to Chapter 7 for more information.

Driver Installation

You may need to install the proper drivers in your operating system to use USB devices. Refer to Chapter 8 for more information.

Wake-On-USB Keyboard/Mouse


The Wake-On-USB Keyboard/Mouse function allows you to use a USB keyboard or USB mouse to wake up a system from the S3 (STR - Suspend To RAM) state.



Important:

If you are using the Wake-On-USB Keyboard/Mouse function for 2 USB ports, the +5V_standby power source of your power supply must support $\geq 1.5A$. For 3 or more USB ports, the +5V_standby power source of your power supply must support $\geq 2A$.

COM (Serial) Ports

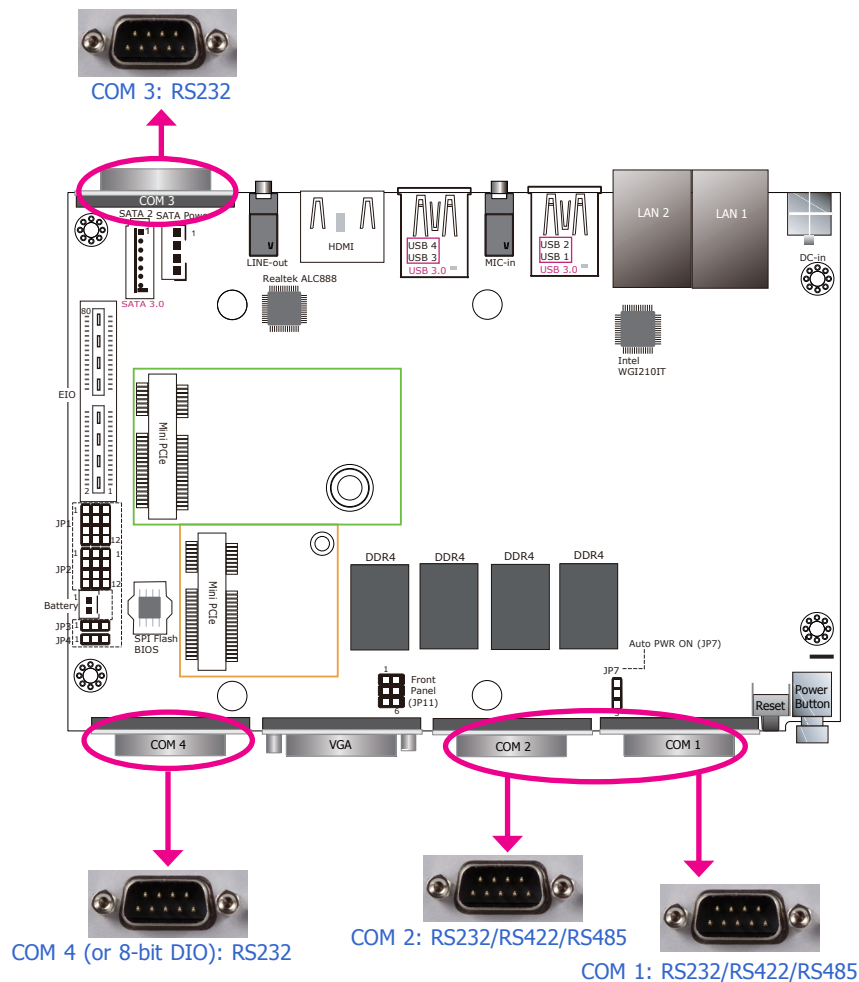


COM 1 and COM 2 can be selected among RS232, RS422 and RS485 whereas COM 3 and COM 4 are fixed at RS232. Use the BIOS configuration utility to select the communication mode for COM 1 and COM 2.

BIOS Setting

Configure the serial ports in the "Advanced" menu (Super I/O submenu) of the BIOS. Refer to Chapter 7 for more information.

COM 1 (RS232/422/485) / COM 2 (RS232/422/485) / COM 3 (RS232 only)

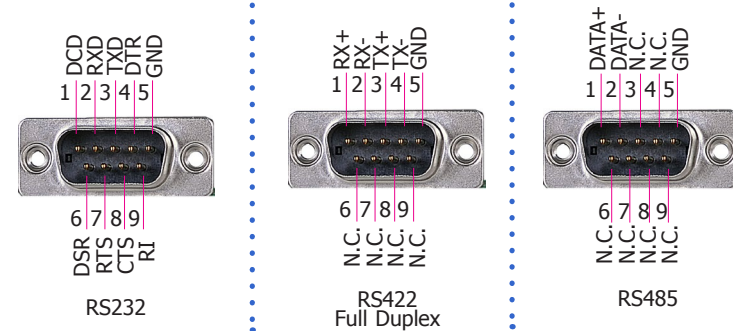

COM 4 (Serial) Port


This DB-9 serial port can be configured as an RS232 serial port or as an 8-bit DIO connector via jumper settings. Refer to "COM 4/DIO Select" in Chapter 4 for its respective configuration.

8-bit Digital IO

The 8-bit Digital I/O connector provides monitoring and control functions to the connected external devices. We have built support software called EAPI that enables the functionality of hardware components. Please contact our tech support or sales representatives for the support software package.

Pins	COM 4 Function	
	RS232	DIO
1	DCD	DIO0
2	RXD	DIO1
3	TXD	DIO2
4	DTR	DIO3
5	GND	GND
6	DSR	DIO4
7	RTS	DIO5
8	CTS	DIO6
9	RI	DIO7

RJ45 LAN Ports

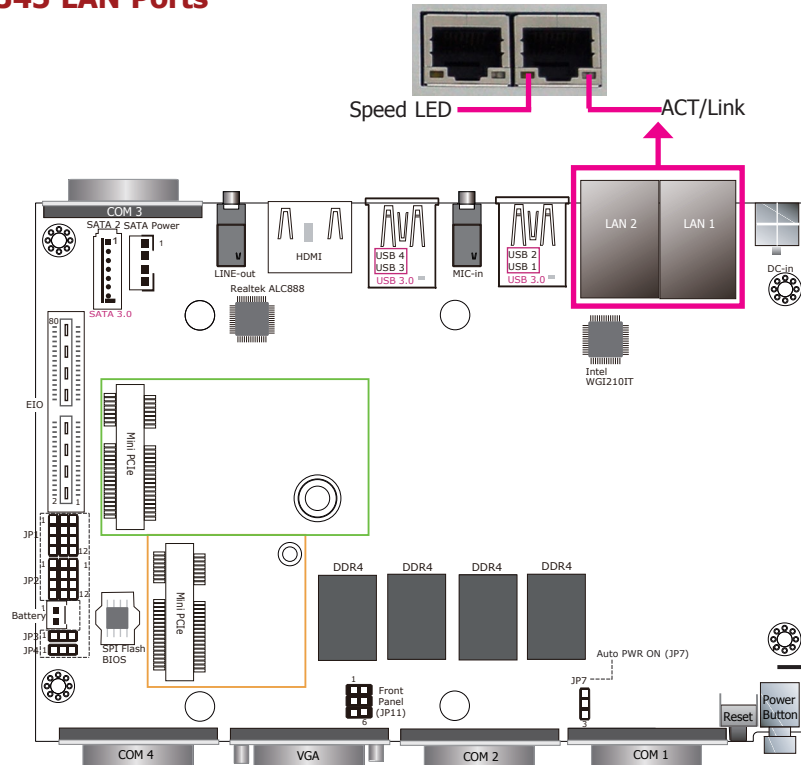

LAN Ports

- LAN 1 is built on the Intel® I219LM PCI Express Gigabit Ethernet controller with iAMT11.0 PCIe (10/100/1000Mbps) (only Core i7/i5 supports iAMT)
- LAN 2 is built on the Intel® I210IT PCI Express Gigabit Ethernet controller


The LAN ports allow the system board to connect to a local area network with a network hub and the their LED indication is as follows:

Activity/Link LED		Speed LED	
LED Behavior	Description	LED Behavior	Description
Off	No link	Off	10Mbps connection
Blinking	Data Activity	Green	100Mbps connection
On	Link	Orange	1Gbps connection

Driver Installation

Install the LAN drivers. Refer to Chapter 8 for more information.

Audio

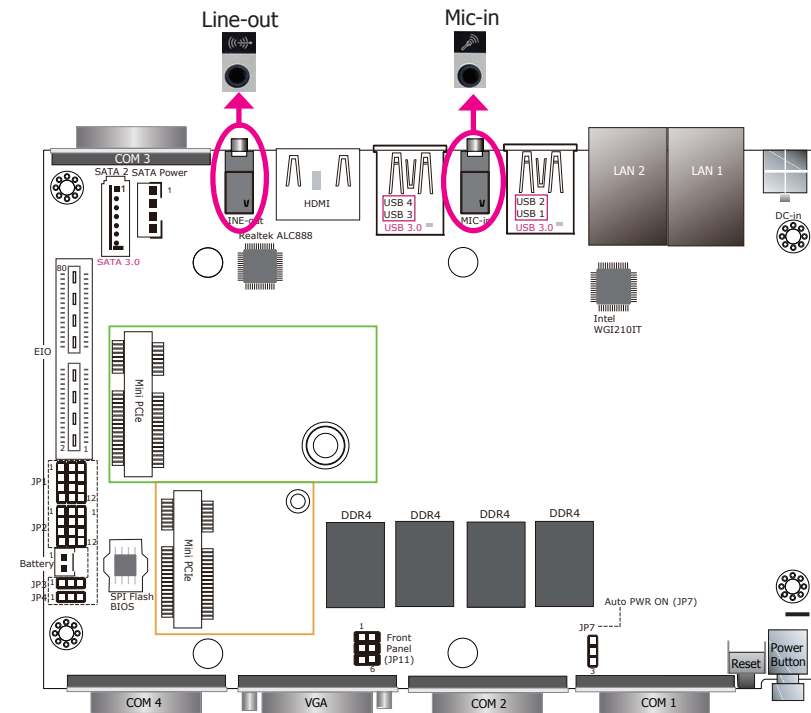

Audio Ports

The system board is equipped with 2 audio jacks. A jack is a one-hole connecting interface for inserting a plug.


- Line-out Jack
This jack is used to connect a headphone or external speakers.
- Mic-in Jack
This jack is used to connect an external microphone.

Driver Installation

Install the audio driver. Refer to the Chapter 8 for more information.

I/O Connectors

Serial ATA Connector & Serial ATA Power Connector

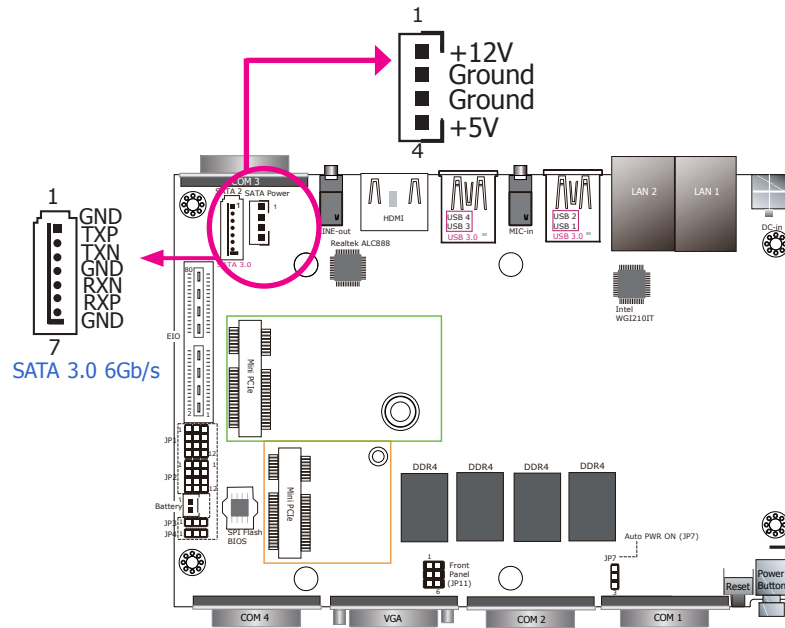

Features

- 1 Serial ATA 3.0 port with data transfer rate up to 6Gb/s
- Integrated Advanced Host Controller Interface (AHCI) controller


The Serial ATA connector is used to connect the Serial ATA device. Connect one end of the Serial ATA data cable to a SATA connector and the other end to your Serial ATA device.

The SATA power connector supplies power to the SATA drive. Connect one end of the provided power cable to the SATA power connector and the other end to your storage device.

BIOS Setting

Configure the Serial ATA drives in the Advanced menu ("SATA Configuration" submenu) of the BIOS. Refer to Chapter 7 for more information.

Expansion Slots

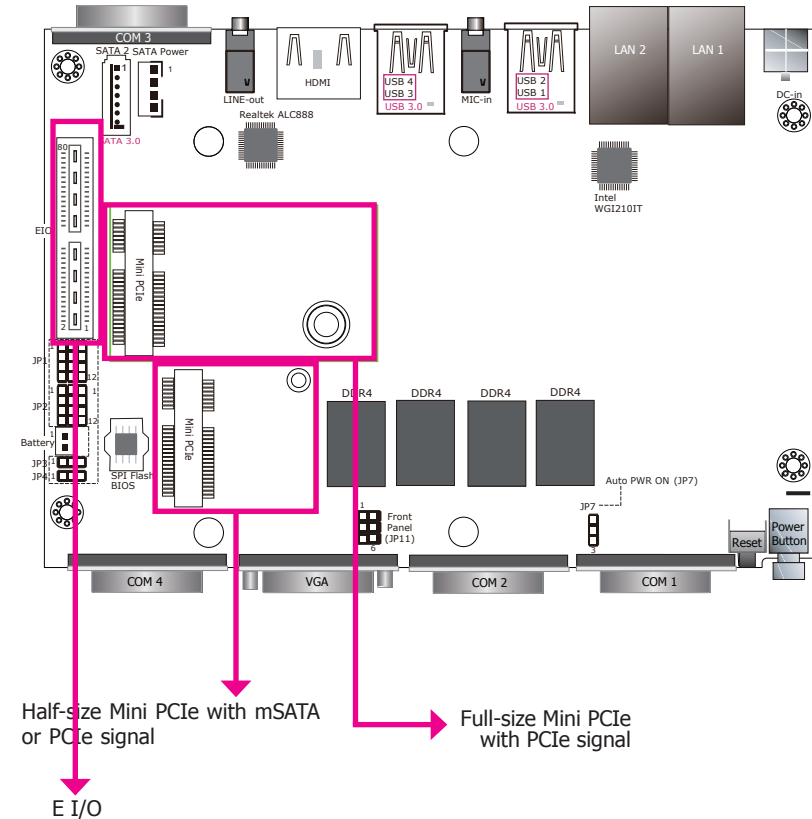


Mini PCI Express Slots

The Mini PCI Express slots on the system board are used to install one half-size and full-size Mini PCIe card. The half-size Mini PCIe slot can be inserted with either an mSATA card or a Mini PCIe card; please refer to Chapter 4 for more information on jumper settings for signal selection and Chapter 7 for the designated SATA port of this slot.

E I/O Connector

The E I/O connector supports a multitude of signals such as PCIe, DDI, USB, LPC, and SMBus. By connecting a proprietary expansion board to this connector, the system's I/O connectivity can be expanded.

Front Panel Connector

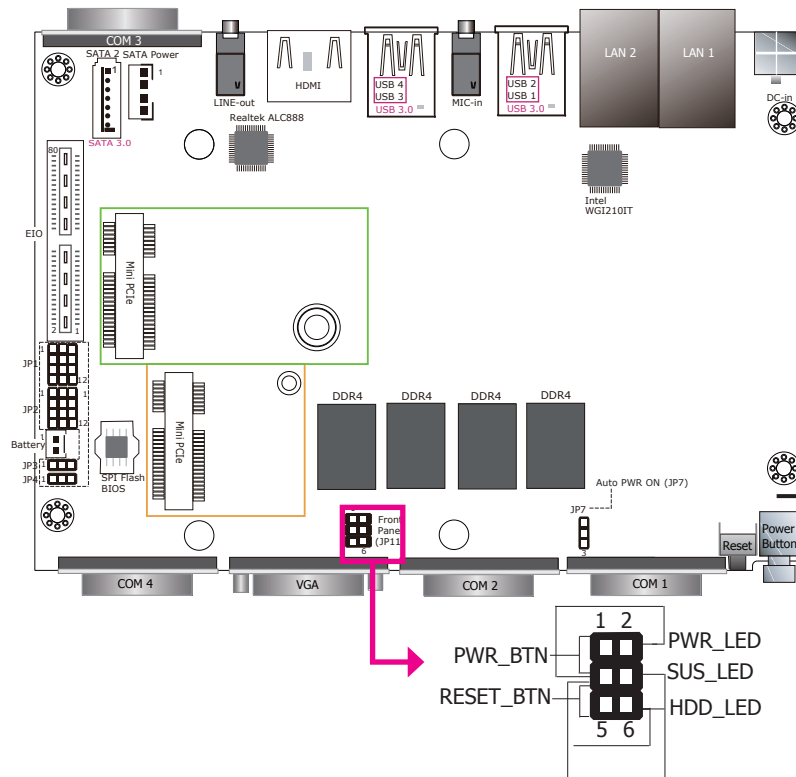

	Pin	Pin Assignment		Pin	Pin Assignment
HDD_LED	6	HDD Power	PWR_BTN	1	Power Button
	3	Ground		3	Ground
RESET_BTN	3	Ground	PWR_LED	2	Power LED
	5	RST Signal		3	Ground
			SUS_LED	3	Ground
				4	SUS LED

HDD LED (HDD_LED)

This LED will be lit when the hard drive is being accessed.

Reset Button (RESET_BTN)

This switch allows you to reboot without having to power off the system.

Power Button (PWR_BTN)

This switch is used to power on or off the system.


Status LED (SUS_LED)

When the system's power is on, this LED will be lit. When the system is in the S1 (POS - Power On Suspend) state, it will blink every second. When the system is in the S3 (STR - Suspend To RAM) state, it will blink every 4 seconds.

Power/Standby LED (PWR_LED)


This LED will blink when the system is in the standby mode. It indicates that there is power on the system board.

Standby Power LED

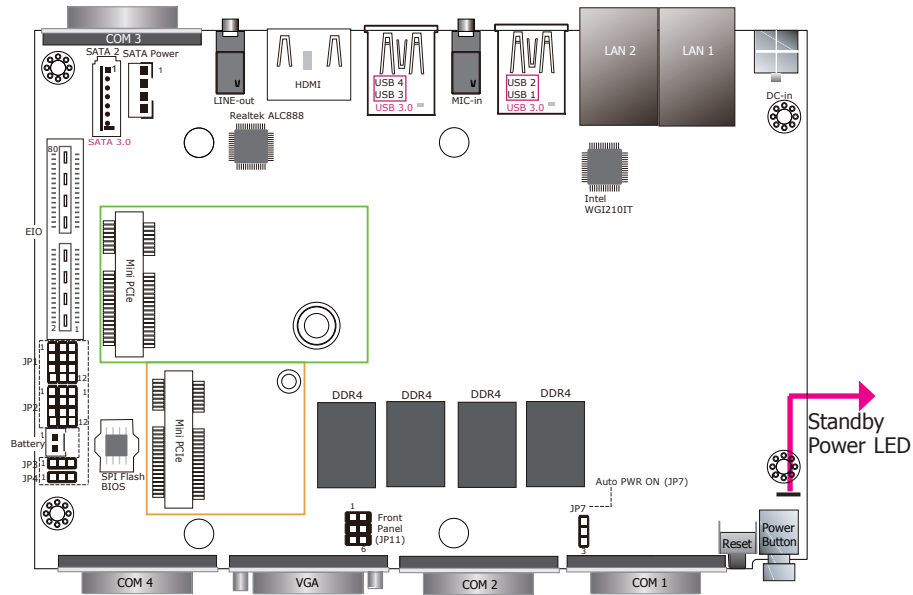

This LED will blink when the system is in the standby mode. It indicates that there is power on the system board. Power off the PC and then unplug the power cord prior to installing any devices. Failure to do so will cause severe damage to the motherboard and components.

Battery

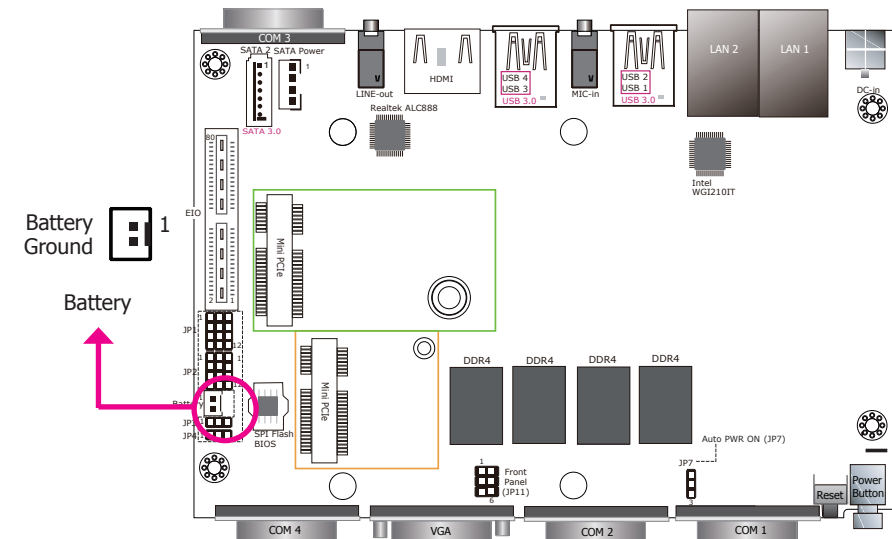


Connect to the battery connector

The lithium ion battery powers the real-time clock and CMOS memory. It is an auxiliary source of power when the main power is shut off.

Safety Measures

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommend by the manufacturer.
- Dispose of used batteries according to local ordinance.

COM (Serial) Ports (expansion board)

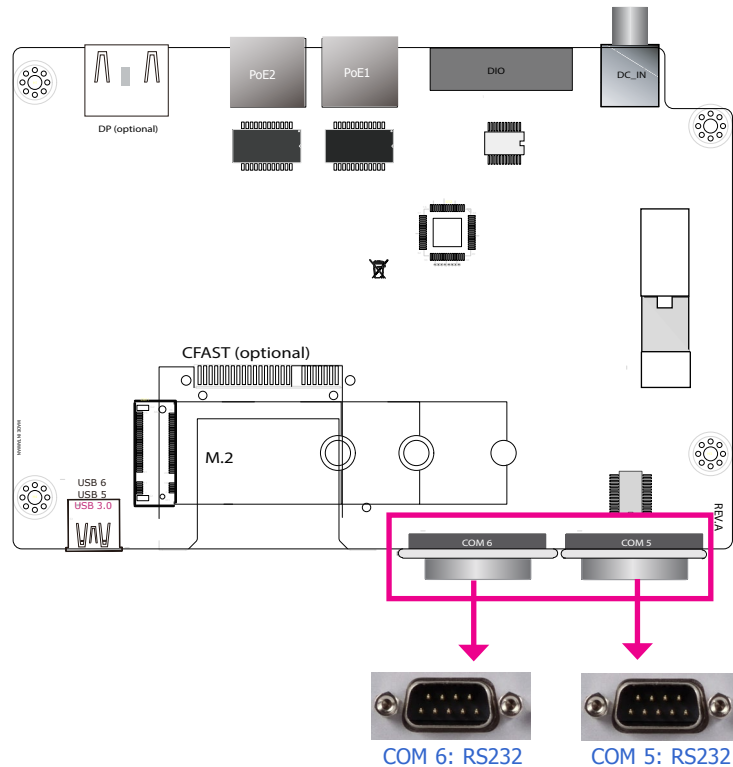


COM 5 and COM 6 are fixed at RS232.

BIOS Setting

Configure the serial ports in the "Advanced" menu (XCT5-2LPSE2C802U submenu) of the BIOS. Refer to Chapter 7 for more information.

LAN Ports (expansion board)

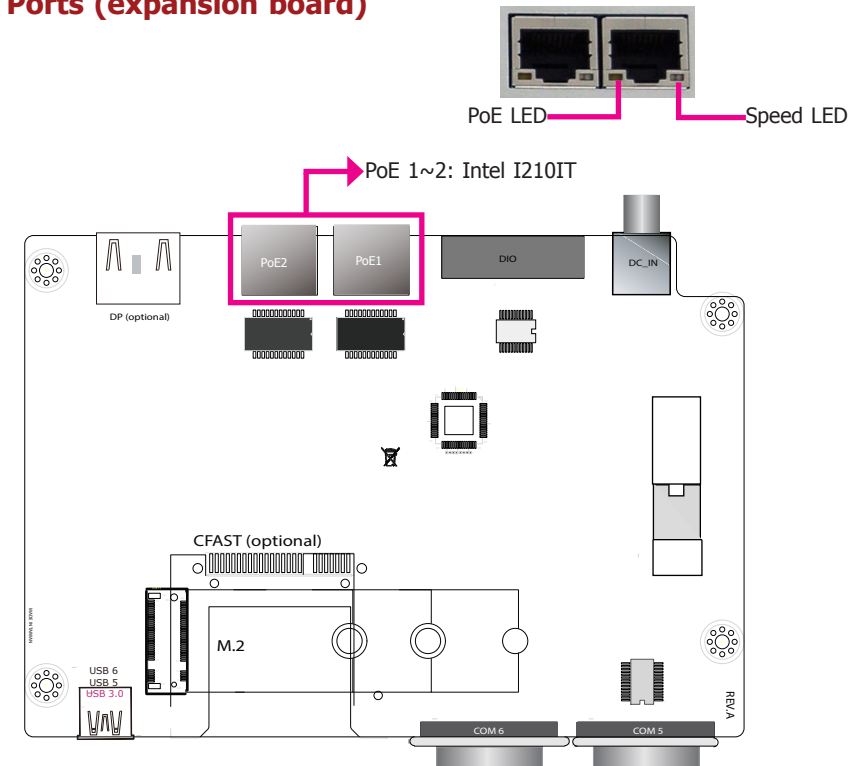


PoE LAN 1 and LAN 2 are PoE (Power over Ethernet) ports and are built on the Intel® I210IT PCI Express Gigabit Ethernet controller. With PoE (Power over Ethernet) support, the ports carry power to connected devices without the need for individual power supplies. Each port delivers up to 15.4 Watts of power to the connected devices that comply with IEEE 802.3af, for example, access points and VoIP phones.

PoE LED		Speed LED	
LED Behavior	Description	LED Behavior	Description
Off	The system is not powered on.	Off	10Mbps connection
Green	Supplying power over the Ethernet link.	Green	100Mbps connection
		Orange	1Gbps connection

Driver Installation

Install the LAN driver. Refer to Chapter 8 for more information.

Digital I/O Connector (expansion board)

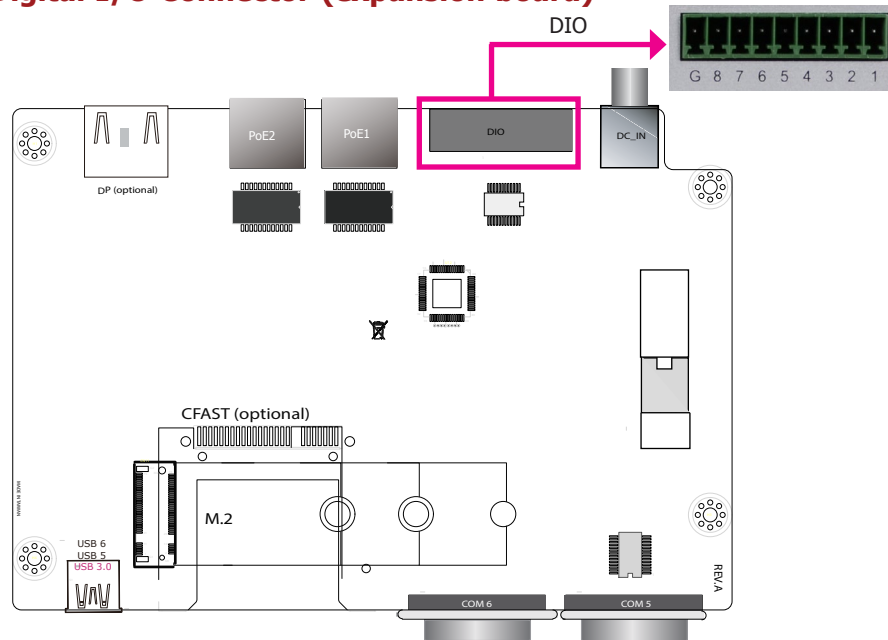


Digital I/O Connector

The Digital I/O connector provides 8 digital inputs or outputs to enable monitor and control of the state of the connected external devices. We have built support software called EAPI that enables the functionality of hardware components. Please contact our technical support or sales representatives for the support software package.

Pins	DIO
1	DIO0
2	DIO1
3	DIO2
4	DIO3
5	DIO4
6	DIO5
7	DIO6
8	DIO7
G	GND

Expansion Slots (expansion board)

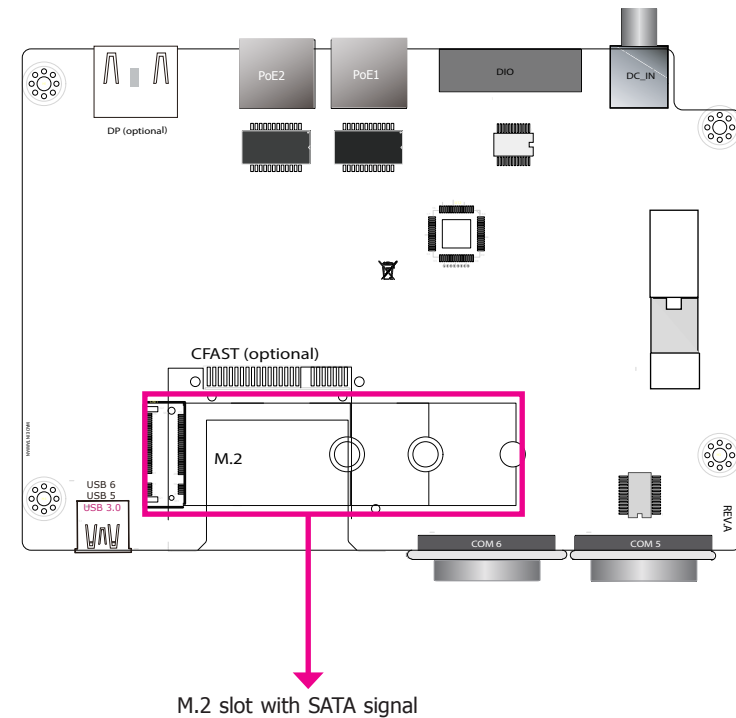


M.2 Slots

The M.2 slots on the top side of the expansion board are used to install M.2 (NGFF) modules. The M.2 Type 2280 (B Key) slot can be inserted with a SATA SSD card with the form factor of 42mm, 60mm or 80mm (default).

Display Interfaces (expansion board)

The display ports of the expansion board consist of the following:

- 1 DP++(optional)

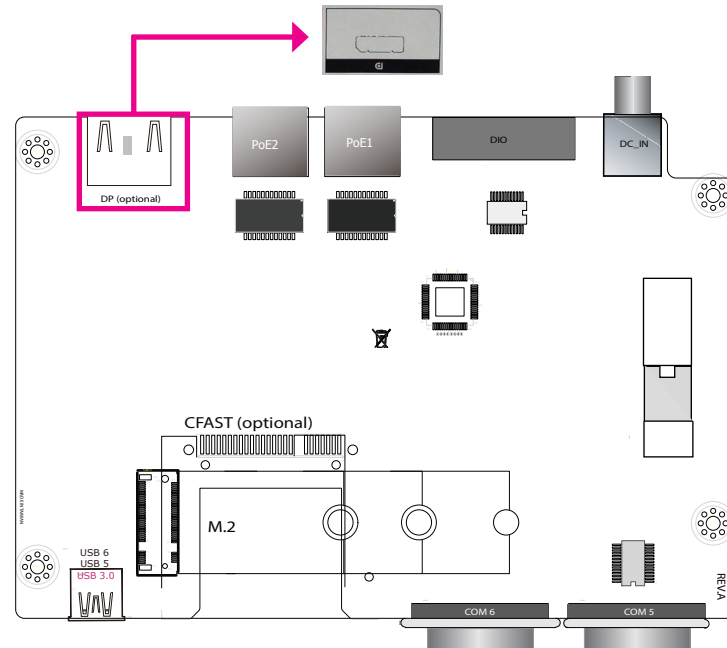

DP Port (BOM option)

The DP port is a digital display interface used to connect a display device such as a computer monitor. It is used to transmit audio and video simultaneously. The interface, which is developed by VESA, delivers higher performance than any other digital interfaces. Note that if this DP port is wired, the VGA port on the mainboard will not be available (BOM option). Please refer to "Display Interfaces" of the mainboard above.


BIOS Setting

Configure the display devices in the Advanced menu ("Video Configuration" submenu) of the BIOS. Refer to Chapter 7 for more information.

Driver Installation


Install the graphics driver. Refer to Chapter 8 for more information.

15~36V DC-in/DC-out (expansion board)

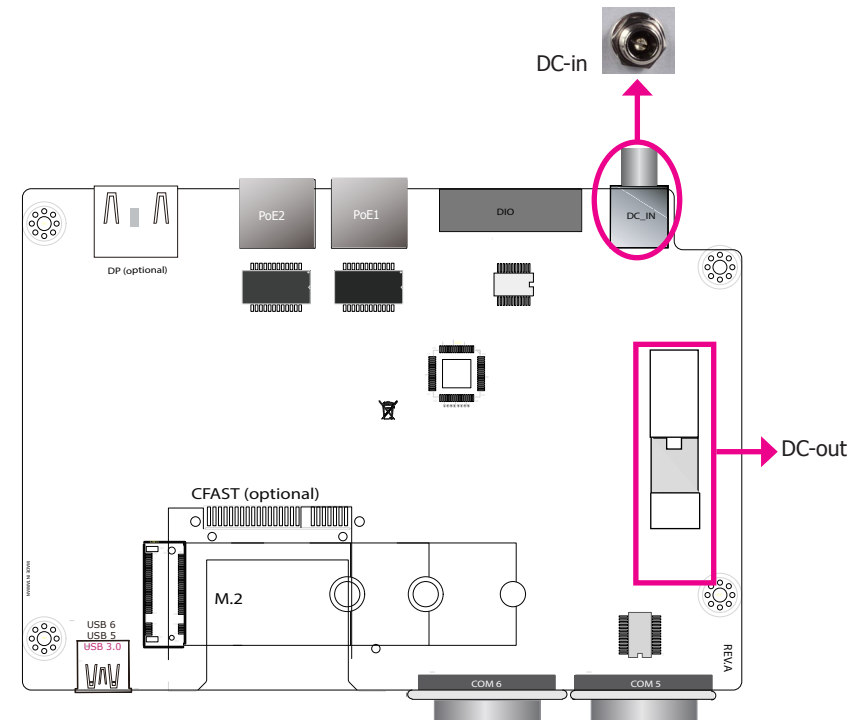

This DC-in jack is considered a low power solution. Connect a DC power cord to this DC-in jack. Using a voltage more than the recommended range may fail to boot the system or cause damage to the system board. The DC-out connector connects to the mainboard's DC-in connector to provide power to the system.

USB Ports (expansion board)

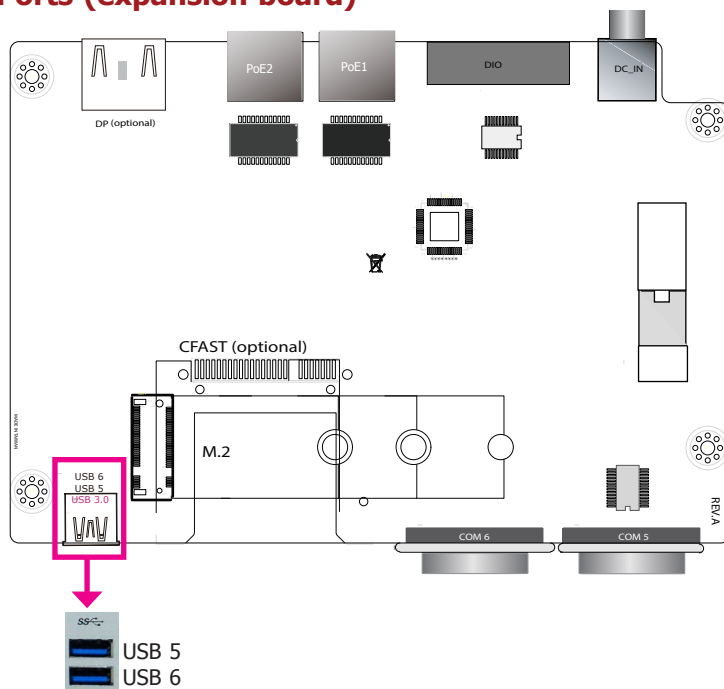

The expansion board is equipped with two onboard USB 3.0 ports (USB 5-6). USB devices allow data exchange between your computer and a wide range of simultaneously accessible external Plug and Play peripherals.

BIOS Setting

Configure the onboard USB in the Advanced menu ("USB Configuration" submenu) of the BIOS. Refer to Chapter 7 for more information.

Driver Installation

You may need to install the proper drivers in your operating system to use USB devices. Refer to Chapter 8 for more information.

Wake-On-USB Keyboard/Mouse

The Wake-On-USB Keyboard/Mouse function allows you to use a USB keyboard or USB mouse to wake up a system from the S3 (STR - Suspend To RAM) state.



Important:


If you are using the Wake-On-USB Keyboard/Mouse function for 2 USB ports, the +5V_standby power source of your power supply must support $\geq 1.5A$. For 3 or more USB ports, the +5V_standby power source of your power supply must support $\geq 2A$.

Chapter 6 - Mounting Options


Wall Mount

The wall mount kit includes the following:


- 2 Wall mount brackets
- Bracket screws

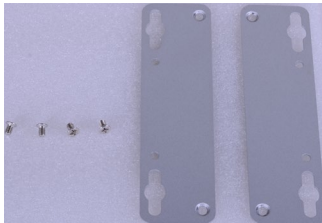


1. Remove the rubber feet from the bottom cover chassis. Or if the rubber feet are not attached to the chassis, use these screw holes to mount wall brackets.

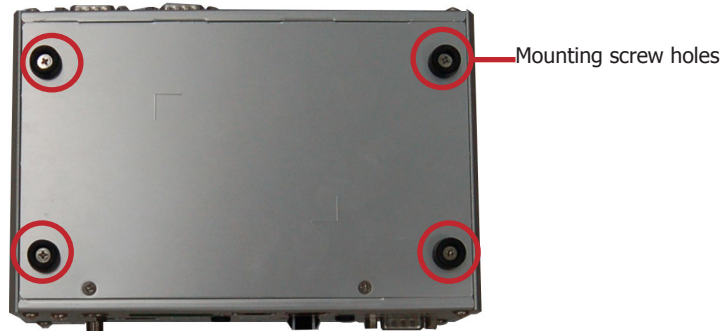

2. Use the provided mounting screws to attach the wall mount brackets to both sides on the bottom of the system.

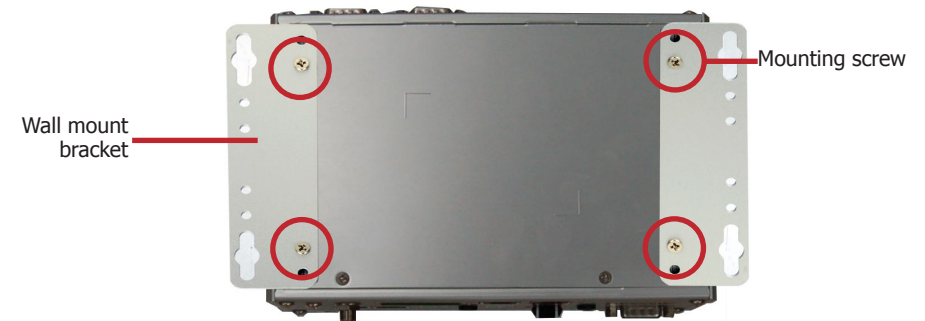

The following diagrams show the location and dimension of the wall mounting holes.

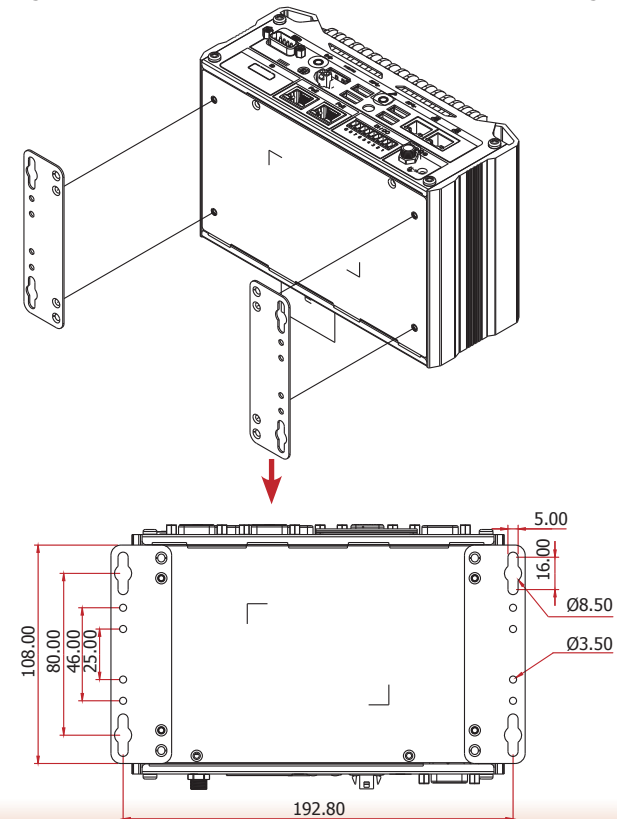


VESA Mount


Note:


The system unit used in the following illustrations may not resemble the actual one. These illustrations are for reference only.

The vesa mount kit includes the following:

- 1 VESA mount bracket A
- 2 VESA mount bracket B
- Bracket screws

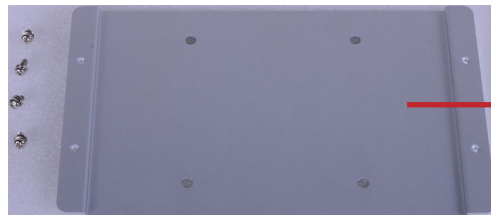

VESA bracket A

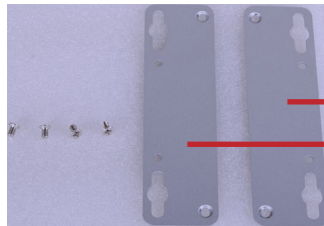

VESA bracket B


1. Attach the VESA mount bracket B to the left and right sides on the bottom of the system.




2. Attach the VESA mount bracket A to the back of your display using four screws as shown in the picture below.



3. Align VESA bracket A with VESA bracket B, and then use the provided mounting screws to attach both brackets to secure the system in place.

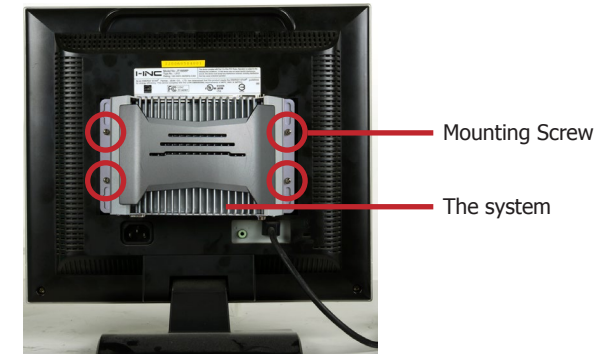

The following diagrams show the location and dimension of the vesa mounting holes.

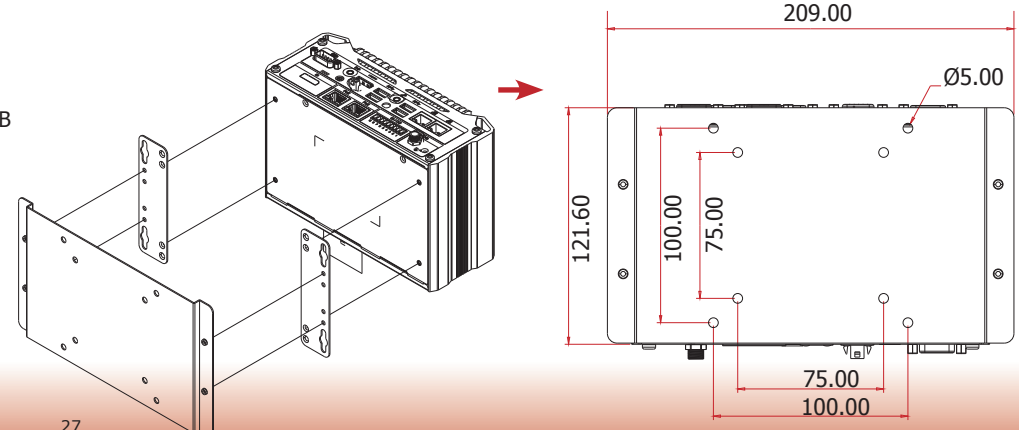

DIN Rail Mount




Note:

The system unit used in the following illustrations may not resemble the actual one. These illustrations are for reference only.

The DIN Rail mount kit includes the following:


- 1 DIN-rail mount clip
- 1 bracket
- Bracket screws

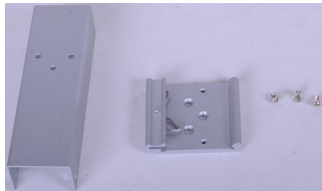

1. Locate the mounting screws for mounting the din-rail bracket on the chassis cover. Remove these screws and put them in a safe place for later use.



2. Align the mounting holes on the system and the mounting holes on the bracket, and then use the screws removed in step 1 to secure the bracket in place.
3. The 3 mounting holes on the bracket are used to affix the DIN-rail mount clip to the bracket.

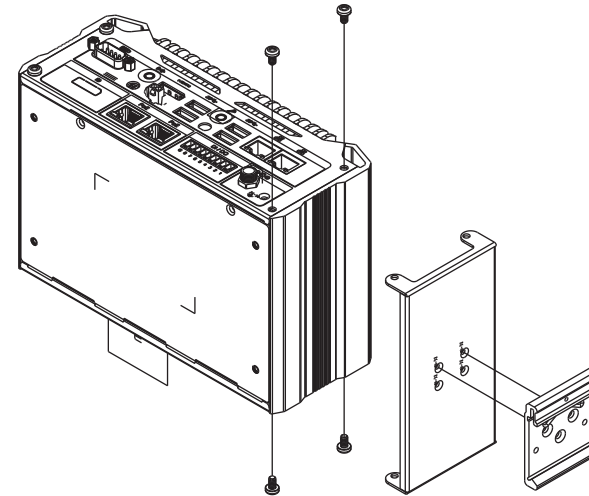

Chapter 7 - BIOS Setup

Overview

The BIOS is a program that takes care of the basic level of communication between the CPU and peripherals. It contains codes for various advanced features found in this system board. The BIOS allows you to configure the system and save the configuration in a battery-backed CMOS so that the data retains even when the power is off. In general, the information stored in the CMOS RAM of the EEPROM will stay unchanged unless a configuration change has been made such as a hard drive replaced or a device added.

It is possible that the CMOS battery will fail causing CMOS data loss. If this happens, you need to install a new CMOS battery and reconfigure the BIOS settings.


Note:

The BIOS is constantly updated to improve the performance of the system board; therefore the BIOS screens in this chapter may not appear the same as the actual one. These screens are for reference purpose only.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering the BIOS Setup Utility

The BIOS Setup Utility can only be operated from the keyboard and all commands are keyboard commands. The commands are available at the right side of each setup screen.

The BIOS Setup Utility does not require an operating system to run. After you power up the system, the BIOS message appears on the screen and the memory count begins. After the memory test, the message "Press DEL to run setup" will appear on the screen. If the message disappears before you respond, restart the system or press the "Reset" button. You may also restart the system by pressing the <Ctrl> <Alt> and keys simultaneously.

Legends

Keys	Function
Right and Left arrows	Moves the highlight left or right to select a menu.
Up and Down arrows	Moves the highlight up or down between submenu or fields.
<Esc>	Exit to the BIOS Setup Utility.
<F1>	Help
<F5>	Change values
<F6>	Change values
<F9>	Setup Defaults
<F10>	Save and Exit
<Enter>	Press <Enter> to enter the highlighted submenu.

Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.


Submenu

When "►" appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press <Enter>.

Insyde BIOS Setup Utility

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

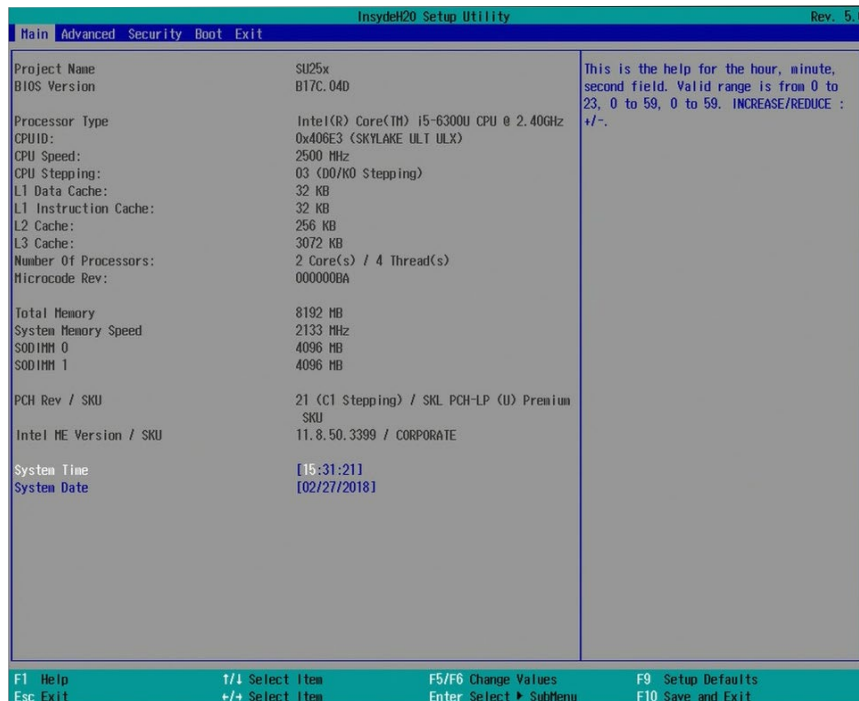

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

System Date

The date format is <month>, <date>, <year>. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1980 to 2099.


Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Important:

Setting incorrect field values may cause the system to malfunction.

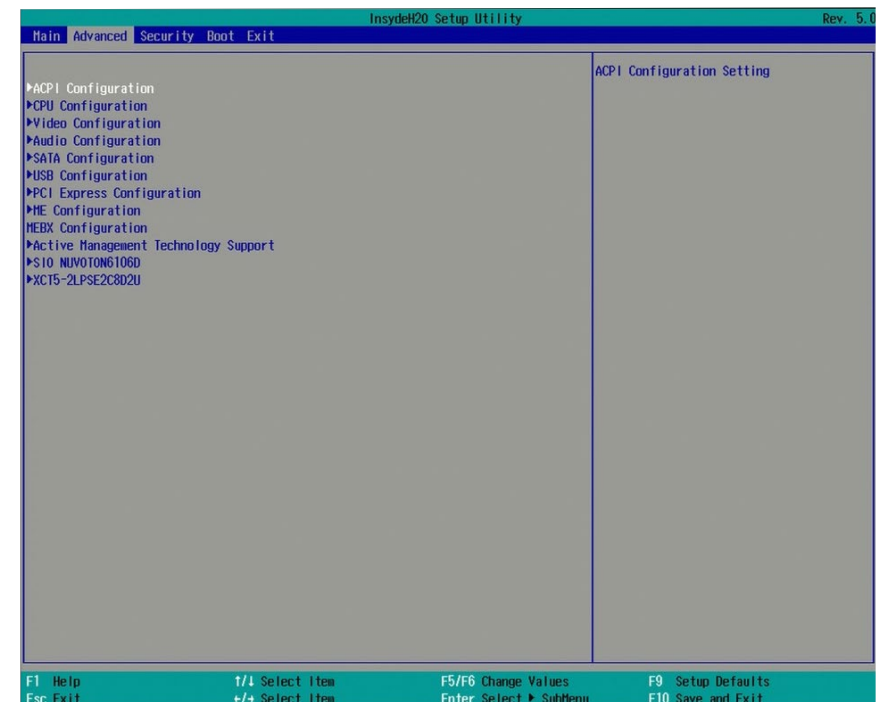

ACPI Settings

This section configures system ACPI parameters.



Wake on LAN

Enable or disable WOL (wake-on-LAN) to wake the system through an Ethernet adapter of the system. The default is enabled.

After G3


Specify what state the system should be in when power is re-applied after a power failure (G3, the mechanical-off, state).

S0 State The system is in working state.

S5 State The system is in soft-off state.

CPU Configuration

This section configures the CPU.

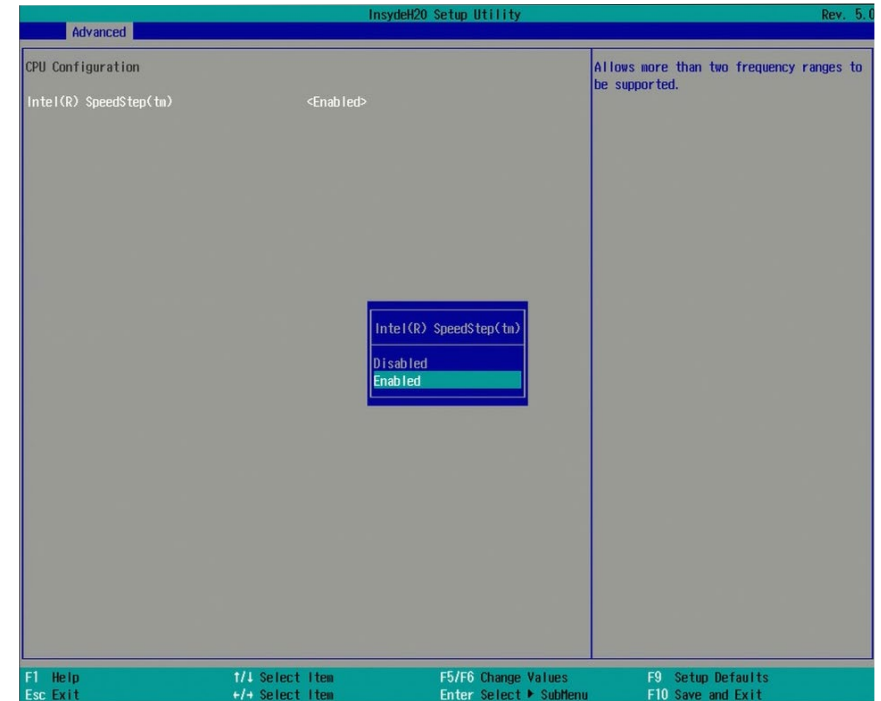


Intel® SpeedStep™

Enable or disable the Enhanced Intel SpeedStep® Technology, which helps optimize the balance between system's power consumption and performance. After it is enabled in the BIOS, you can enable the EIST feature using the operating system's power management feature.

Video Configuration

This section configures the video settings. Note that the configuration options may vary depending on the "Boot type" selected in the "Boot" menu.

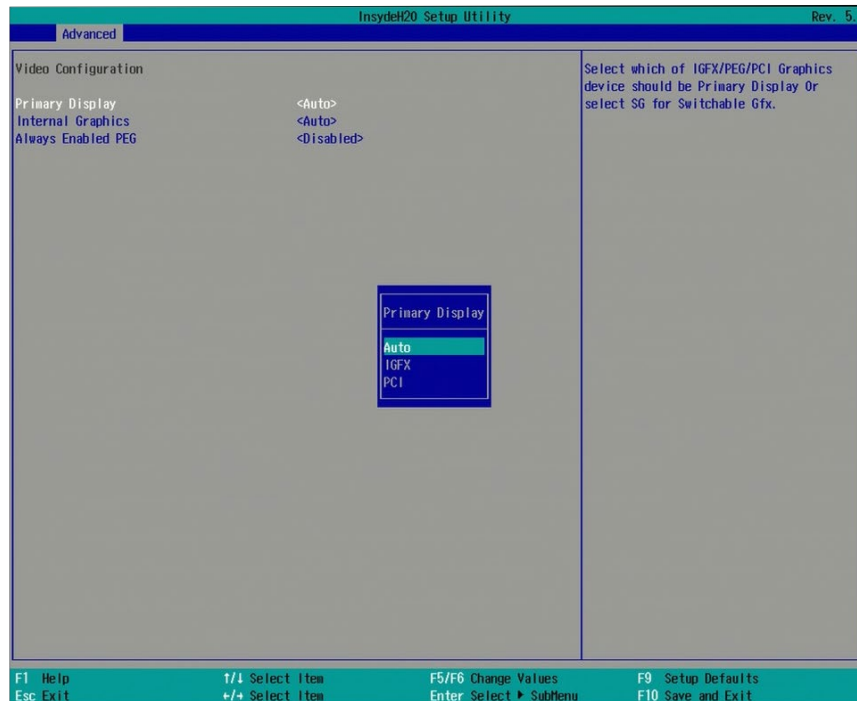

Primary Display

Note that this configuration is only shown if the "Boot Type" is set to "Dual" or "UEFI". Select the primary display for the system from the following options:

Auto mode: Automatic selection

PCI: PCI graphics devices

IGFX: IGFX (internal graphics) devices

PEG: PCIe graphics devices

Internal Graphics

Enable, disable or automatically detect the internal graphics.

Always Enabled PEG

Enable or disable the PCIe graphics devices.




Boot Display

Note that this configuration is only shown when the "Boot Type" is set to "Legacy Boot Type". Select the combination of the display at boot: VGA+HDMI or HDMI+VGA.

The options may vary depending on the display ports wired on the device.

Audio Configuration

This section configures the audio settings.

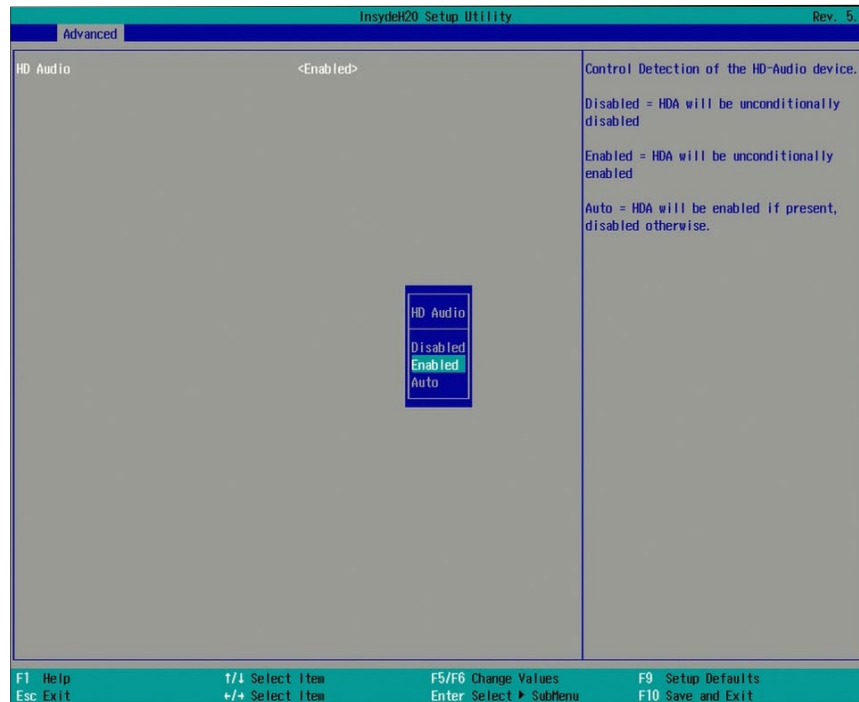

HD Audio

Control the detection of the high-definition audio devices.

Disabled

High-definition audio devices will be unconditionally disabled.

Enabled


High-definition audio devices will be unconditionally enabled.

Auto

High-definition audio devices will be enabled if present and disabled otherwise.


SATA Configuration

This section configures the SATA controllers and the hard disks.

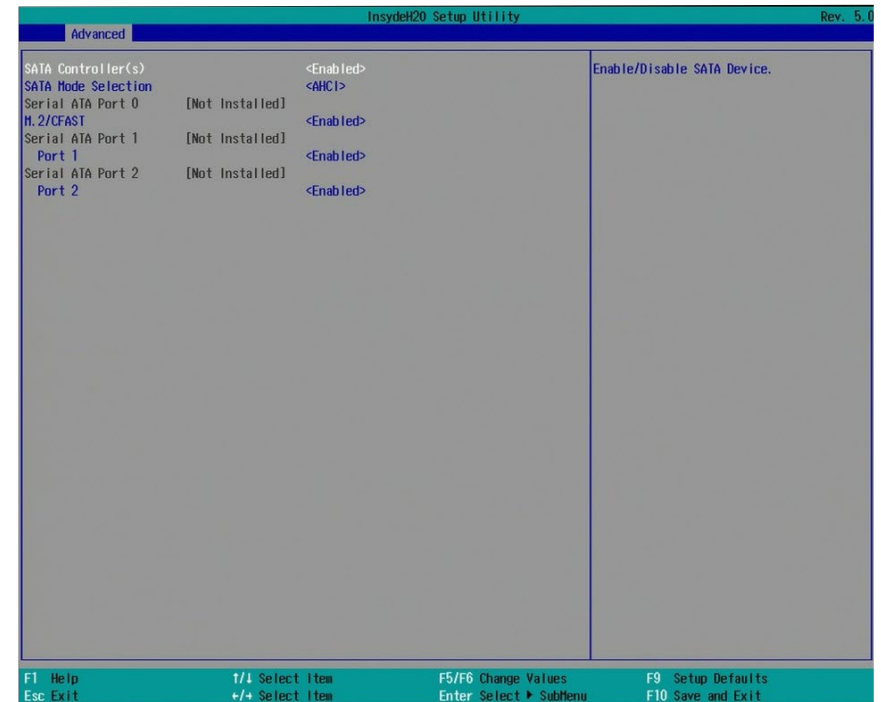

SATA Controller(s)

Enable or disable Serial ATA controllers.

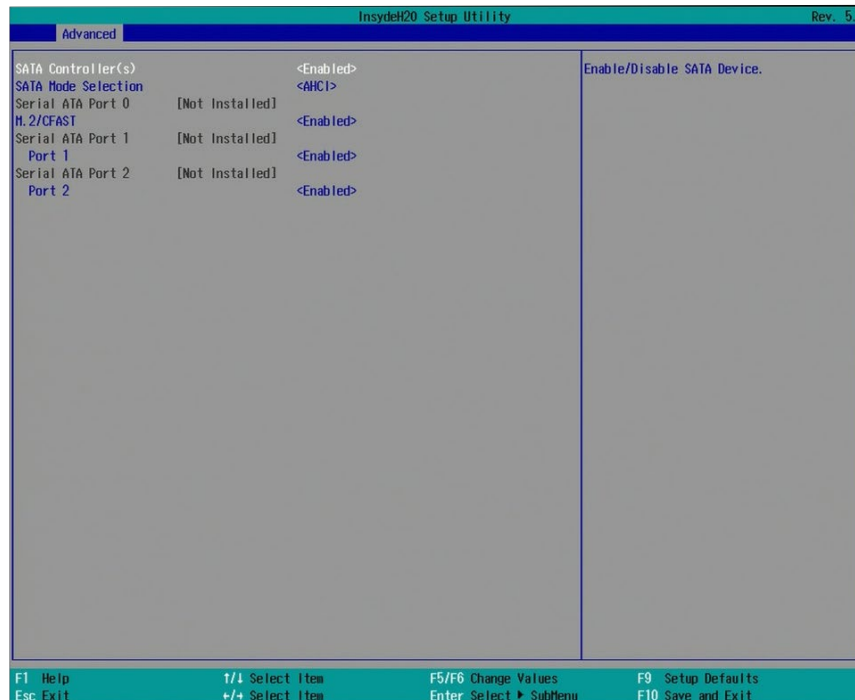

SATA Mode

The mode option shows how the SATA controller(s) operates.

AHCI Mode

This allows the Serial ATA devices to operate in the AHCI (Advanced Host Controller Interface) mode.

Serial ATA Port 0, 1 and 2

Enable or disable each serial ATA port.


M.2/CFast: Controls the SATA signal of the M.2 (default) or the CFast (optional) socket.

SATA Port 1: Controls the SATA signal of the half-size mini PCIe slot.

SATA Port 2: Controls the SATA signal of the SATA port on the system board.

USB Configuration

This section configures the parameters of the USB devices.

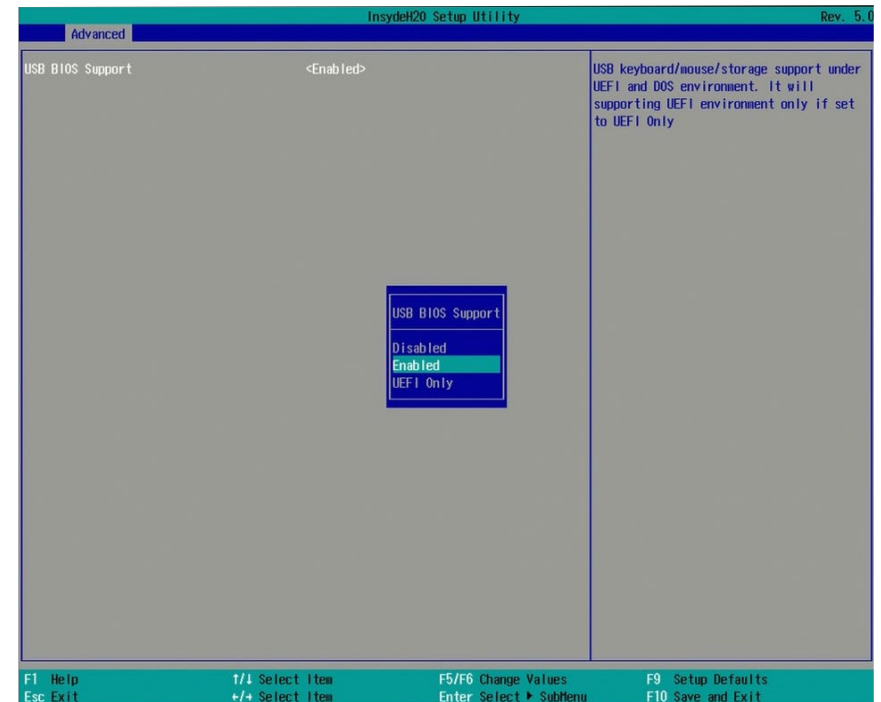

USB BIOS Support

Disabled

Disable USB keyboard/mouse/storage support.

Enabled


Enable USB keyboard/mouse/storage support under UEFI and DOS environment.

UEFI Only

Enable USB keyboard/mouse/storage support only under UEFI environment.

PCI Express Configuration

This section configures the settings of PCI Express root ports.

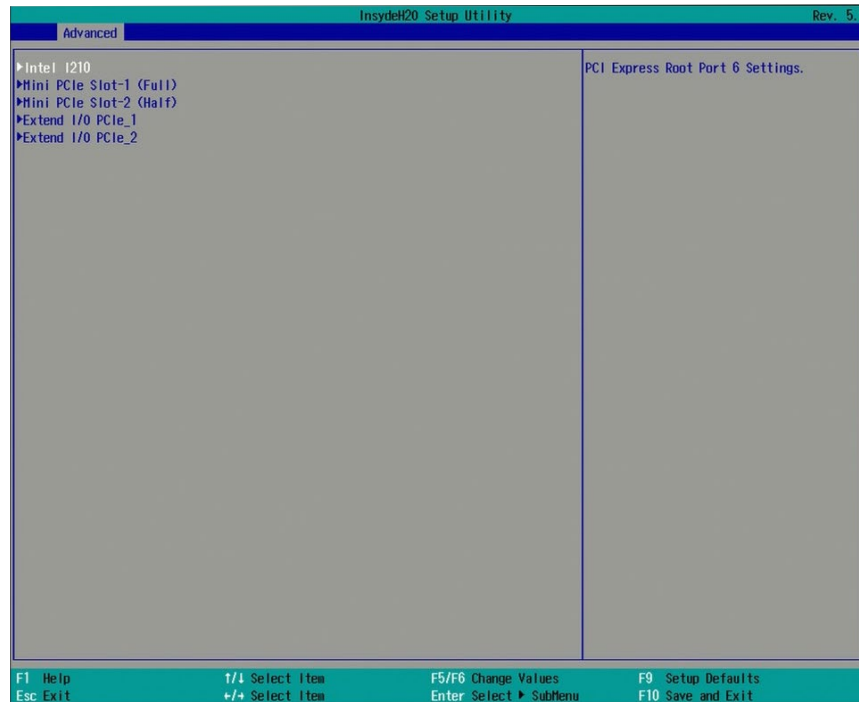

Intel I210

Controls the PCIe signal of the Intel I210IT controllers.

Mini PCIe Slot-1 (Full)

Controls the PCIe signal of the full-size Mini PCIe slot.


Mini PCIe Slot-2 (half)

Controls the PCIe signal of the half-size Mini PCIe slot.

Extend I/O PCIe_1

Extend I/O PCIe_2

Controls the PCIe signal of the extended I/O connector.

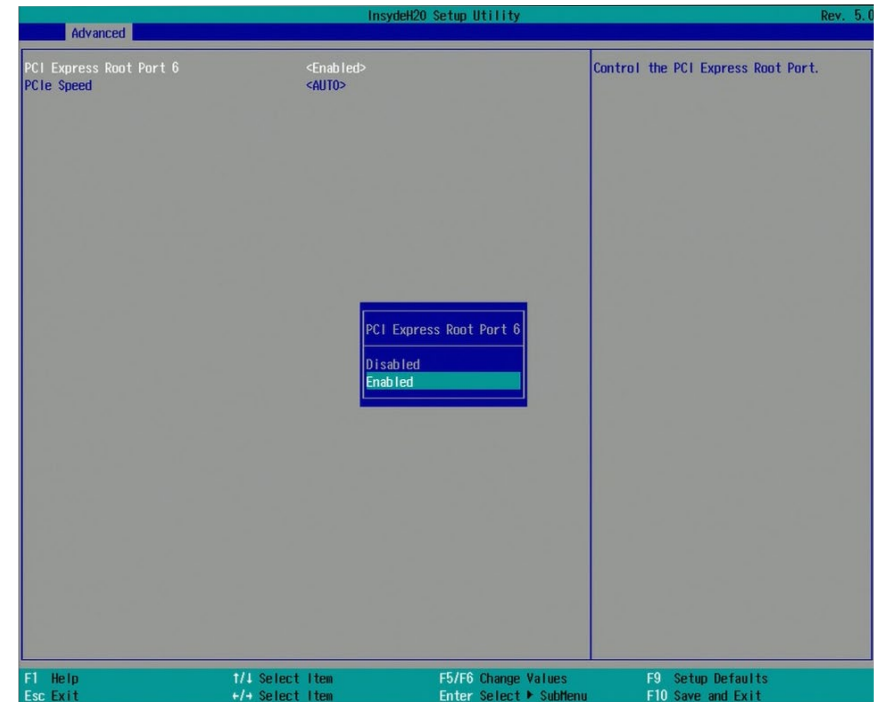


PCI Express Root Port

Enable or disable each PCI Express root port.


ME Configuration

This section configures flashing of the Intel® Management Engine.

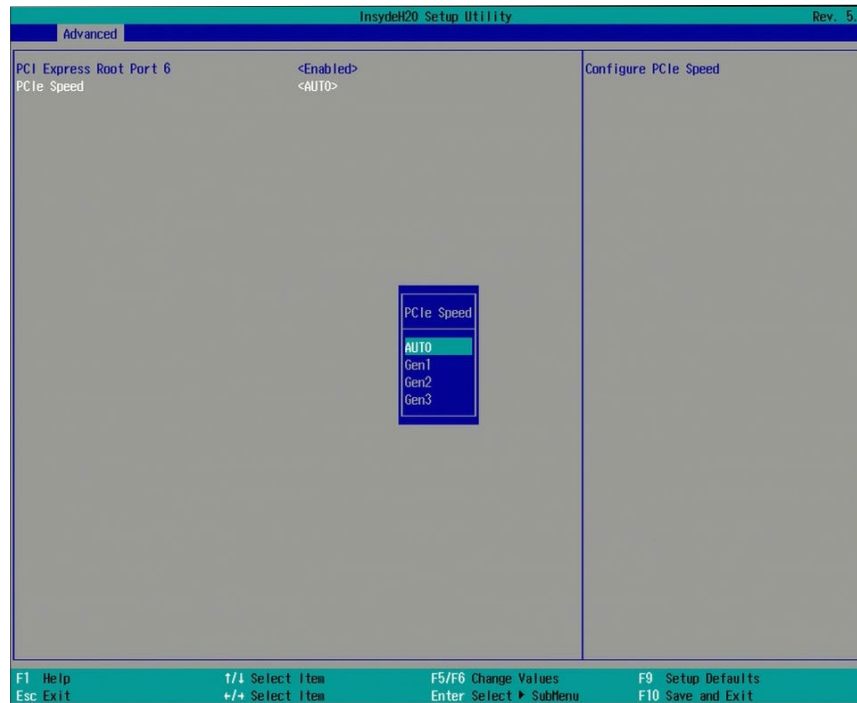

PCIe Speed

Select the speed of the PCI Express Root Port: Auto, Gen1 (2.5 GT/s), Gen2 (5 GT/s) or Gen3 (8 GT/s).

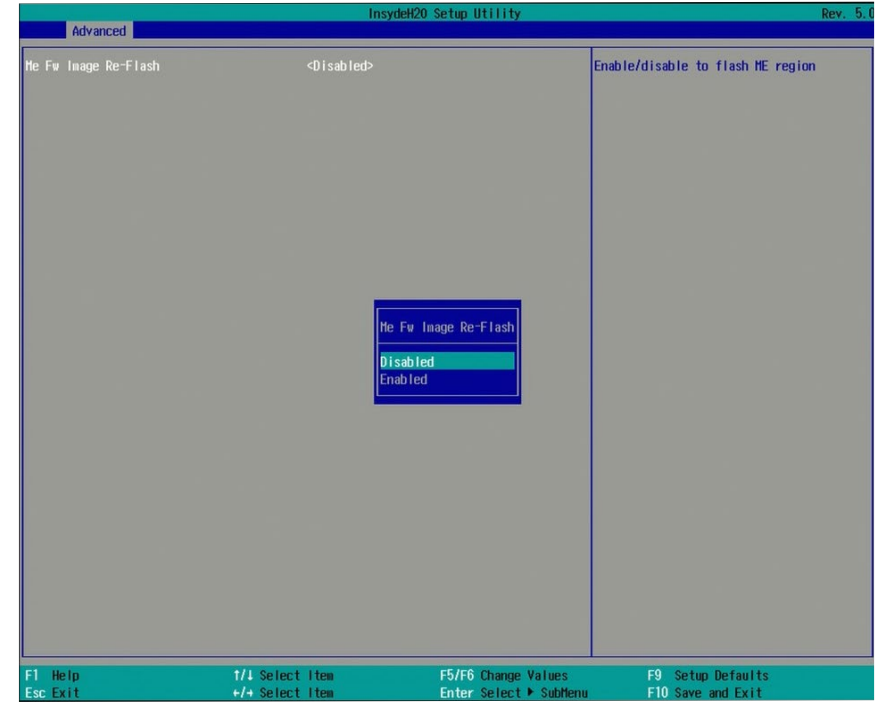


Me Fw Image Re-Flash

Enable or disable Intel® Management Engine firmware flashing.

Active Management Technology Support

The section allows you to enable or disable the Intel® Active Management Technology (Intel® AMT) BIOS extension. Refer to Chapter 9 - Intel AMT Settings for more information.

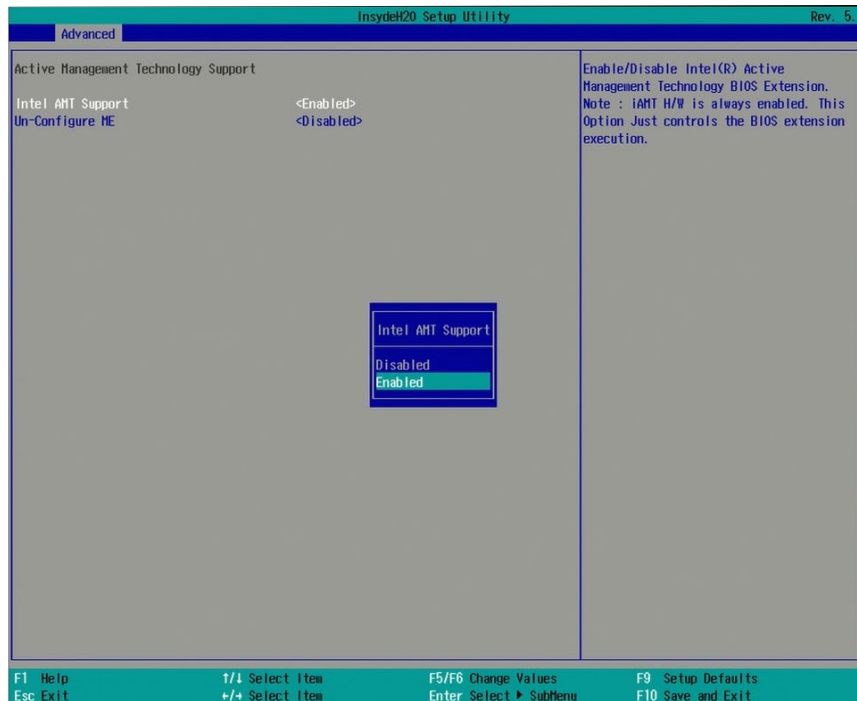

Intel AMT Support

Enable or disable Intel® Active Management Technology BIOS extension.

Un-Configure ME

Clears all ME related configurations without requiring a password on the next boot.

SIO NUVOTON6106D

This section configures the system super I/O chip parameters.



COM Port 1 to COM Port 4


Enable or disable each serial port.

Disable Disable this serial port.

Enable Enable this serial port.

Type

Choose RS232, RS422 or RS485 (Peer-to-Peer) for the serial port type for COM port 1 and 2.

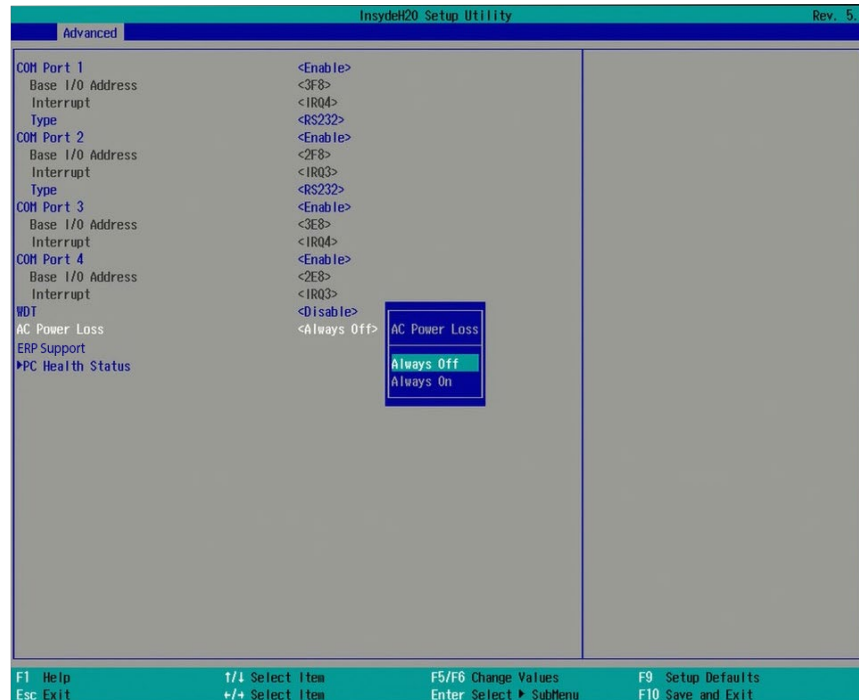

WDT

Enable or disable the watchdog function. A counter will appear if you select to enable WDT. Input any value between 1 to 255.

AC Power Loss

Set the AC power loss to Always off or Always on. When set to Always off, the system's status will be power-off after an AC power loss event. When set to Always on, the system's status will be power-on after an AC power loss event.

ERP Support

Enable or disable ERP (Energy-related Products) support. Disable the ERP support to allow the system to consume power so it may continue to supply power to devices on the system such as the USB and LAN ports. Or enable the ERT support to not allow the system to consume power in S4 (hibernate) and S5 (soft-off) states. The default is disabled.




Note:

WOL (wake-on-LAN) will be disabled if ERP Support is enabled.


PC Health Status

This section displays PC health status.

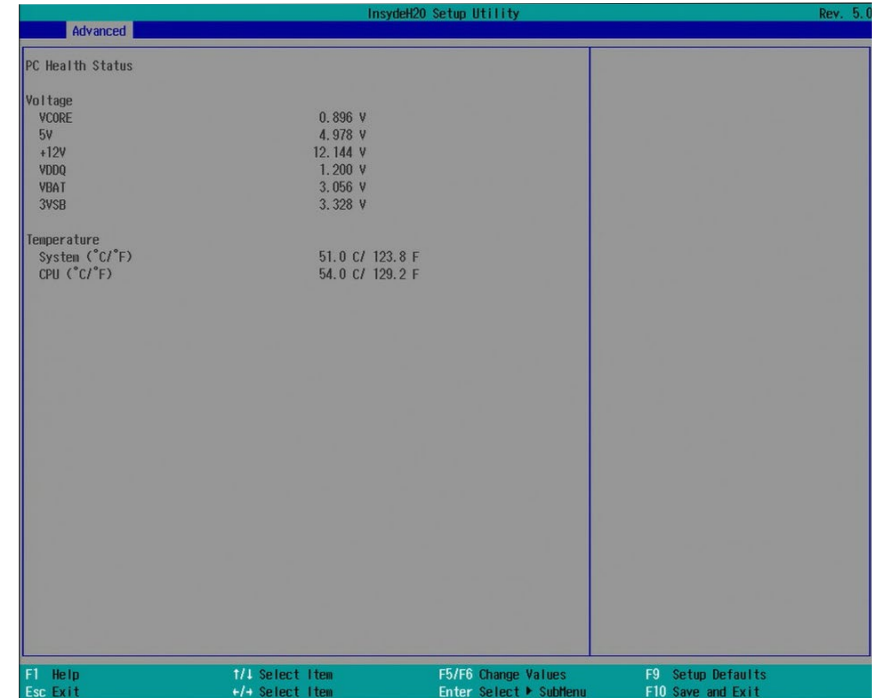

XCT5-2LPSE2C8D2U

The section allows you to configure the COM ports on the expansion board.

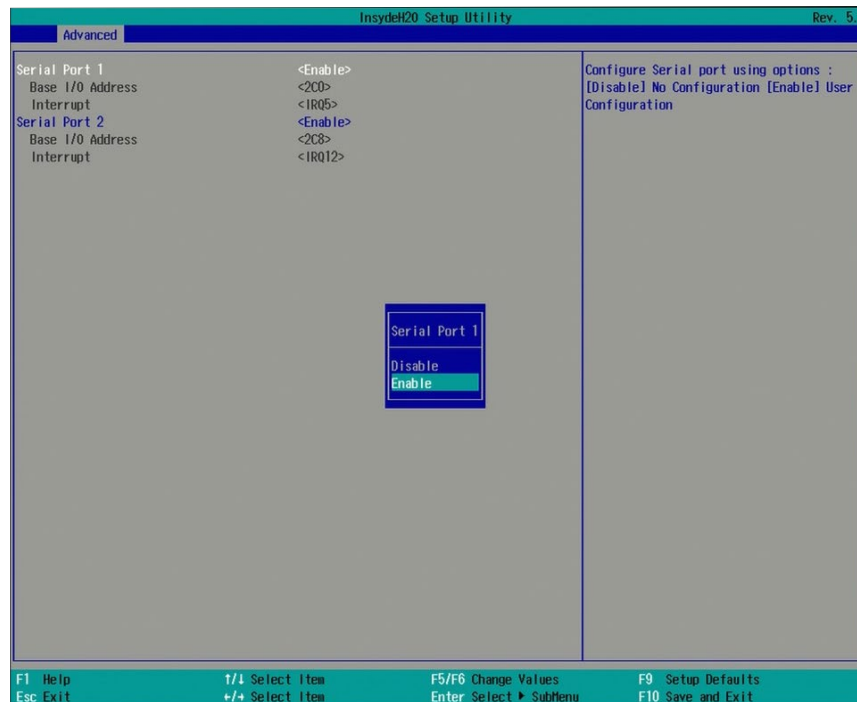**Serial Port 1 (COM 5) and Serial Port 2 (COM 6)**


Enable or disable each serial port.

Disable Disable this serial port.

Enable Enable this serial port.

Security

This section configures the Trusted Platform Module (TPM) function and the HDD security.

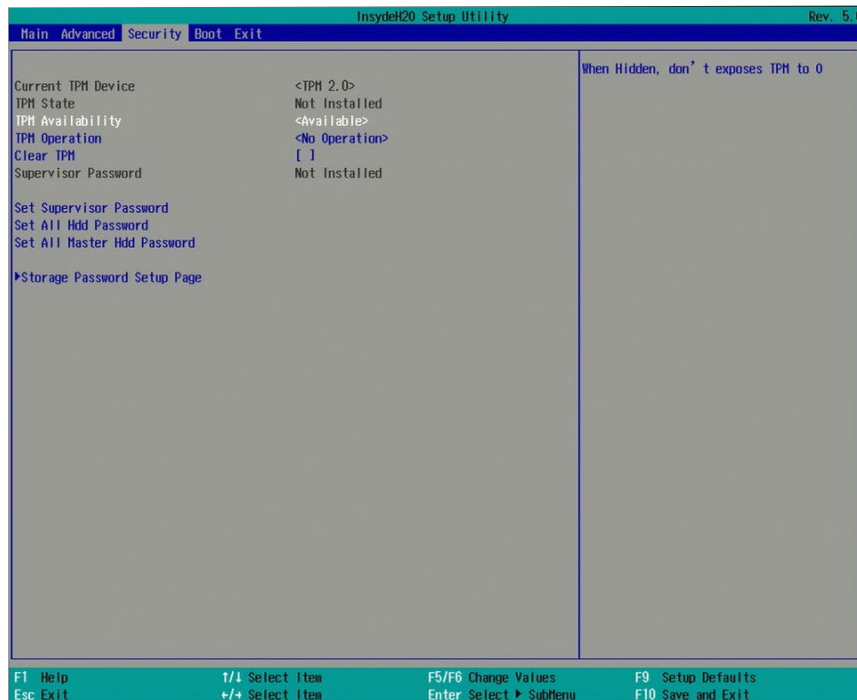

TPM Availability

Show or hide TPM availability and its configurations.


TPM Operation

Enable or disable the TPM function. It displays the following options:

- No Operation: No changes to the current state.
- Disable: Disable and deactivate TPM.
- Enable: Enable and activate TPM.

Clear TPM

Remove all TPM ownership contents.

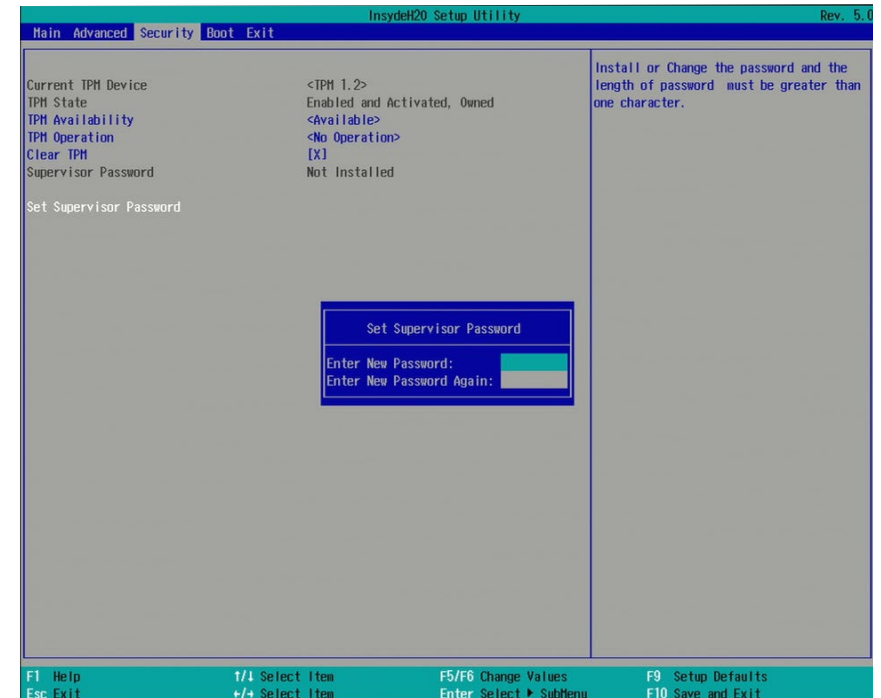


Set Supervisor Password

Set the administrative password for entering the BIOS utility or upon the entering of the power-on self-test (POST) process. The length of the password must be greater than 1 character and less than or equal to 10 characters.

Power-on Password

If you select to set the supervisor password, this option will be shown. Enable or disable the system to require password at boot.

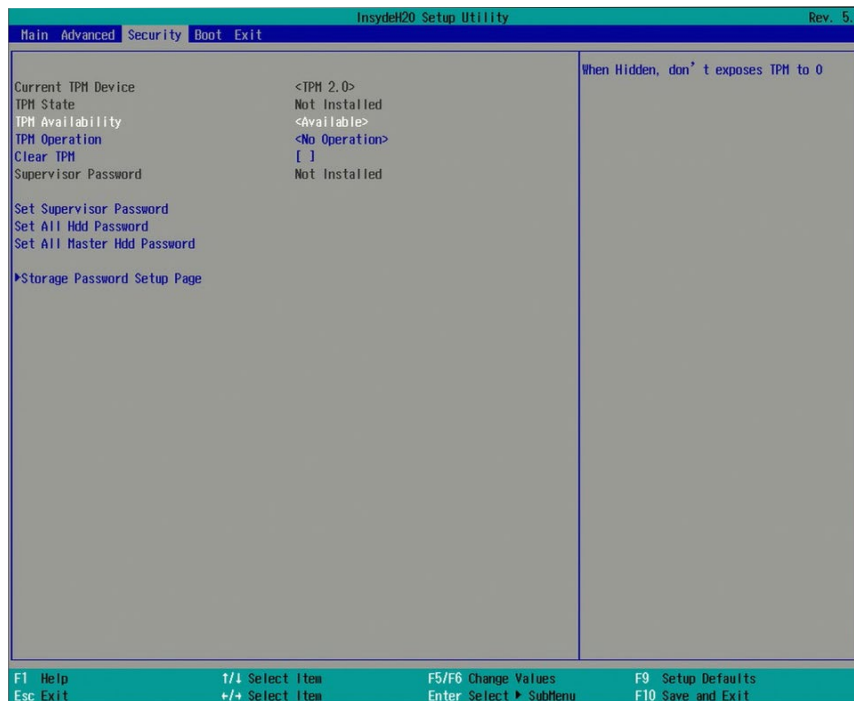

Security Mode Description

Lock: HDD security status is enabled and locked.

Unlock: HDD security status is enabled and locked.

Change: HDD security status is unlocked and users are allowed to change the password.

Disable: Remove the password from the device.

No Access: HDD Security status is not enabled.

Set Storage Password

Set all HDD password. The length of password must be greater than one character.

Set master HDD password

Set Master Hdd Password. The length of password must be greater than one character and less than or equal to 32 characters.

Set All Hdd Password

Set the user password for all HDDs. The length of the password must be greater than one character and less than or equal to 32 characters.

Set All Master Hdd Password

Set the master password for all HDDs. The length of the password must be greater than one character and less than or equal to 32 characters.

Storage Password Setup Page


Set the storage password for each detected device. The following configuration options will be shown:

(Device Name)

Select this option to set a password for the selected device.

Boot

This section configures boot options.

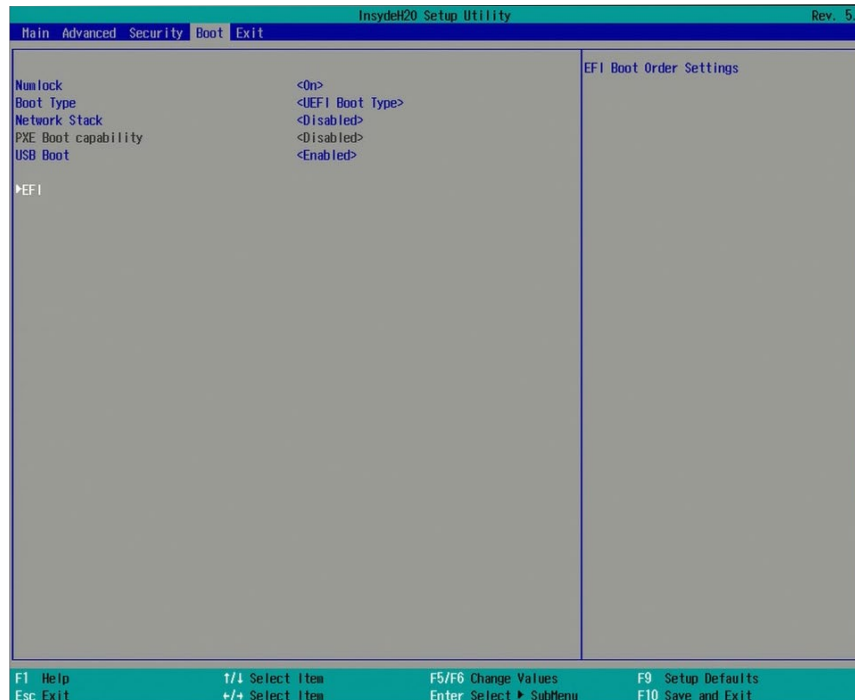

Numlock

Select the power-on state for the Numlock key.

Boot Type

Select the boot type. The options are Dual Boot Type, Legacy Boot Type or UEFI Boot Type.

Network Stack

This option is shown only when the boot type is set to Dual or UEFI. Enable or disable UEFI network stack. It supports the operation of these functions or software: Windows 8 BitLocker Network Unlock, UEFI IPv4/IPv6 PXE and legacy PXE option ROM.

PXE Boot to LAN (Legacy Boot Type)/PXE Boot Capability (Dual Boot Type)


Enable or disable Preboot eXecution Environment (PXE) boot to LAN.

USB Boot

Enable or disable booting to USB boot devices.

Boot Device Priority

This section configures legacy boot order. This menu is shown only when the boot type is set to "Legacy" or "Dual".

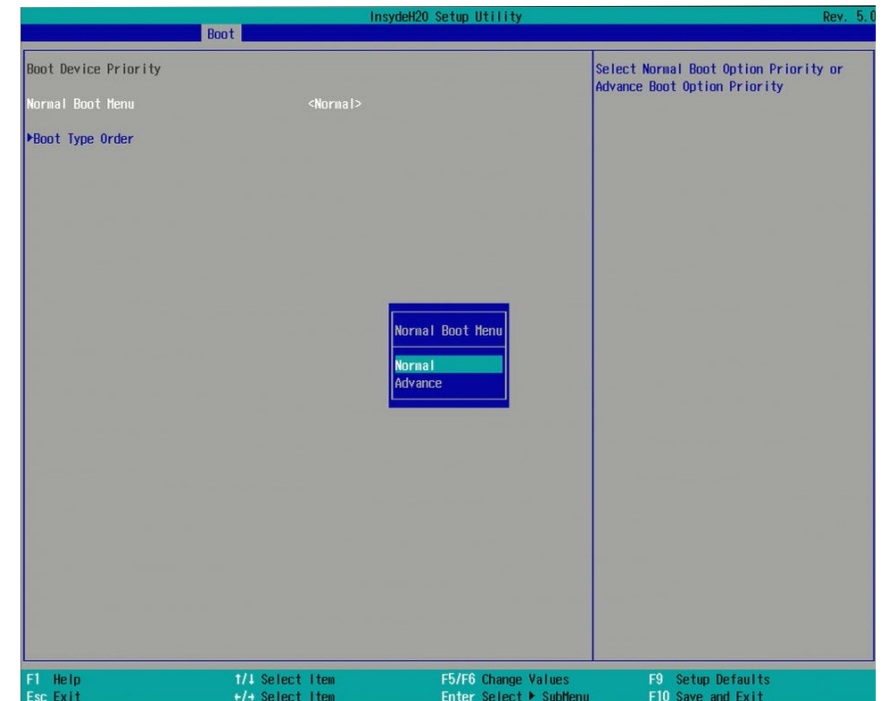

Boot Menu

Normal


For this option, determine the boot order for the devices within each category. Use + and - keys to arrange the priority of the boot devices in the list. The first device in the list has the highest boot priority.

Advance

For this option, determine the boot order for all bootable devices. Use + and - keys to arrange the priority of the detected boot devices in the list. The first device in the list has the highest boot priority.

Exit

This section configures the parameters for exiting BIOS setup utility.

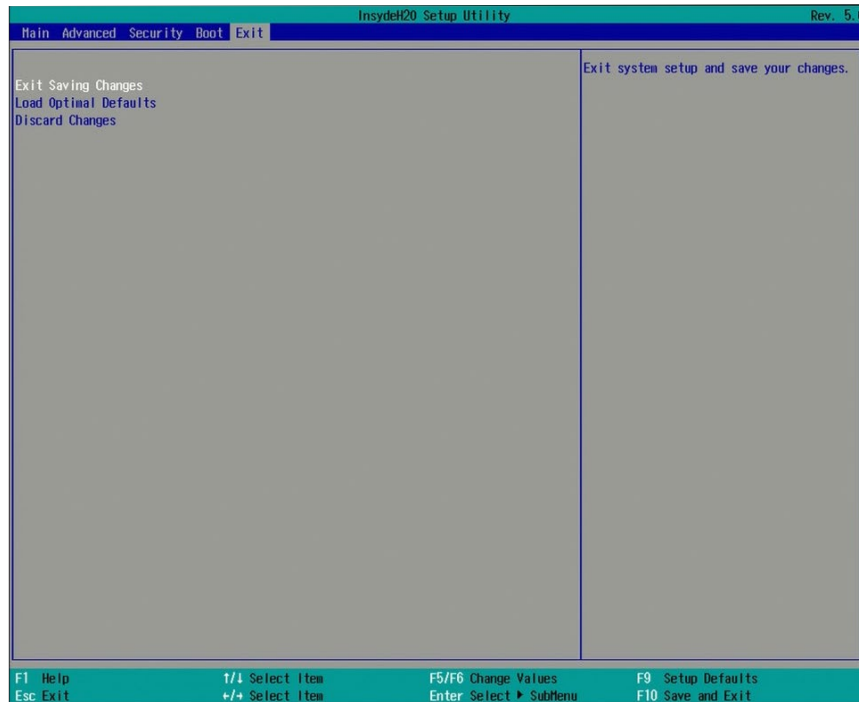

Exit Saving Changes

Select this field and press <Enter> to exit BIOS setup and save your changes.

Load Optimal Defaults

Select this field and press <Enter> to load the optimal defaults.

Discard Changes

Select this field and press <Enter> to exit the BIOS setup without saving your changes.

Updating the BIOS

To update the BIOS, you will need the new BIOS file and a flash utility. Please contact technical support or your sales representative for the files and specific instructions about how to update BIOS with the flash utility.

When you download the given BIOS file, you may find a BIOS flash utility attached with the BIOS file. This is the utility for performing BIOS updating procedure. For your convenience, we will also provide you with an auto-execution file in the BIOS file downloaded. This auto-execution file will bring you directly to the flash utility menu soon after system boots up and finishes running the boot files in your boot disk.

```

Read file successfully. (path= "platform.ini")

Information
Please do not remove the AC power

Insyde H2OFFT (Flash Firmware Tool) Version (SEG) 100.00.08.10
Copyright(c) 2012 - 2016, Insyde Software Corp. All Rights Reserved.

Initializing
Current BIOS Model name: SU25x
New BIOS Model name: SU25x

Current BIOS version: 68.08A
New BIOS version: 68.08A

Updating Block at FFFFF000h
0%      25%      50%      75%      100%
C:\SU25x>_

```

Notice: BIOS SPI ROM

1. The Intel® Management Engine has already been integrated into this system board. Due to the safety concerns, the BIOS (SPI ROM) chip cannot be removed from this system board and used on another system board of the same model.
2. The BIOS (SPI ROM) on this system board must be the original equipment from the factory and cannot be used to replace one which has been utilized on other system boards.
3. If you do not follow the methods above, the Intel® Management Engine will not be updated and will cease to be effective.



Note:

- a. You can take advantage of flash tools to update the default configuration of the BIOS (SPI ROM) to the latest version anytime.
- b. When the BIOS IC needs to be replaced, you have to populate it properly onto the system board after the EEPROM programmer has been burned and follow the technical person's instructions to confirm that the MAC address should be burned or not.

Chapter 8 - Supported Software

The system requires you to install drivers for some devices to operate properly. To download the latest driver, please go to the DFI Download Center:

<http://www.dfi.com/DownloadCenter>

Once you are in the Download Center page, select your product or type the model name and click "Search" to find product-related resources such as documentation and drivers.

Drivers are available for the following devices in Windows 7, 8 and 10:


- Intel® Chipset Device Software
- Intel® Graphics Driver
- Intel® LAN Driver
- Kernel Mode Driver Framework (For Windows 7 only)
- Intel® ME Driver
- Intel® USB 3.0 Driver (For Windows 7 and Windows 8.1)
- Audio Driver
- Intel® Serial IO Driver

Intel Chipset Device Software


The Intel® Chipset Device Software is used for updating Windows® INF files so that the Intel chipset can be recognized and configured properly in the system.

To install the utility, follow these steps:


1. Setup is ready to install the utility. Click "Next".

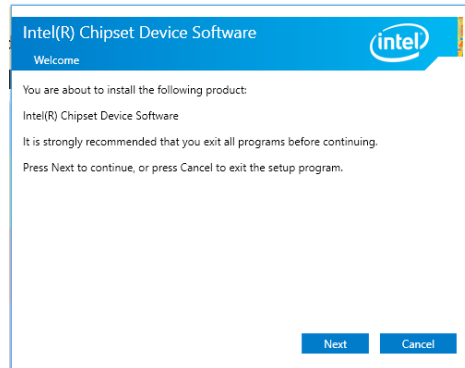


2. Read the license agreement, and then click "Yes".

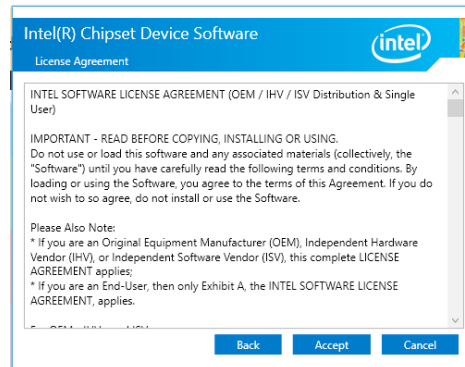

3. Go through the readme document for system requirements and installation tips, and then click "Next". Please wait while the installation is in progress.

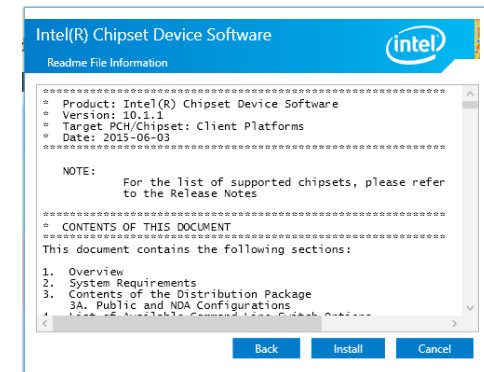

4. Please wait while the installation is in progress.

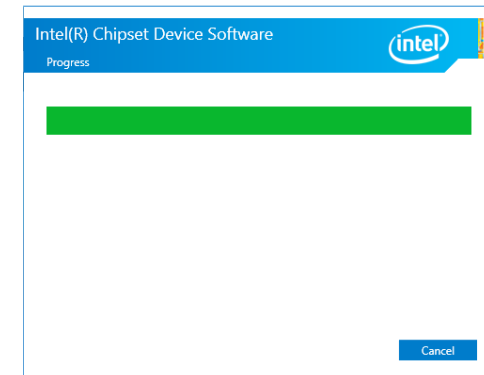


5. Click "Restart Now" to allow the new software installation to take effect.



Intel Graphics Driver

To install this driver, follow these steps:


1. Setup is now ready to install the graphics driver. Click "Next".

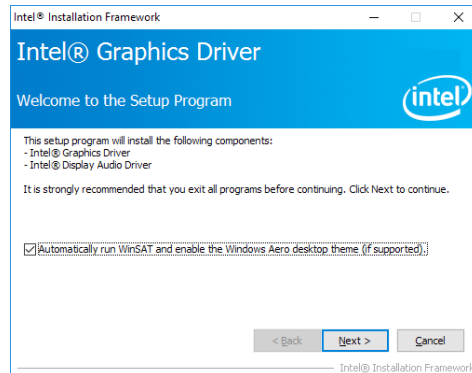


By default, the "Automatically run WinSAT and enable the Windows Aero desktop theme" is enabled. When this is enabled and after the system reboots, the screen will turn blank for 1 to 2 minutes (while WinSAT is running) before the Windows 7/ Windows 8.1/ Windows 10 desktop appears. The "blank screen" period is the time Windows is testing the graphics performance.

We recommend that you skip this process by disabling this function and then click "Next".


2. Read the license agreement, and then click "Yes".

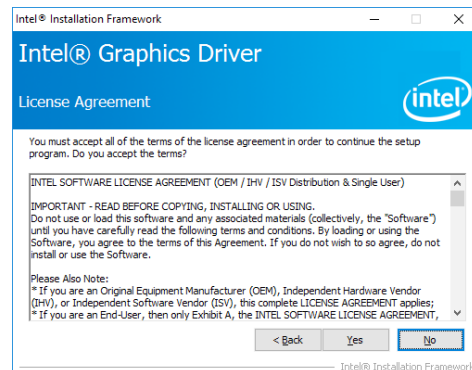

3. Go through the readme document for system requirements and installation tips, and then click "Next".

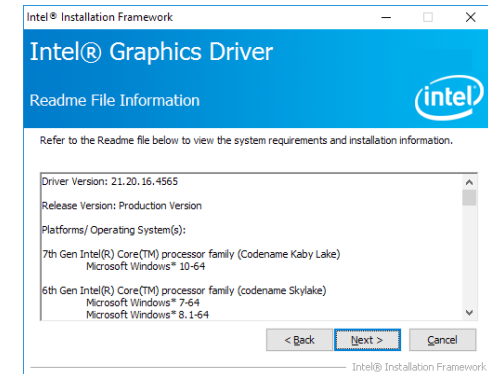


4. Setup is now installing the driver. Click "Next" to continue.

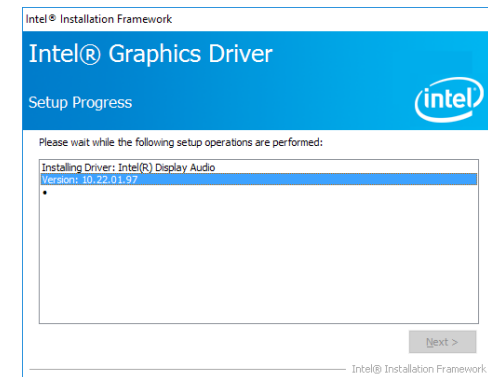

5. Click "Yes, I want to restart this computer now", and then click "Finish".


Restarting the system will allow the new software installation to take effect.

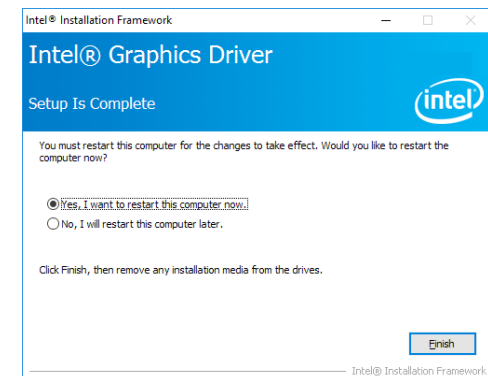


Intel LAN Driver

To install this driver, follow these steps:


1. Setup is preparing to install the driver. Click "Next" to continue.

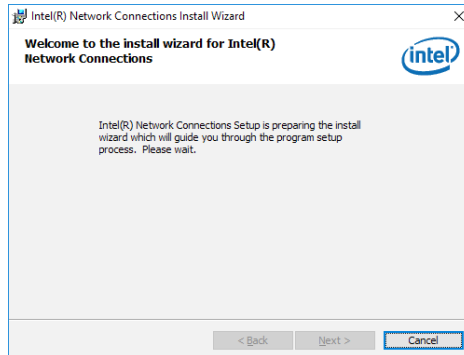


2. Click "I accept the terms in the license agreement" if you accept the agreement, and then click "Next".

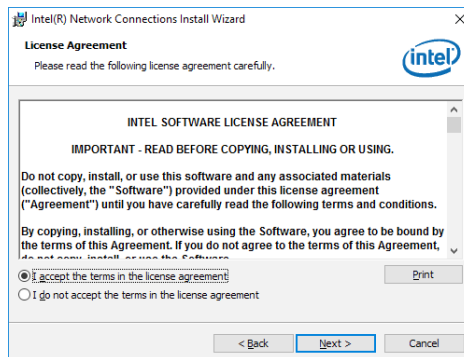


3. Select the program features you want to install, and then click "Next".

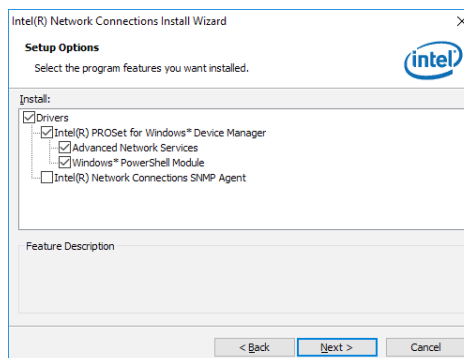

4. Click "Install" to begin the installation.

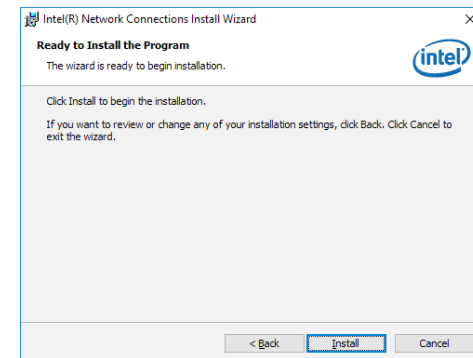


5. After the installation is complete, click "Finish".

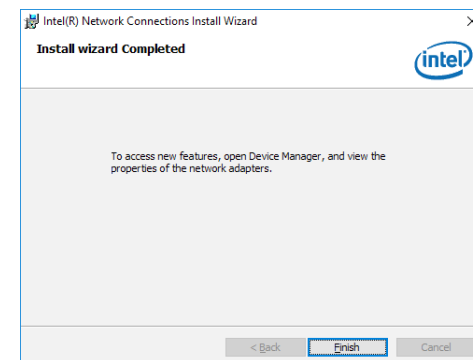


Kernel Mode Driver Framework (For Windows 7 only)

To install this driver, follow these steps:


1. Click "Yes" to start the installation.

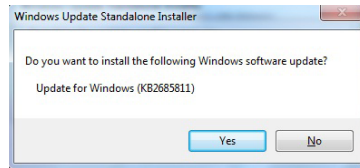

2. The update is installed now.

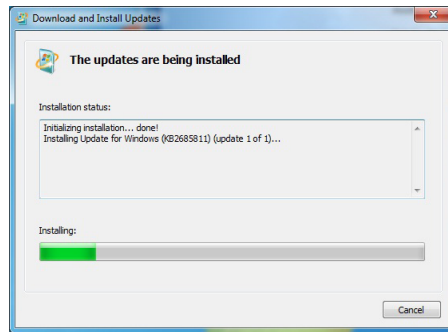


3. Click "Restart Now" to restart your computer when the installation is complete.

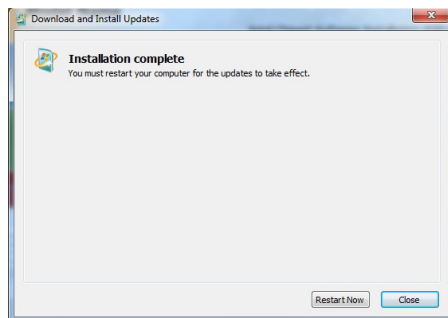


Intel USB 3.0 Driver (For Windows 7 and Windows 8.1)

To install the driver, click "Intel USB 3.0 Driver" on the main menu.


1. Setup is ready to install the driver. Click "Next" to continue.

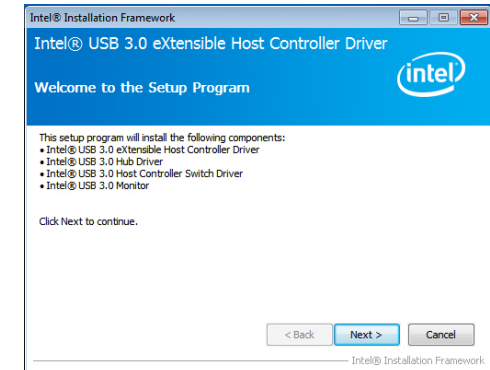

2. Read the license agreement, and then click "Yes".

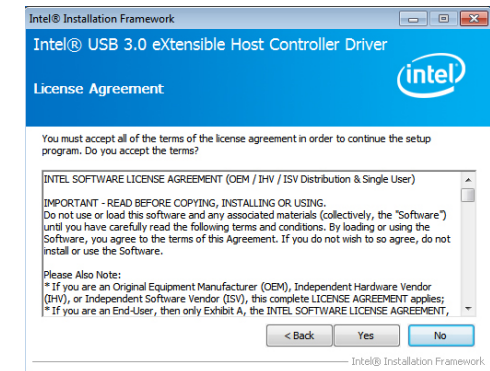


3. Wait while the setup is installing the driver. After the installation is complete, click "Finish".

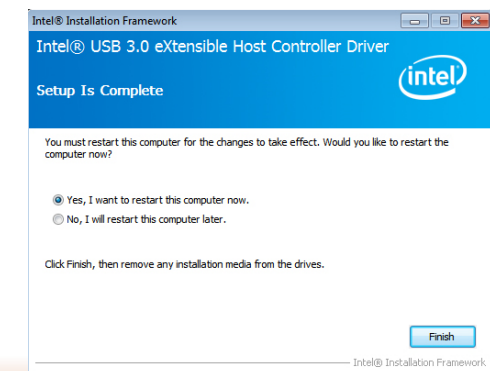


Intel ME Driver

To install the Intel® Management Engine (Intel® ME) Driver, follow these steps:


1. You are about to install the driver. Click "Next" to continue.

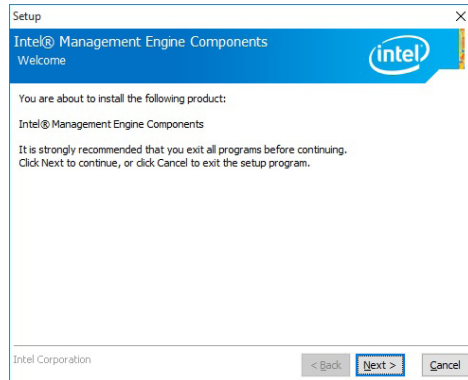


2. Read the license agreement, and then click "Next".

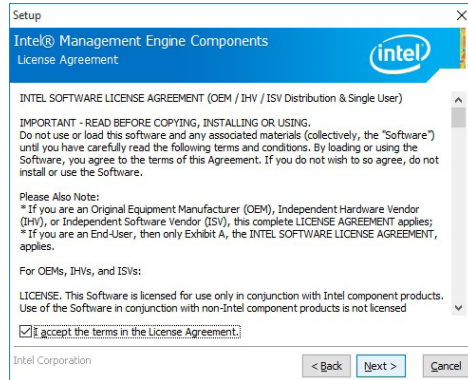


3. Setup is currently installing the driver. After the installation is complete, click "Next."

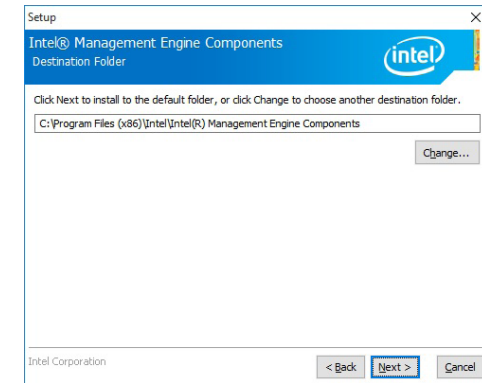

4. Please wait while the product is being installed.

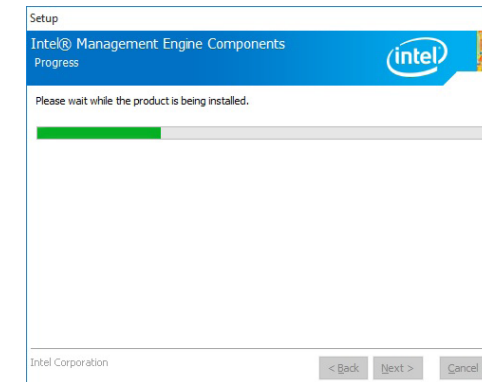


5. After the installation is complete, click "Finish".

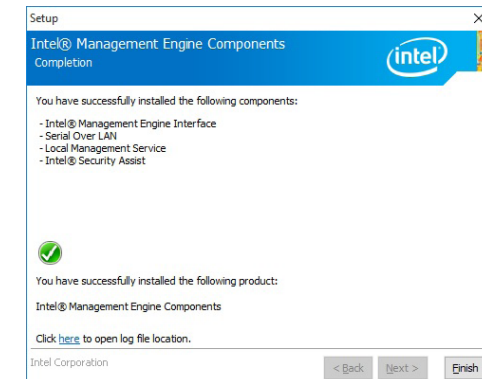

Audio Driver


To install this driver, follow these steps:

1. Setup is now ready to install the audio driver. Click "Next".
2. Follow the steps of the on-screen instructions; click "Next" each time you finish a step.

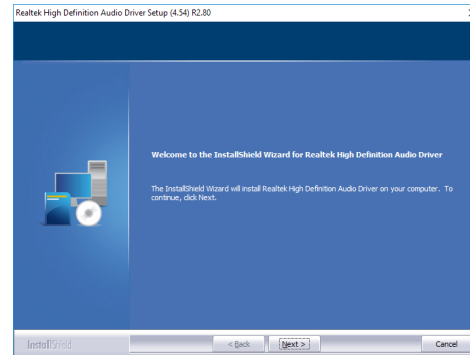

3. Click "Yes, I want to restart my computer now", and then click "Finish".


Restart the system to allow the new software installation to take effect.

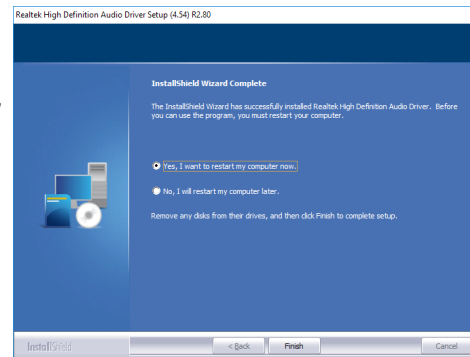

Serial IO Driver


To install this driver, follow these steps:

1. Setup is ready to install the driver. Click "Next" to continue.

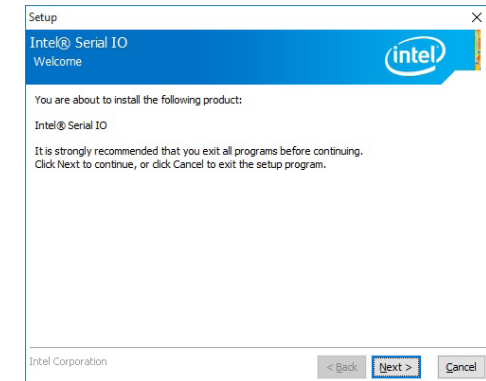


2. Read the license agreement carefully.


Click "I accept the terms in the License Agreement" if you agree with the terms in the agreement and then click "Next".

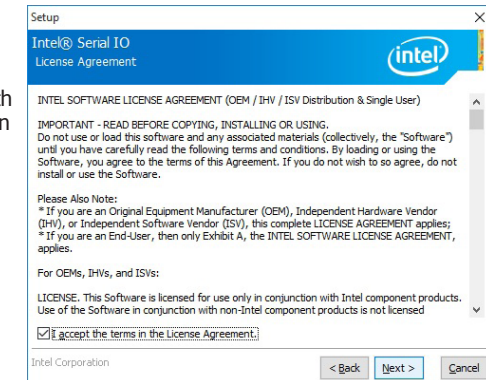


3. Read the file information and then click "Next".

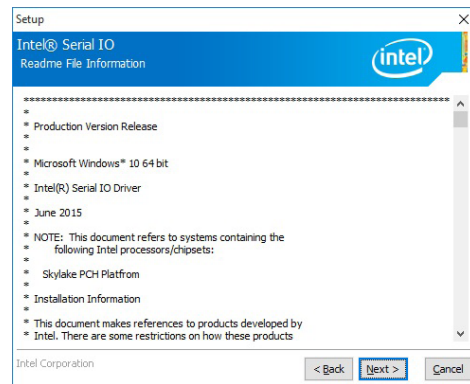


5. Setup is now installing the driver.

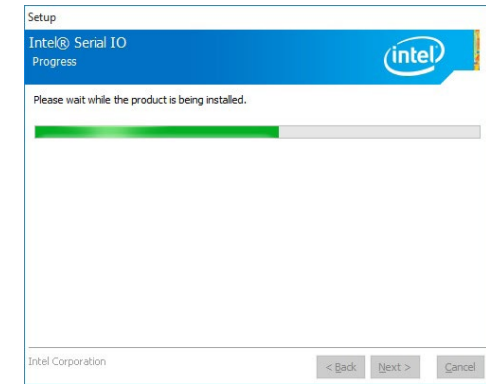

4. Setup is ready to install the driver. Click "Next" to begin the installation.

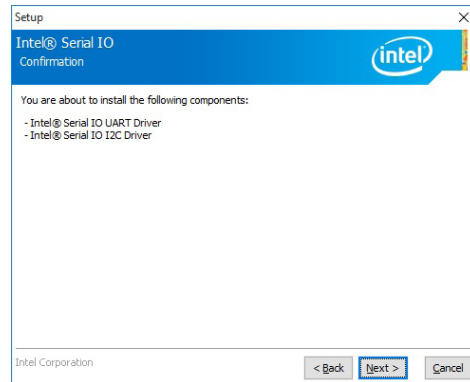

6. Click "Finish" to exit the setup.

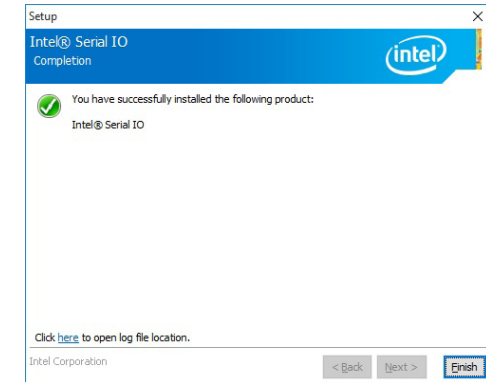

Chapter 9 - Intel AMT Settings

Overview

Intel Active Management Technology (Intel® AMT) combines hardware and software solutions to provide maximum system defense and protection to networked systems.

The hardware and software information are stored in non-volatile memory. With its built-in manageability and the latest security applications, Intel® AMT provides the following functions.

- **Discover**

Allows remote access and management of networked systems even while PCs are powered off; significantly reducing desk-side visits.

- **Repair**


Remotely repair systems after OS failures. Alerting and event logging help detect problems quickly to reduce downtime.

- **Protect**


Intel AMT's System Defense capability remotely updates all systems with the latest security software. It protects the network from threats at the source by proactively blocking incoming threats, reactively containing infected clients before they impact the network, and proactively alerting when critical software agents are removed.

Enable Intel® AMT in the BIOS


1. Power on the system then press to enter the main menu of the BIOS setup utility.
2. In the "Advanced" menu, select "Active Management Technology Support".

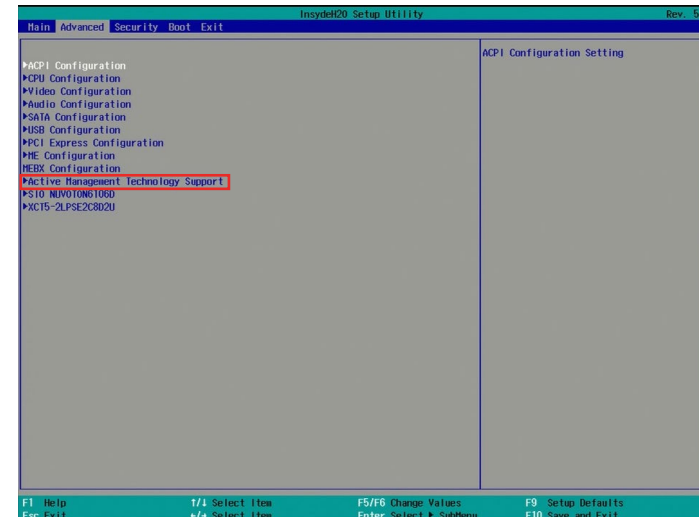

3. In the "Active Management Technology Support" menu, select "Enabled" for "Intel AMT Support".

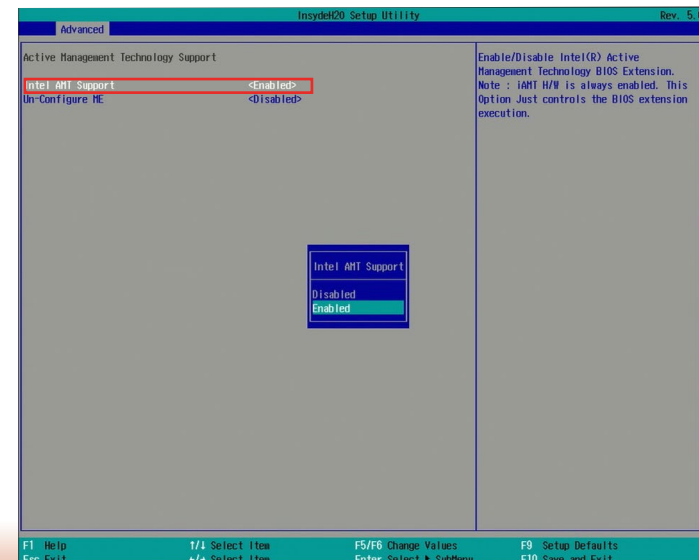


4. In the "Exit" menu, select "Exit Saving Changes" and then select "OK".

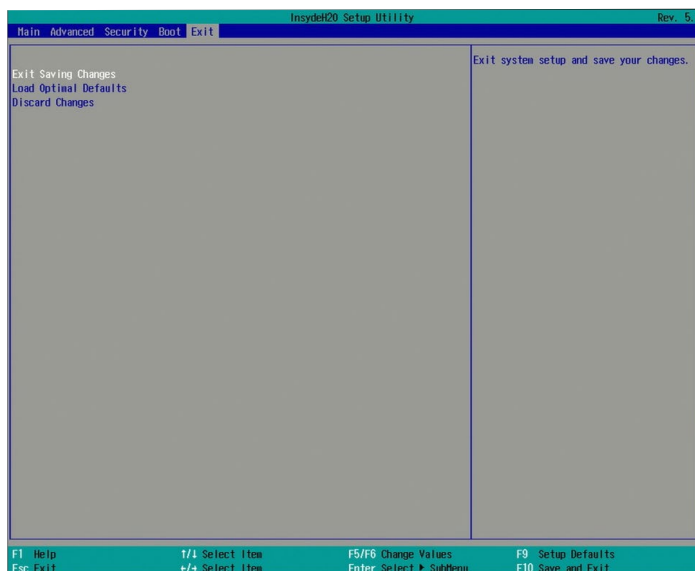


Set up Intel® AMT using the Intel® Management Engine BIOS Extension (MEBX)

1. After the system reboots, press to enter the BIOS menu again.
2. In the "Advanced" menu, select "MEBX Configuration" to enter the Manageability Engine BIOS Extension (MEBx) Setup.
3. When the system reboots, you will be prompted for a password. The default password is "admin". Enter the default password in the space provided under Intel(R) ME Password, then press "Enter".

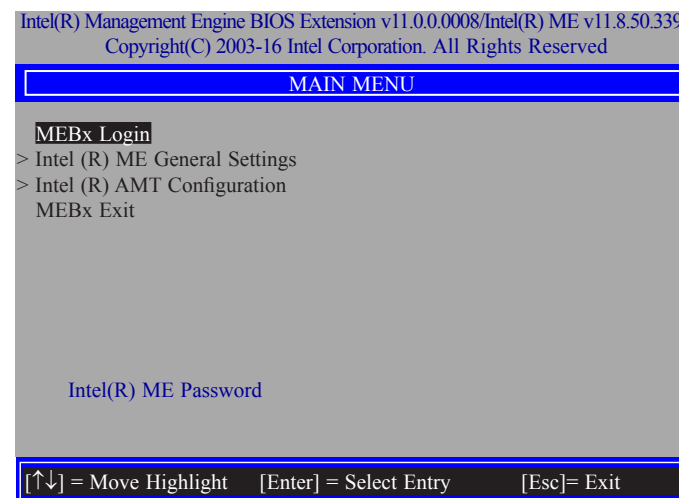


4. Enter a password in the space provided under "Intel(R) ME Password" and then press "Enter". The password must include:


- 8-32 characters
- Strong 7-bit ASCII characters excluding : , and " characters
- At least one digit character (0, 1, ...9)
- At least one 7-bit ASCII non alpha-numeric character, above 0x20, (e.g. !, \$, ;)
- Both lower case and upper case characters

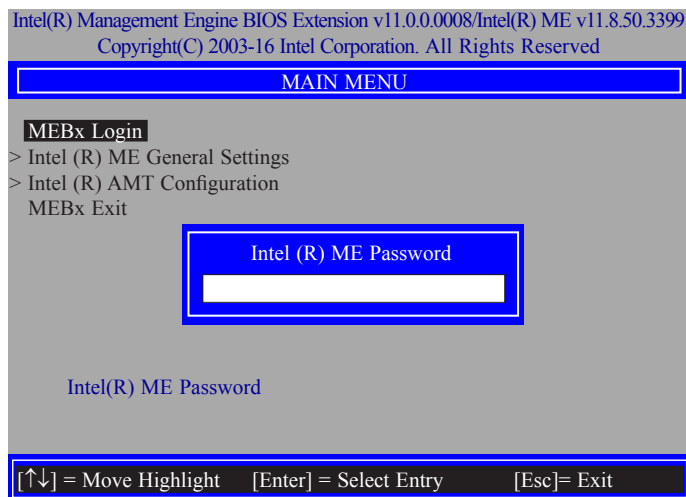

5. You will be asked to verify the password. Enter the same new password in the space provided under "Verify Password" and then press "Enter".

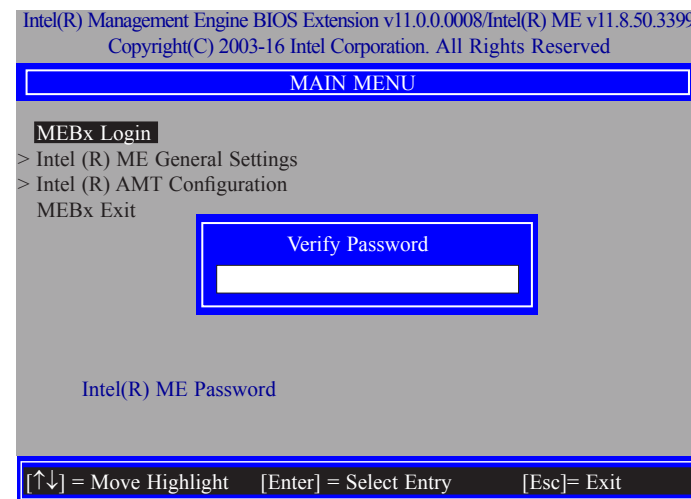


6. Select "Intel(R) ME General Settings" and then press "Enter".

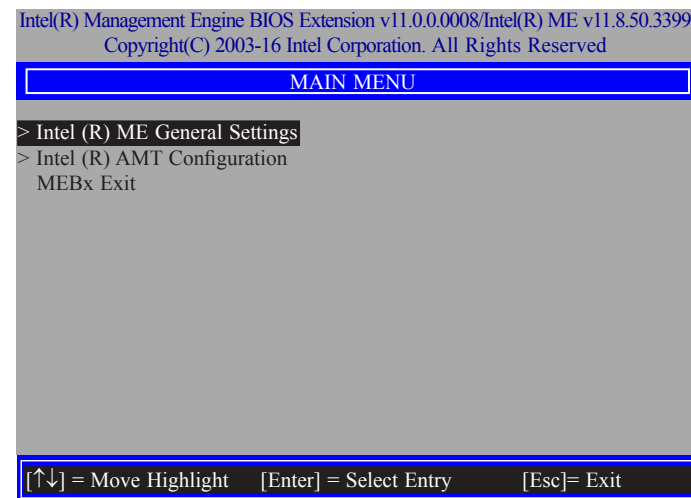


7. Select "Change Intel(R) ME Password" and then press "Enter".

You will be prompted for a password. The default password is "admin". Enter the default password in the space provided under "Intel(R) ME New Password" and then press "Enter".


- 8-32 characters
- Strong 7-bit ASCII characters excluding : , and " characters
- At least one digit character (0, 1, ...9)
- At least one 7-bit ASCII non alpha-numeric character, above 0x20, (e.g. !, \$, ;)
- Both lower case and upper case characters

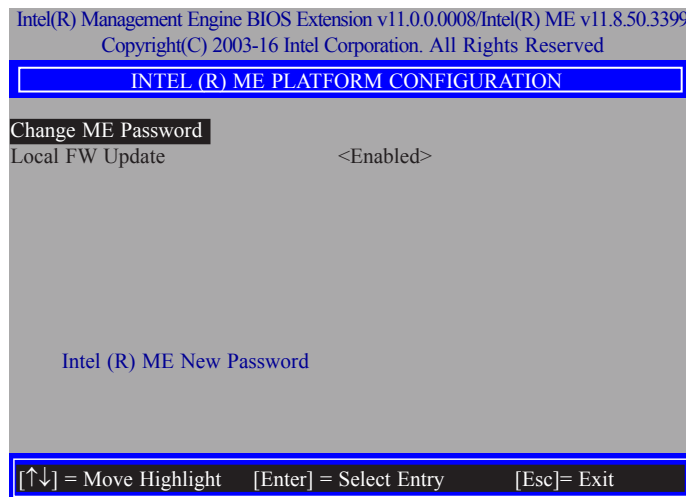


8. Select "Local FW Update" and then press "Enter". Select "Enabled" or "Disabled" or "Password Protected" and then press "Enter".

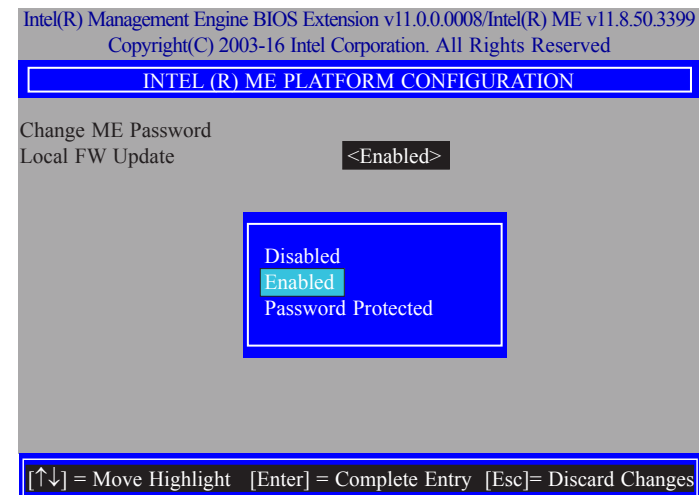


9. Select Previous Menu until you return to the "Main Menu". Select "Intel(R) AMT Configuration" and then press "Enter".

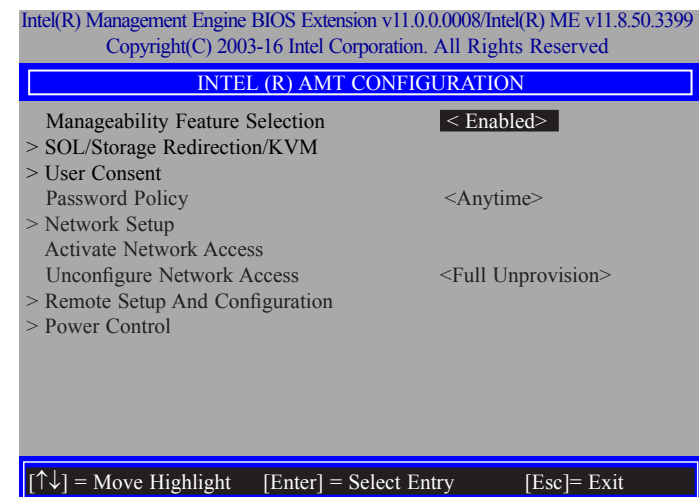


10. In the "Intel(R) AMT Configuration" menu, select "Manageability Feature Selection" and then press "Enter". Select "Enabled" or "Disabled" and then press "Enter".

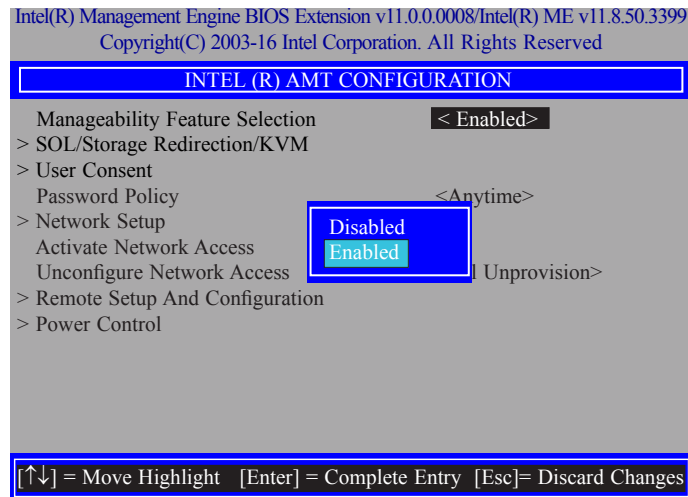


11. In the "Intel(R) AMT Configuration" menu, select "SOL/Storage Redirection/KVM" and then press "Enter".

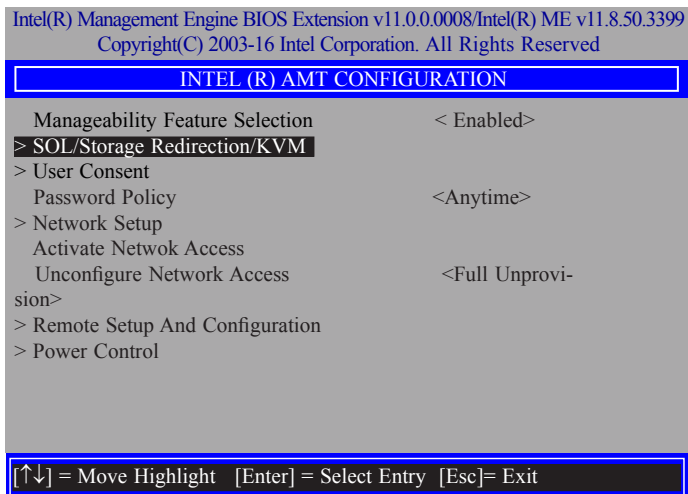


12. In the "SOL/Storage Redirection/KVM" menu, select "Username and Password" and then press "Enter". Select "Enabled" or "Disabled" and then press "Enter".

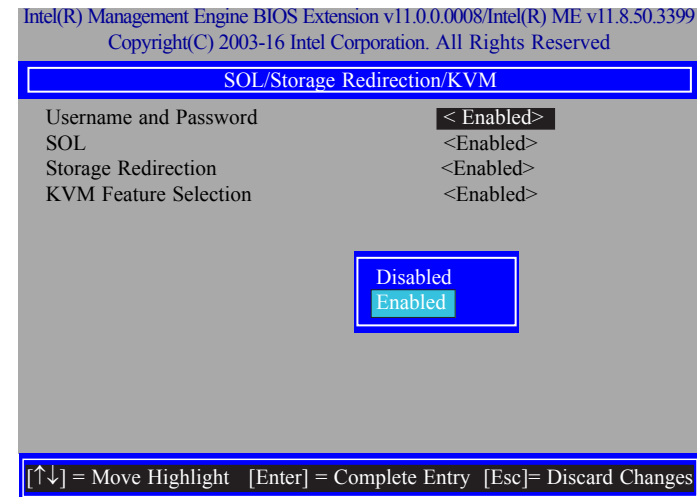


13. In the "SOL/Storage Redirection/KVM" menu, select "SOL" and then press "Enter". Select "Enabled" or "Disabled" and then press "Enter".

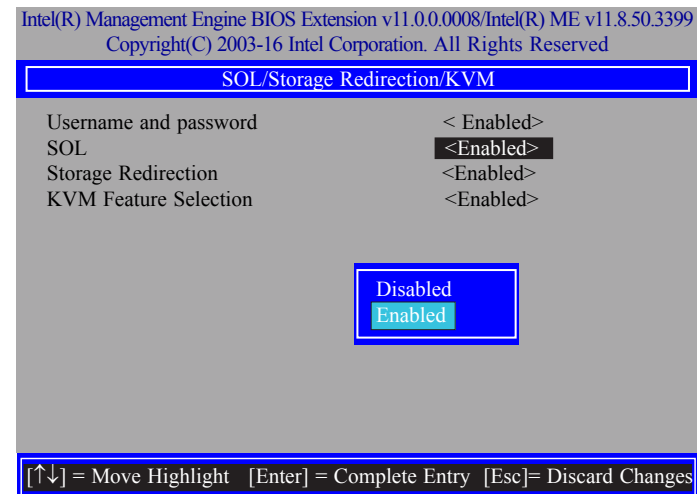


14. In the "SOL/Storage Redirection/KVM" menu, select "Storage Redirection" and then press "Enter". Select "Enabled" or "Disabled" and then press "Enter".

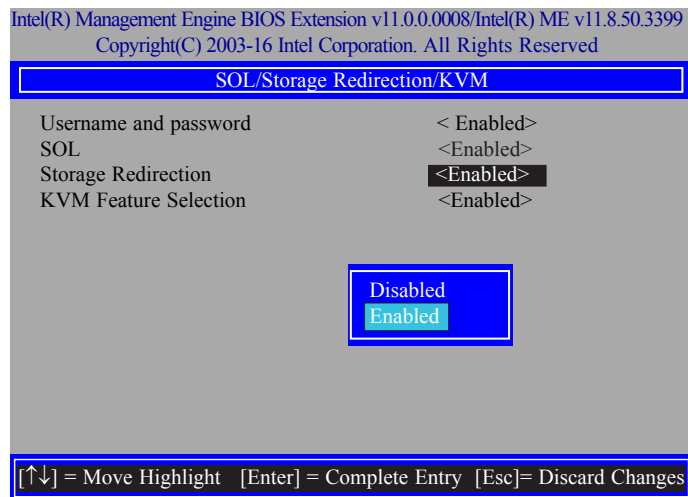


15. In the "SOL/IDER/KVM" menu, select "KVM Feature Selection" and then press "Enter". Select "Enabled" or "Disabled" and then press "Enter".

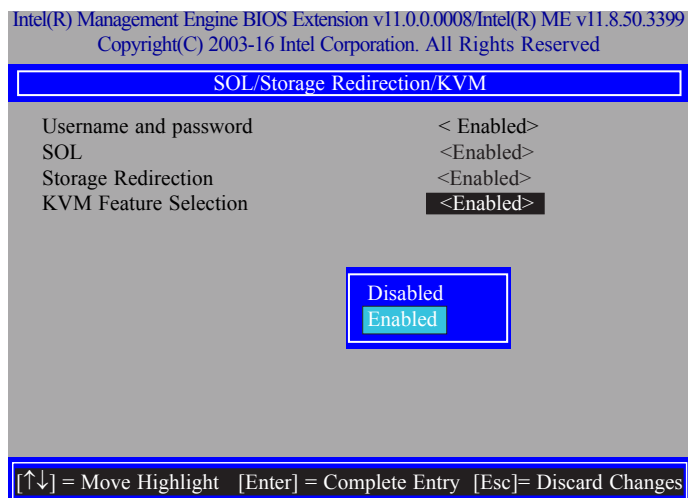


16. Select Previous Menu until you return to the "Intel(R) AMT Configuration" menu. Select "User Consent" and then press "Enter".

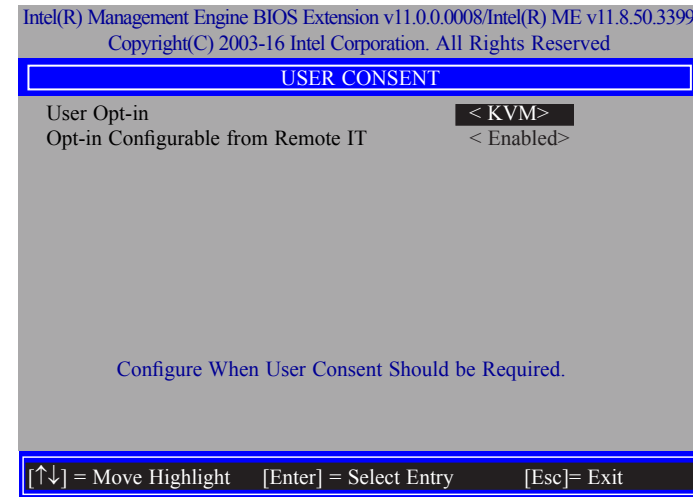


17. In the "User Consent" menu, select "User Opt-in" and then press "Enter". Select "None" or "KVM" or "ALL" and then press "Enter".

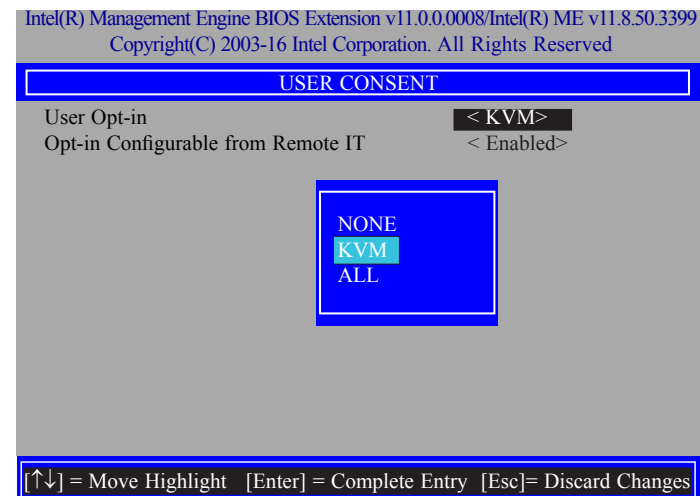


18. In the "User Consent" menu, select "Opt-in Configurable from Remote IT" and then press "Enter". Select "Enabled" or "Disable Remote Control of KVM Opt-in Policy" and then press "Enter".

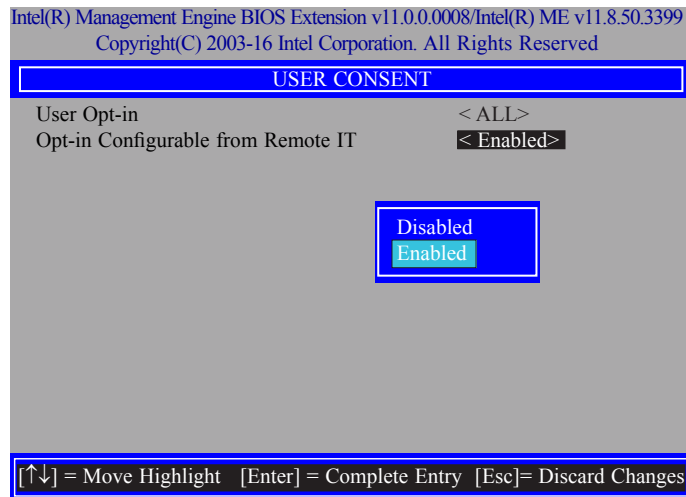


19. Select Previous Menu until you return to the "Intel(R) AMT Configuration" menu. Select "Password Policy" and then press "Enter". You may choose to use a password only during setup and configuration or to use a password anytime the system is being accessed.

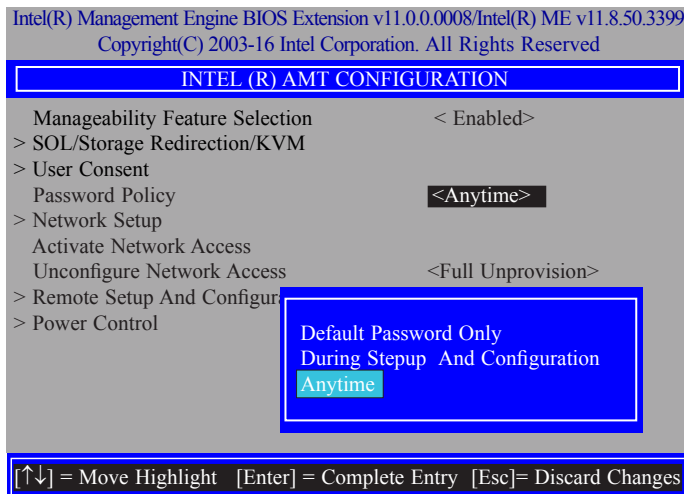

20. In the "Intel(R) AMT Configuration" menu, select "Network Setup" and then press "Enter".

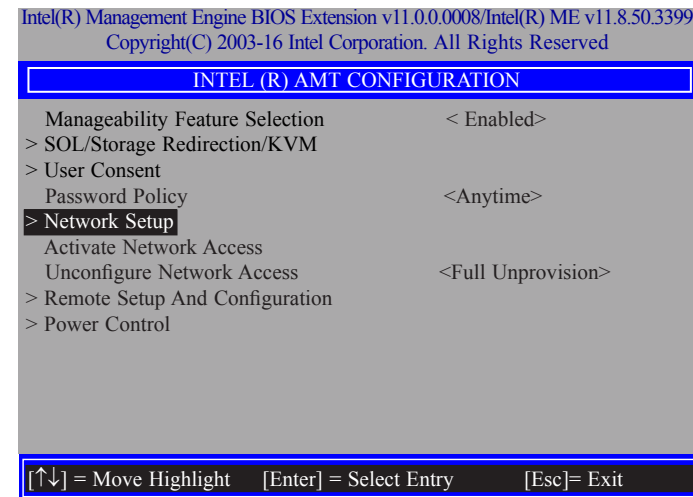

21. In the "Intel(R) ME Network Setup" menu, select "Intel(R) ME Network Name Settings" and then press "Enter".

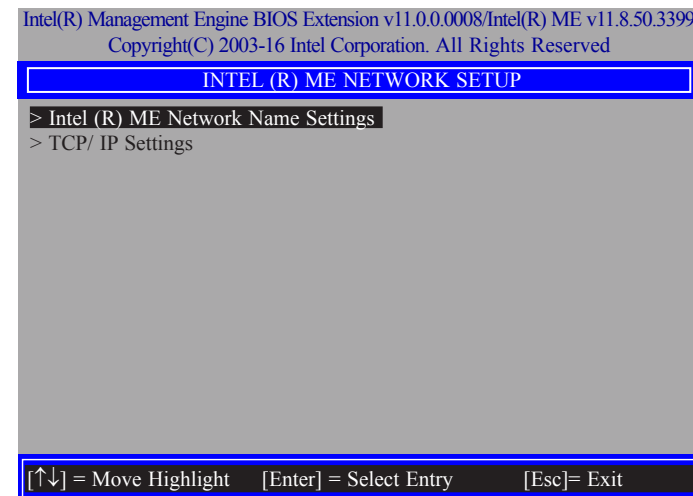

22. In the "Intel(R) ME Network Name Settings" menu, select "Host Name" and then press "Enter". Enter the computer's host name and then press "Enter".

Intel(R) Management Engine BIOS Extension v11.0.0.0008/Intel(R) ME v11.8.50.3399
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL (R) ME NETWORK NAME SETTINGS

Host Name

Domain Name

Shared/ Dedicated FQDN <Shared>

Dynamic DNS Update <Disabled>

Computer Host Name

[Enter] = Complete Entry [Esc]= Discard Changes

24. Select "Shared/Dedicated FQDN" and then press "Enter". Select "Shared" or "Dedicated" and then press "Enter".

Intel(R) Management Engine BIOS Extension v11.0.0.0008/Intel(R) ME v11.8.50.3399
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL (R) ME NETWORK NAME SETTINGS

Host Name

Domain Name

Shared/ Dedicated FQDN **<Shared>**

Dynamic DNS Update <Disabled>

Dedicated

Shared

[↑↓] = Move Highlight [Enter] = Complete Entry [Esc]= Discard Changes

23. Select "Domain Name" and then press "Enter". Enter the computer's domain name and then press "Enter".

Intel(R) Management Engine BIOS Extension v11.0.0.0008/Intel(R) ME v11.8.50.3399
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL (R) ME NETWORK NAME SETTINGS

Host Name

Domain Name

Shared/ Dedicated FQDN <Shared>

Dynamic DNS Update <Disabled>

Computer Domain Name

[Enter] = Complete Entry [Esc]= Discard Changes

25. Select "Dynamic DNS Update" and then press "Enter". Select "Enabled" or "Disabled" and then press "Enter".

Intel(R) Management Engine BIOS Extension v11.0.0.0008/Intel(R) ME v11.8.50.3399
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL (R) ME NETWORK NAME SETTINGS

Host Name

Domain Name

Shared/ Dedicated FQDN <Shared>


Dynamic DNS Update **<Disabled>**

Disabled


Enabled

[↑↓] = Move Highlight [Enter] = Complete Entry [Esc]= Discard Changes


26. Select Previous Menu until you return to the "Intel(R) ME Network Setup" menu. Select "TCP/IP Settings" and then press "Enter".

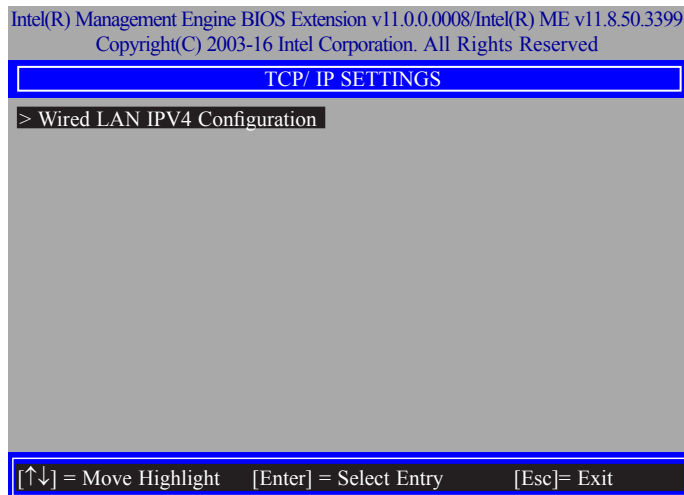


27. In the "TCP/IP Settings" menu, select "Wired LAN IPV4 Configuration" and then press "Enter".

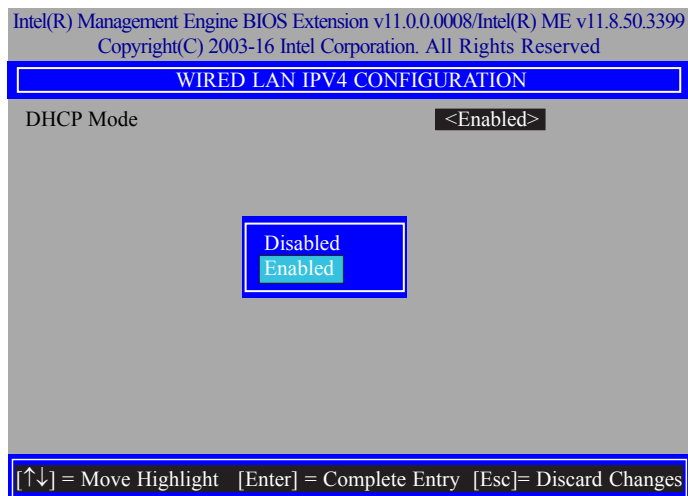


28. In the "Intel(R) AMT Configuration" menu, select "Activate Network Access" and then select "Yes/No" and press "Enter".

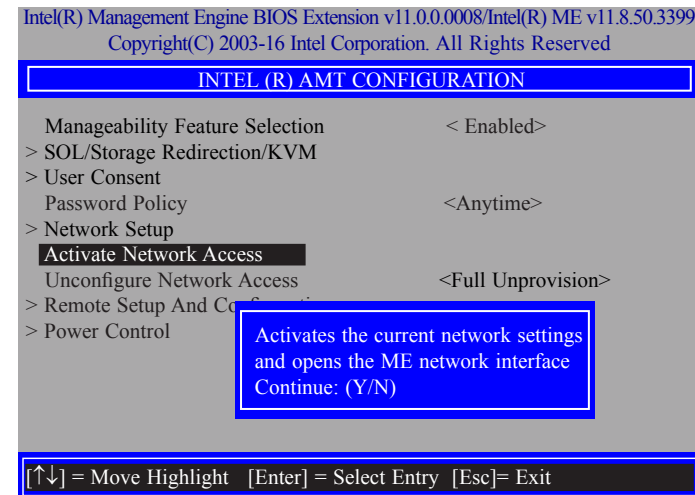


29. In the "Intel(R) AMT Configuration" menu, select "Unconfigure Network Access" and then press "Enter".

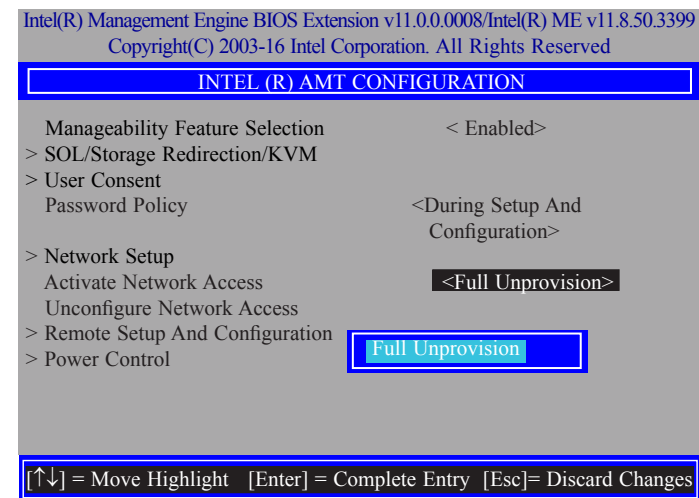


30. In the "Intel(R) AMT Configuration" menu, select "Remote Setup And Configuration" and then press "Enter".

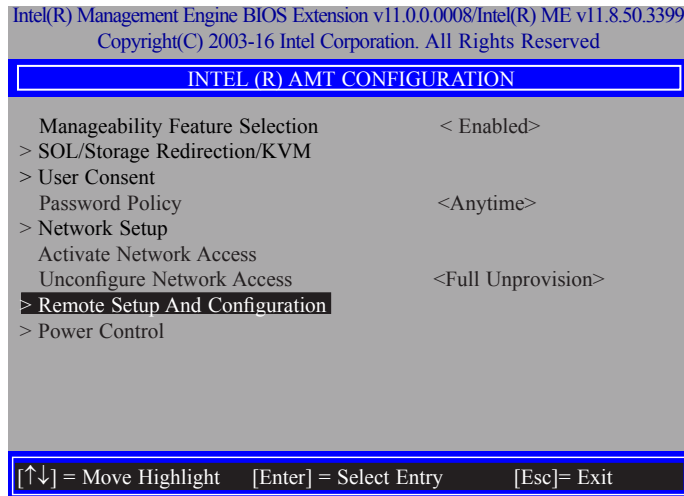


31. In the "Intel(R) Remote Setup And Configuration" menu, select "Current Provisioning Mode" and then press "Enter".

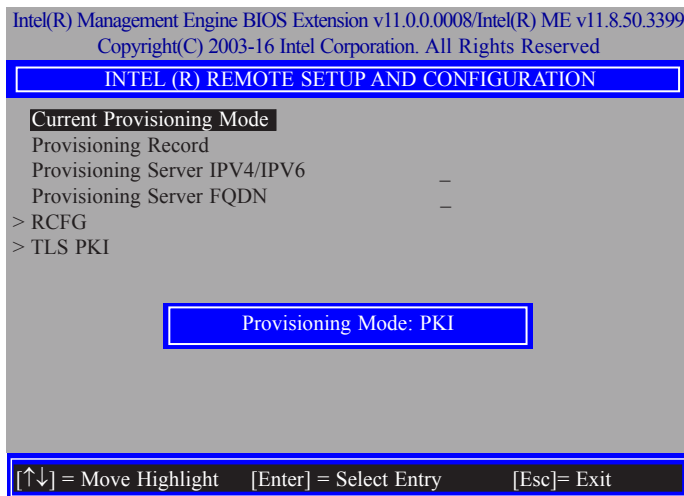


32. In the "Intel(R) Remote Setup And Configuration" menu, select "Provisioning Record" and then press "Enter".

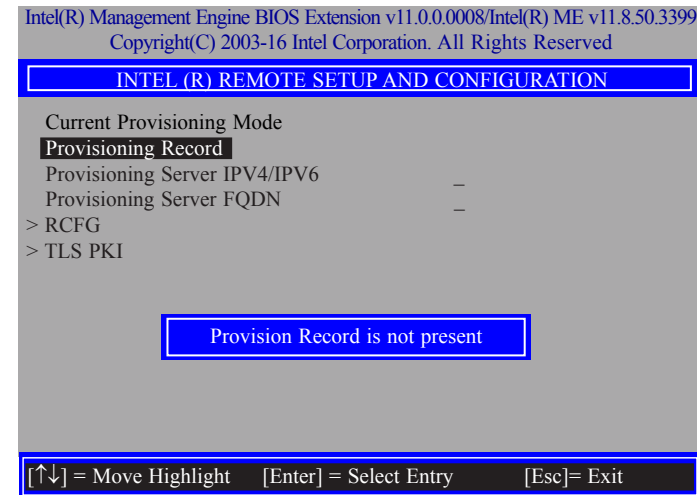


33. In the "Intel(R) Remote Setup And Configuration" menu, select "Provisioning server IPV4/IPv6", enter "Provisioning server address" and then press "Enter".

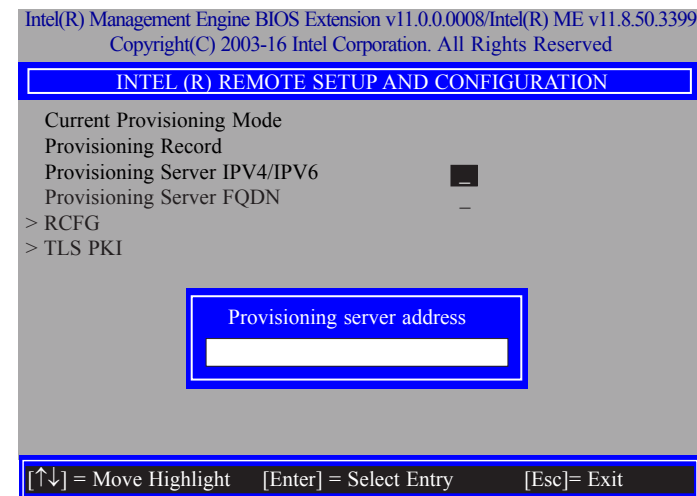


34. In the "Intel(R) Remote Setup And Configuration" menu, select "Provisioning server FQDN", enter the FQDN of Provisioning server, and then press "Enter".

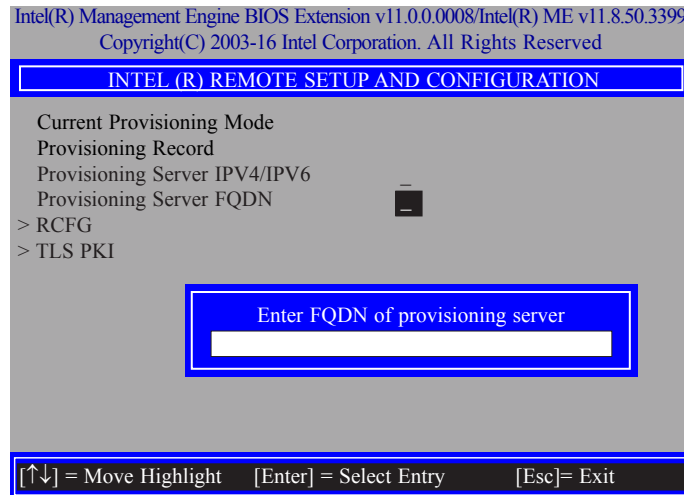


36. In the "Intel(R) Remote Setup And Configuration" menu, select "TLS PKI" and then press "Enter".

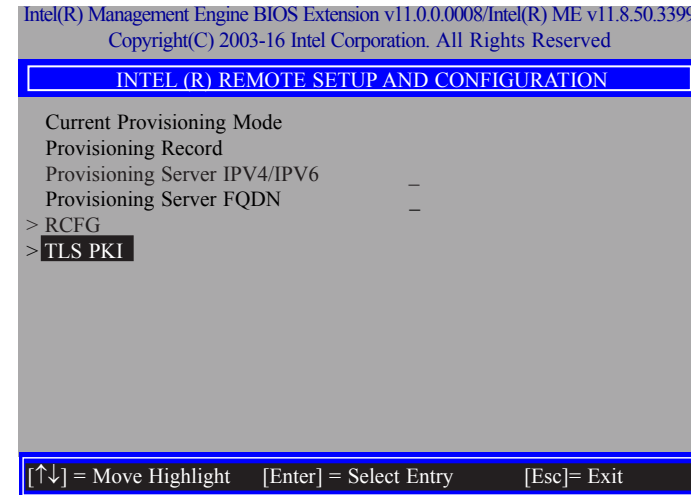

35. In the "Intel(R) Remote Setup And Configuration" menu, select "RCFG" and press "Enter", and then select "Start Configuration Y/N" and press "enter".

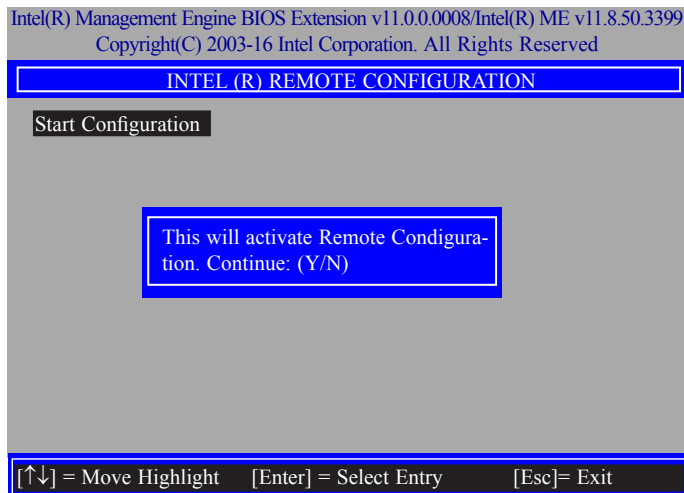

37. In the "Intel(R) Remote Configuration" menu, select "Remote Configuration**" and press "Enter", and then select "Enabled" or "Disabled" and press "Enter".

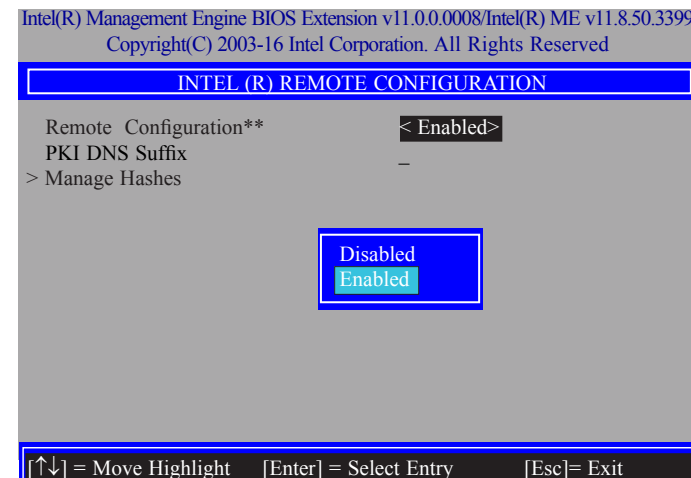

38. Select "PKI DNS Suffix", enter the "PKI DNS Suffix", and then press "Enter".

Intel(R) Management Engine BIOS Extension v11.0.0.0008/Intel(R) ME v11.8.50.3399
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL (R) REMOTE CONFIGURATION

Remote Configuration** < Enabled>
PKI DNS Suffix
> Manage Hashes

Enter PKI DNS Suffix

[↑↓] = Move Highlight [Enter] = Select Entry [Esc] = Exit

39. Select "Manage Hashes" and press "Enter", and then select one of the hash names.

Intel(R) Management Engine BIOS Extension v11.0.0.0008/Intel(R) ME v11.8.50.3399
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL (R) REMOTE CONFIGURATION

Remote Configuration** < Enabled>
PKI DNS Suffix -
> **Manage Hashes**

[↑↓] = Move Highlight [Enter] = Select Entry [Esc] = Exit

40. In the "Intel(R) AMT Configuration" menu, select Power Control, and then press "Enter".

Intel(R) Management Engine BIOS Extension v11.0.0.0008/Intel(R) ME v11.8.50.3399
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL (R) REMOTE CONFIGURATION

Hash Name	Active	Default	Algorithm
VeriSign Class 3	Active: [*]	Default: [*]	SHA256
VeriSign Class 3	Active: [*]	Default: [*]	SHA256
Go Daddy Class 2	Active: [*]	Default: [*]	SHA256
Comodo AAA CA	Active: [*]	Default: [*]	SHA256
Starfield Class 2	Active: [*]	Default: [*]	SHA256
VeriSign Class 3	Active: [*]	Default: [*]	SHA256
VeriSign Class 3	Active: [*]	Default: [*]	SHA256
VeriSign Class 3	Active: [*]	Default: [*]	SHA256
GTE CyberTrust G1	Active: [*]	Default: [*]	SHA256
Baltimore Cyber Tr	Active: [*]	Default: [*]	SHA256
Cyber Trust Global	Active: [*]	Default: [*]	SHA256
Verizon Global Ro	Active: [*]	Default: [*]	SHA256
Entrust. net CA (2	Active: [*]	Default: [*]	SHA256
Entrust Root CA	Active: [*]	Default: [*]	SHA256
VeriSign Universa	Active: [*]	Default: [*]	SHA256
Go Daddy Root CA	Active: [*]	Default: [*]	SHA256
Entrust Root CA -	Active: [*]	Default: [*]	SHA256
Startfield Root CA	Active: [*]	Default: [*]	SHA256

[Ins] = Add New Hash [Delete] = Delete Hash [F7] = Activate Hash
[↑↓] = Move Highlight [Enter] = View Hash [Esc] = Exit

41. In the "Intel(R) AMT Power Control" menu, select "Intel(R) AMT ON in Host Sleep States" and then press "Enter". Select an option and then press "Enter".


Intel(R) Management Engine BIOS Extension v11.0.0.0008/Intel(R) ME v11.8.50.3399
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL (R) AMT CONFIGURATION


Manageability Feature Selection < Enabled>
> SOL/Storage Redirection/KVM
> User Consent
Password Policy <Anytime>
> Network Setup
Activate Network Access
Unconfigure Network Access <Full Unprovision>
> Remote Setup And Configuration
> **Power Control**

[↑↓] = Move Highlight [Enter] = Select Entry [Esc] = Exit

42. In the "Intel(R) AMT Power Control" menu, select "Idle Timeout" and then press "Enter". Enter the timeout value (1-65535).

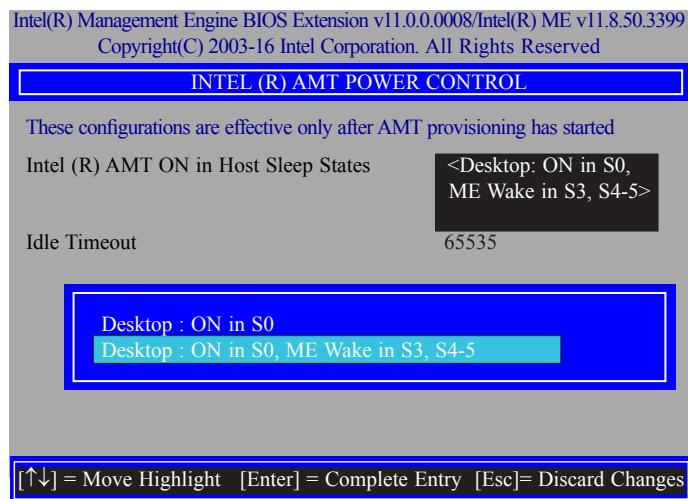

44. Select Previous Menu until you return to the "Main Menu". Select "Exit" and then press "Enter". Type "Y" and then press "Enter".

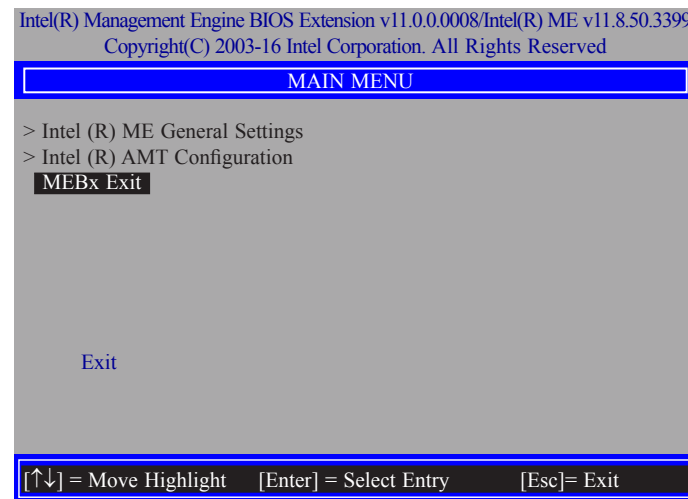

43. In the "Intel(R) AMT Power Control" menu, select "Idle Timeout" and then press "Enter". Enter the timeout value (1-65535).

