

KU553

Embedded SBC 3.5"

User's Manual

Copyright

This publication contains information that is protected by copyright. No part of it may be reproduced in any form or by any means or used to make any transformation/adaptation without the prior written permission from the copyright holders.

This publication is provided for informational purposes only. The manufacturer makes no representations or warranties with respect to the contents or use of this manual and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. The user will assume the entire risk of the use or the results of the use of this document. Further, the manufacturer reserves the right to revise this publication and make changes to its contents at any time, without obligation to notify any person or entity of such revisions or changes.

Changes after the publication's first release will be based on the product's revision. The website will always provide the most updated information.

© 2018. All Rights Reserved.

Trademarks

Product names or trademarks appearing in this manual are for identification purpose only and are the properties of the respective owners.

FCC and DOC Statement on Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables must be used in order to comply with the emission limits.

Table of Contents

Copyright.....	2
Trademarks	2
FCC and DOC Statement on Class B.....	2
Warranty.....	4
Static Electricity Precautions.....	4
Safety Measures	4
About the Package.....	5
Optional Items.....	5
Before Using the System Board.....	5
Chapter 1 - Introduction	6
Specifications	6
Features.....	7
Chapter 2 - Hardware Installation.....	8
Board Layout.....	8
System CPU	9
Block Diagram.....	9
System Memory.....	10
Installing the SODIMM Module	10
Jumper Settings	11
Clear CMOS.....	11
M.2 B Key Signal Select	12
Backlight Brightness Select.....	12
Panel Power Select	13
Rear Panel I/O Ports.....	14
9~36V DC-in	14
Graphics Interfaces.....	15
RJ45 LAN Ports.....	15
USB Ports.....	16
I/O Connectors	17
Digital I/O Connector.....	17
Front Audio Connector	17
COM (Serial) Port	18
Standby Power LED	19

Front Panel Connector	19
SATA (Serial ATA) Connector	20
SATA (Serial ATA) Power Connector	20
LVDS LCD Panel Connector	21
LCD/Inverter Power Connector	21
Cooling Fan Connector	22
Expansion Slots	22
SMBus Connector	23
Chassis Intrusion Connector	23
Battery.....	24

Chapter 3 - BIOS Setup	25
Overview.....	25
Insyde BIOS Setup Utility.....	26
Main	26
Advanced	26
Security.....	38
Boot.....	38
Exit.....	39
Updating the BIOS	40
Notice: BIOS SPI ROM	40
Chapter 4 - Supported Software	41
Chapter 5 - RAID.....	49
Chapter 6 - Intel AMT Settings.....	52
Appendix A - Troubleshooting Checklist.....	66

Warranty

1. Warranty does not cover damages or failures that arised from misuse of the product, inability to use the product, unauthorized replacement or alteration of components and product specifications.
2. The warranty is void if the product has been subjected to physical abuse, improper installation, modification, accidents or unauthorized repair of the product.
3. Unless otherwise instructed in this user's manual, the user may not, under any circumstances, attempt to perform service, adjustments or repairs on the product, whether in or out of warranty. It must be returned to the purchase point, factory or authorized service agency for all such work.
4. We will not be liable for any indirect, special, incidental or consequential damages to the product that has been modified or altered.

Static Electricity Precautions

It is quite easy to inadvertently damage your PC, system board, components or devices even before installing them in your system unit. Static electrical discharge can damage computer components without causing any signs of physical damage. You must take extra care in handling them to ensure against electrostatic build-up.

1. To prevent electrostatic build-up, leave the system board in its anti-static bag until you are ready to install it.
2. Wear an antistatic wrist strap.
3. Do all preparation work on a static-free surface.
4. Hold the device only by its edges. Be careful not to touch any of the components, contacts or connections.
5. Avoid touching the pins or contacts on all modules and connectors. Hold modules or connectors by their ends.



Important:

Electrostatic discharge (ESD) can damage your processor, disk drive and other components. Perform the upgrade instruction procedures described at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

Safety Measures

To avoid damage to the system:

- Use the correct AC input voltage range.

To reduce the risk of electric shock:

- Unplug the power cord before removing the system chassis cover for installation or servicing. After installation or servicing, cover the system chassis before plugging the power cord.

About the Package

The package contains the following items. If any of these items are missing or damaged, please contact your dealer or sales representative for assistance.

- 1 KU553 board
- 1 COM port cable (Length: 300mm, 2 x COM ports)
- 1 Serial ATA data cable (Length: 500mm)
- 1 Serial ATA power cable (Length: 250mm)
- 1 Heat sink (Height: 25.8mm)

Optional Items

- USB port cable (Length: 200mm)
- Power adapter (60W, 12V)
- Heat spreader (Height: 11mm)
- Audio cable (Length: 160mm)

The board and accessories in the package may not come similar to the information listed above. This may differ in accordance to the sales region or models in which it was sold. For more information about the standard package in your region, please contact your dealer or sales representative.

Before Using the System Board

Before using the system board, prepare basic system components.

If you are installing the system board in a new system, you will need at least the following internal components.

- Storage devices such as hard disk drive, etc.

You will also need external system peripherals you intend to use which will normally include at least a keyboard, a mouse and a video display monitor.

Chapter 1 - Introduction

Specifications

SYSTEM	Processor	7th Generation Intel® Core™ Processors, BGA 1356 Intel® Core™ i7-7600U Processor, Dual Core, 4M Cache, 2.8GHz (3.9GHz), 15W Intel® Core™ i5-7300U Processor, Dual Core, 3M Cache, 2.6GHz (3.5GHz), 15W Intel® Core™ i3-7100U Processor, Dual Core, 3M Cache, 2.4GHz, 15W Intel® Celeron® Processor 3965U, Dual Core, 2M Cache, 2.2GHz, 15W
	Memory	One 260-pin SODIMM up to 16GB Single Channel DDR4 1866/2133MHz
	BIOS	Insyde SPI 128Mbit
	Controller	Intel® HD Graphics GT Series
GRAPHICS	Feature	OpenGL 5.0, DirectX 12, OpenCL 2.1 HW Decode: AVC/H.264, MPEG2, VC1/WMV9, JPEG/MJPEG, HEVC/H265, VP8, VP9 HW Encode: AVC/H.264, MPEG2, JPEG, HEVC/H265, VP8, VP9
	Display	1 x VGA 1 x LVDS/eDP 1 x DP++ VGA: resolution up to 1920x1200 @ 60Hz LVDS: dual channel 48-bit, resolution up to 1920x1200 @ 60Hz DP++: resolution up to 4096x2304 @ 60Hz
	Triple Displays	VGA + LVDS + DP++
	Interface	1 x Full-size Mini PCIe (PCIe/USB2.0/USB3.1 Gen1 (option)) with SIM slot (option) 1 x M.2 B key 2242 (PCIe Gen3/USB2.0/SATA3.0) 1 x M.2 E key 2230 (PCIe/USB2.0)
EXPANSION	Interface	1 x Full-size Mini PCIe (PCIe/USB2.0/USB3.1 Gen1 (option)) with SIM slot (option) 1 x M.2 B key 2242 (PCIe Gen3/USB2.0/SATA3.0) 1 x M.2 E key 2230 (PCIe/USB2.0)
AUDIO	Audio Codec	Realtek ALC888S
ETHERNET	Controller/Phy	Core™ Processors: 1 x Intel® I210AT PCIe (10/100/1000Mbps) or 1 x Intel® I210IT PCIe (10/100/1000Mbps) 1 x Intel® I219LM PCIe with iAMT11.6 (10/100/1000Mbps) Celeron® Processor: 1 x Intel® I210AT PCIe (10/100/1000Mbps) or 1 x Intel® I210IT PCIe (10/100/1000Mbps) 1 x Intel® I219V PCIe (10/100/1000Mbps)
	Ethernet	2 x GbE (RJ-45)
REAR I/O	USB	4 x USB 3.0
	Display	1 x VGA
		1 x DP++

INTERNAL I/O	Serial	1 x RS-232/422/485 (2.0mm pitch)
	USB	2 x USB 2.0 (2.0mm pitch)
	Display	1 x LVDS LCD Panel Connector 1 x LCD/Inverter Power
	Audio	1 x Audio (Line-out/Mic-in)
	SATA	1 x SATA 3.0 (up to 6Gb/s) 1 x SATA Power
	DIO	1 x 8-bit DIO
	SMBus	1 x SMBus
WATCHDOG TIMER	Output & Interval	System Reset, Programmable via Software from 1 to 255 Seconds
SECURITY	TPM	fTPM 2.0
POWER	Type	Wide Range 9~36VDC
	Connector	Right Angle Connector (4-pin) DC Jack (available upon request) Vertical Type Connector (4-pin) (available upon request)
	RTC Battery	CR2032 Coin Cell
OS SUPPORT	Microsoft	Windows 10 IoT Enterprise 64-bit
	Linux	Ubuntu 16.04
ENVIRONMENT	Temperature	Operating: 0 to 60°C (Opt. -20 to 70°C) Storage: -40 to 85°C
	Humidity	Operating: 5 to 90% RH Storage: 5 to 90% RH
MECHANICAL	Dimensions	3.5" SBC Form Factor 146mm (5.75") x 102mm (4.02")
	Height	PCB: 1.6mm Top Side: 16.3mm, Bottom Side: 4.0mm

Features

• Watchdog Timer

The Watchdog Timer function allows your application to regularly “clear” the system at the set time interval. If the system hangs or fails to function, it will reset at the set time interval so that your system will continue to operate.

• DDR4

DDR4 delivers increased system bandwidth and improves performance. The advantages of DDR4 provide an extended battery life and improve the performance at a lower power than DDR3/DDR2.

• Graphics

The integrated Intel® HD graphics engine delivers an excellent blend of graphics performance and features to meet business needs. It provides excellent video and 3D graphics with outstanding graphics responsiveness. These enhancements deliver the performance and compatibility needed for today's and tomorrow's business applications. Supports 1 VGA, 1 LVDS/eDP and 1 DP++ interfaces for triple display outputs.

• Serial ATA

Serial ATA is a storage interface that is compliant with SATA 1.0a specification. With speed of up to 6Gb/s (SATA 3.0), it improves hard drive performance faster than the standard parallel ATA whose data transfer rate is 100MB/s.

• Gigabit LAN

Intel® I210AT/I210IT PCI Express Gigabit Ethernet controller and Intel® I219LM/I219V PCI Express Gigabit Ethernet controller support up to 1Gbps data transmission.

• Audio

The Realtek ALC888S audio codec provides 2.1-channel High Definition audio output.

• Power Failure Recovery

When power returns after an AC power failure, you may choose to either power-on the system manually or let the system power-on automatically.

• USB

The system board supports the new USB 3.0. It is capable of running at a maximum transmission speed of up to 5 Gbit/s (625 MB/s) and is faster than USB 2.0 (480 Mbit/s, or 60 MB/s) and USB 1.1 (12Mb/s). USB 3.0 reduces the time required for data transmission, reduces power consumption, and is backward compatible with USB 2.0. It is a marked improvement in device transfer speeds between your computer and a wide range of simultaneously accessible external Plug and Play peripherals.

• Wake-On-LAN

This feature allows the network to remotely wake up a Soft Power Down (Soft-Off) PC. It is supported via the onboard LAN port or via a PCI LAN card that uses the PCI PME (Power Management Event) signal. However, if your system is in the Suspend mode, you can power-on the system only through an IRQ or DMA interrupt.

• Wake-On-USB (Optional)

This function allows you to use a USB keyboard or USB mouse to wake up a system from the S3 (STR - Suspend To RAM) state.

• ACPI STR

The system board is designed to meet the ACPI (Advanced Configuration and Power Interface) specification. ACPI has energy saving features that enable PCs to implement power management and plug-and-play with operating systems that support power management features.


With ACPI, the system can further utilize the Ethernet adapter's wake-on-LAN (WOL) capability that enables remote wake-up if the Ethernet adapter supports such feature.

• RTC Timer


The RTC installed on the system board allows your system to automatically power-on on the set date and time.

Chapter 2 - Hardware Installation

Board Layout

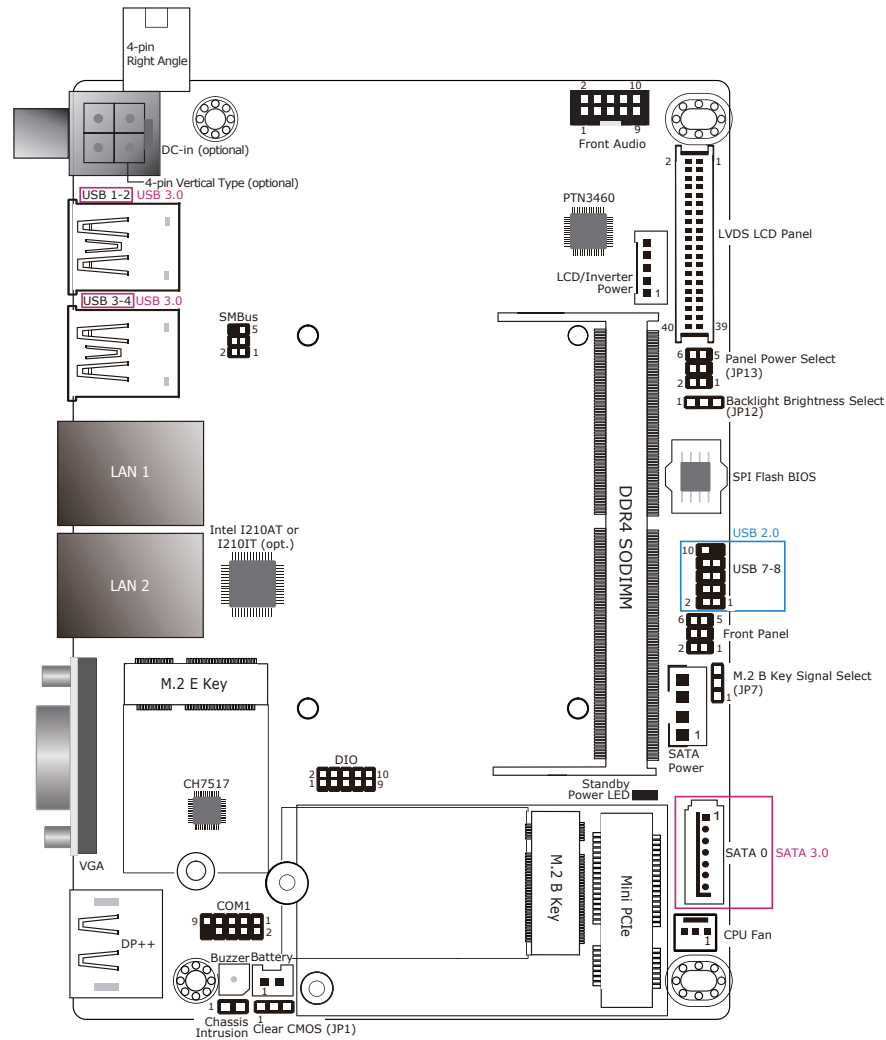


Top View

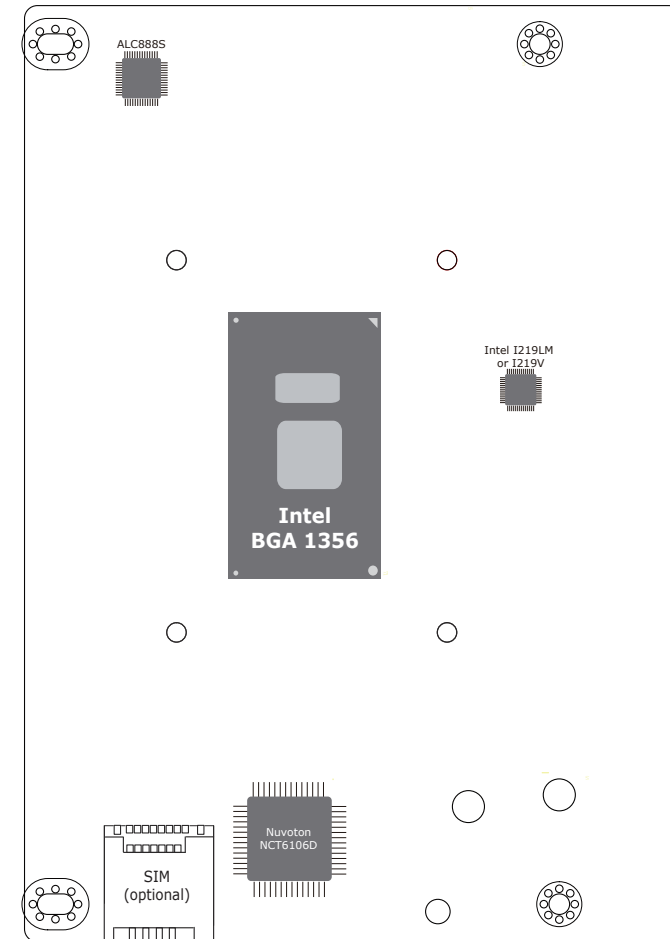


Bottom View

System CPU

The system board is equipped with a Kabylake-U microprocessor in socket BGA compatible package 1356.

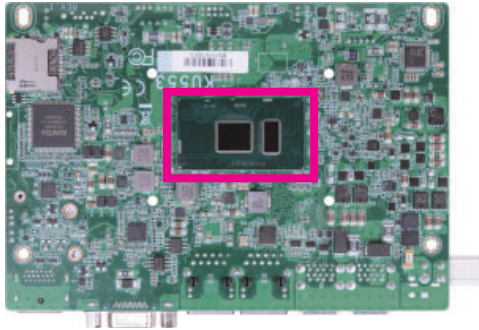

Block Diagram

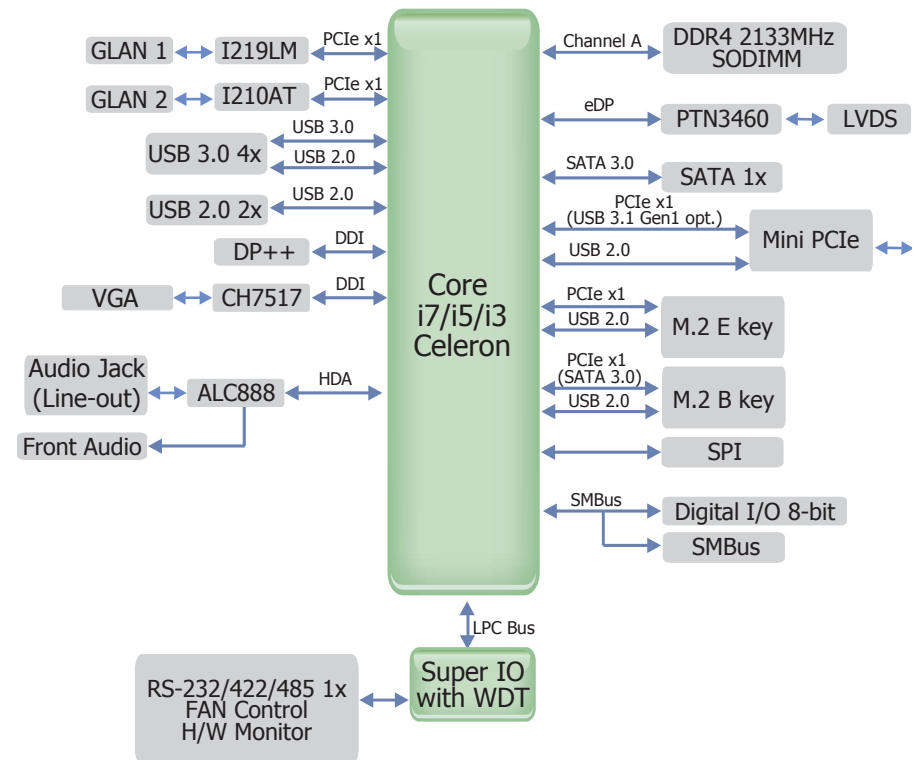


**Important:**

Electrostatic discharge (ESD) can damage your board, processor, disk drives, add-in boards, and other components. Perform installation procedures at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

System Memory

**Important:**

When the Standby Power LED is red, it indicates that there is power on the system board. Power-off the PC then unplug the power cord prior to installing any devices. Failure to do so will cause severe damage to the motherboard and components.

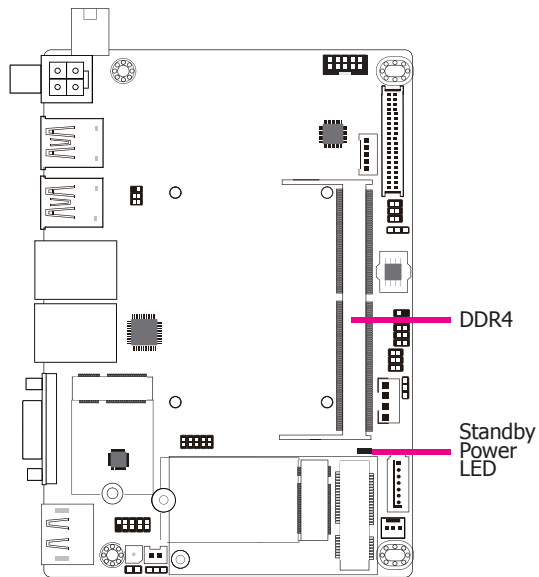

Features


- One 260-pin SODIMM up to 16GB
- Single Channel DDR4 1866/2133MHz

Installing the SODIMM Module

**Note:**

The system board used in the following illustrations may not resemble the actual board. These illustrations are for reference only.


1. Make sure the PC and all other peripheral devices connected to it has been powered down.
2. Disconnect all power cords and cables.
3. Locate the SODIMM socket on the system board.
4. Note the key on the socket. The key ensures the module can be plugged into the socket in only one direction.

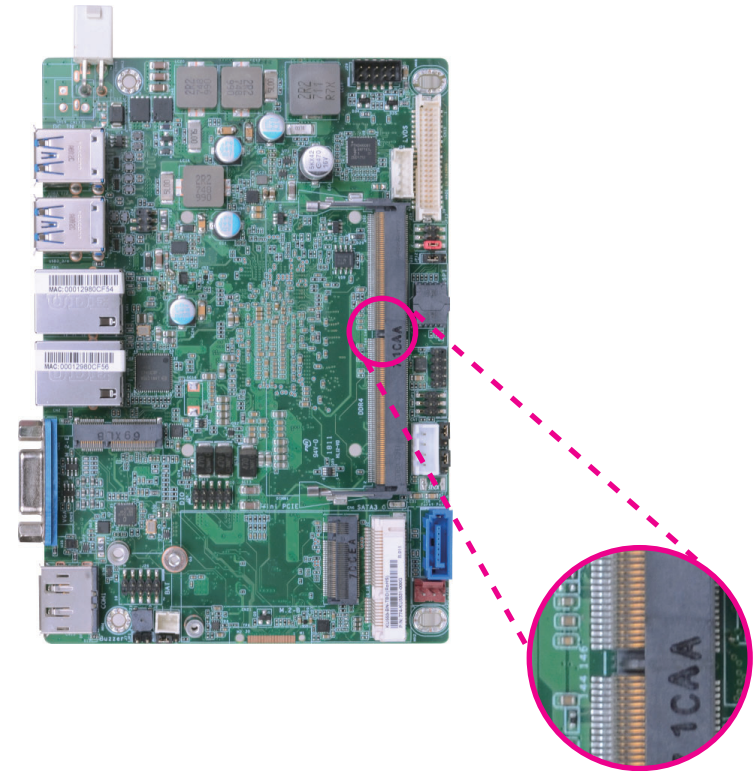

- Grasping the module by its edges, align the module into the socket at an approximately 30 degrees angle. Apply firm even pressure to each end of the module until it slips down into the socket. The contact fingers on the edge of the module will almost completely disappear inside the socket.




- Push down the module until the clips at each end of the socket lock into position. You will hear a distinctive “click”, indicating the module is correctly locked into position.

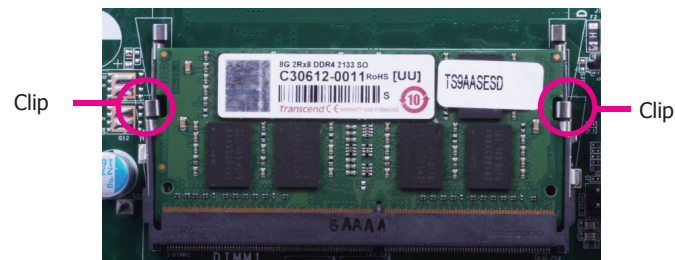

Jumper Settings

Clear CMOS

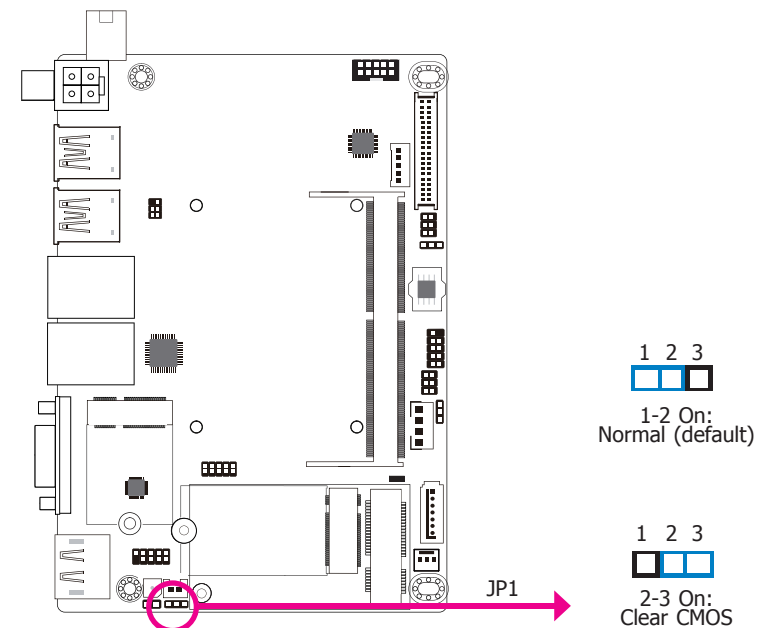


If you encounter the following conditions, you can reconfigure the system with the default values stored in the ROM BIOS.

- CMOS data becomes corrupted.
- You forgot the supervisor or user password.

To load the default values stored in the ROM BIOS, please follow the steps below:


- Power-off the system and unplug the power cord.
- Set JP1 pins 2 and 3 to On. Wait for a few seconds and set JP1 back to its default setting, pins 1 and 2 On.
- Now plug the power cord and power-on the system.

M.2 B Key Signal Select

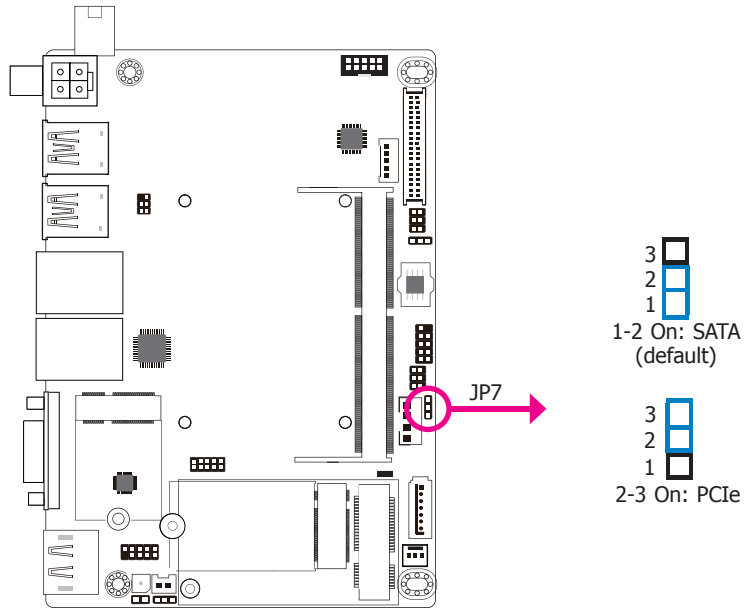

JP7 is used to select the M.2 signal: PCIe or SATA (default).

Backlight Brightness Select

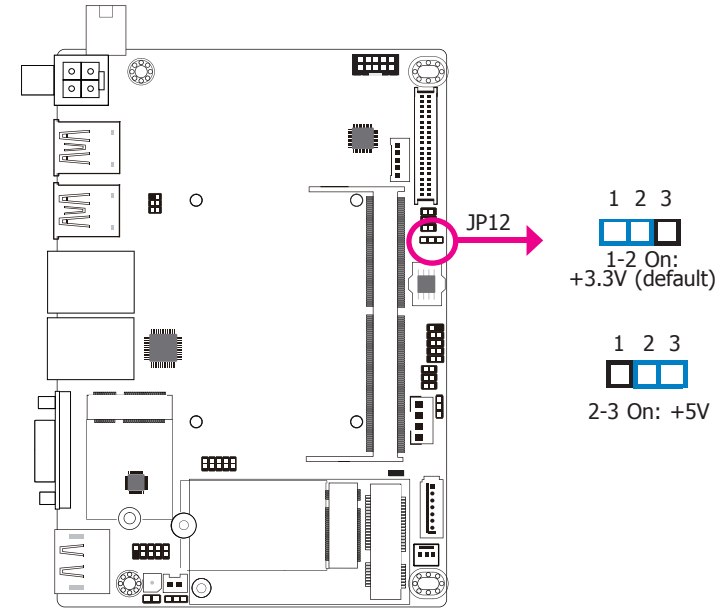


JP12 is used to select the power level of backlight brightness control: +3.3V or +5V.



Important:

Before powering-on the system, make sure that the power settings of JP12 match the power specification of backlight control. Selecting the incorrect voltage will seriously damage the backlight.

Panel Power Select

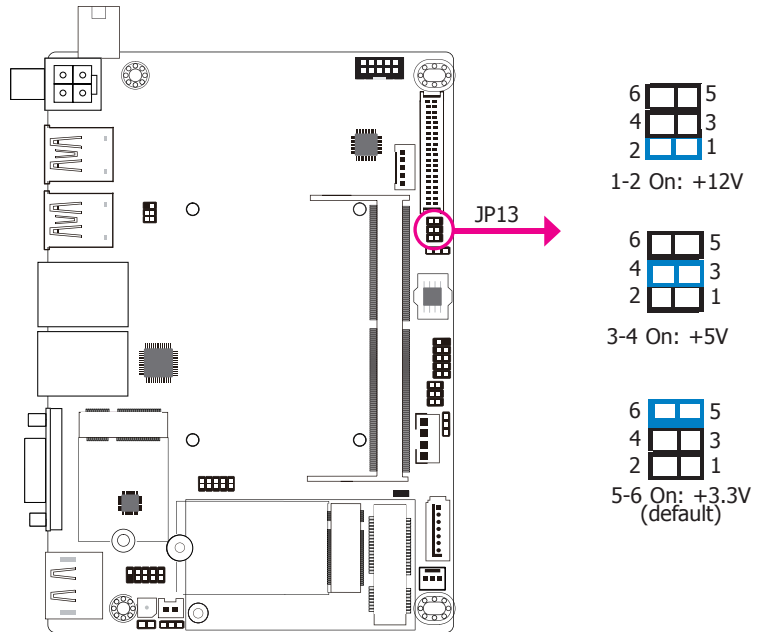


JP13 is used to select the power supplied with the LCD panel.

**Important:**

Before powering-on the system, make sure that the power settings of JP13 match the LCD panel's specification. Selecting the incorrect voltage will seriously damage the LCD panel.


Rear Panel I/O Ports

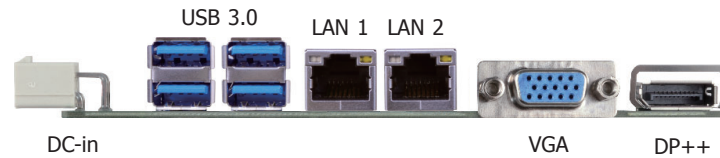

The rear panel I/O ports consist of the following:


- 1 9~36V DC-in connector
- 4 USB 3.0
- 2 GbE (RJ-45)
- 1 VGA
- 1 DP++

9~36V DC-in

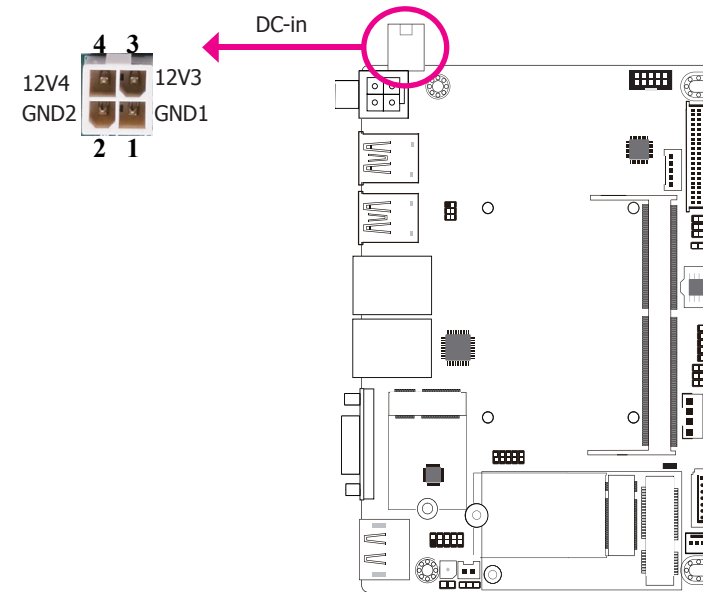

This 4-pin right angle connector is considered a low power solution. Connect a DC power cord to this connector. Using a voltage more than the recommended range may fail to boot the system or cause damage to the system board.


The 4-pin right-angle connector on the system board co-lays with a DC-in jack (optional) or 4-pin vertical type connector (optional) as the photo displayed below.

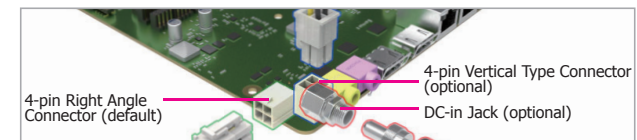

Graphics Interfaces

The display ports consist of the following:

- 1 VGA port
- 1 DP++ port

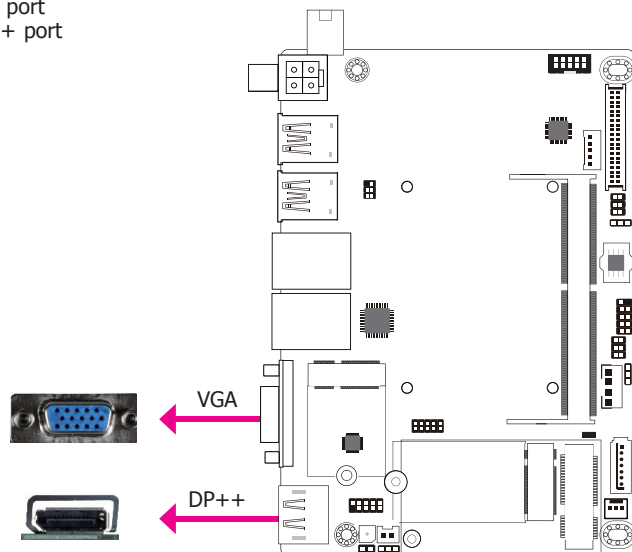

VGA Port

The VGA port is used for connecting a VGA monitor. Connect the monitor's 15-pin D-shell cable connector to the VGA port. After you plug the monitor's cable connector into the VGA port, gently tighten the cable screws to hold the connector in place.


DP++ Port

The DP++ port is a digital display interface used to connect a display device such as a computer monitor. It is used to transmit audio and video simultaneously. The interface, which is developed by VESA, delivers higher performance features than any other digital interfaces.

Driver Installation

Install the graphics driver. Refer to Chapter 4 for more information.

RJ45 LAN Ports

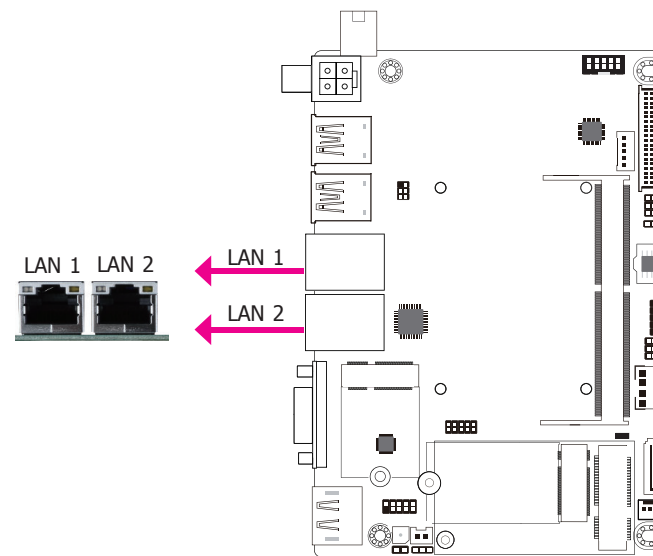

Features

- 1 Intel® I210AT/I210IT PCI Express Gigabit Ethernet controller
- 1 Intel® I219LM PCIe with iAMT11.6 (for Core™ processors)
- 1 Intel® I219V PCIe (for Celeron® processor)

The LAN ports allow the system board to connect to a local area network with a network hub.


BIOS Setting

Configure the onboard LAN in the Advanced menu (the "ACPI Configuration" submenu) of the BIOS. Refer to Chapter 3 for more information.

Driver Installation

Install the LAN drivers. Refer to Chapter 4 for more information.

USB Ports

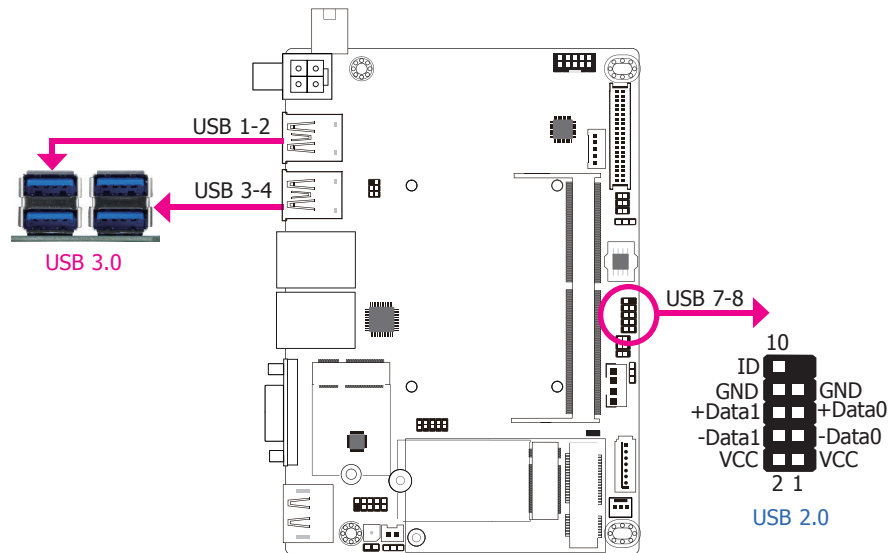

The USB device allows data exchange between your computer and a wide range of simultaneously accessible external plug and play peripherals.

The system board is equipped with 4 onboard USB 3.0 ports (USB 1-2/3-4). The 10-pin connector allows you to connect 2 additional USB 2.0 ports (USB 7-8). The additional USB ports may be mounted on a card-edge bracket. Install the card-edge bracket to an available slot at the rear of the system chassis and then insert the USB port cables to a connector.

BIOS Setting

Configure the onboard USB in the Advanced menu ("USB Configuration" submenu) of the BIOS. Refer to Chapter 3 for more information.

Driver Installation

You may need to install the proper drivers in your operating system to use the USB device. Refer to Chapter 4 for more information.

Wake-On-USB Keyboard/Mouse (optional)

The Wake-On-USB Keyboard/Mouse function allows you to use a USB keyboard or USB mouse to wake up a system from the S3 (STR - Suspend To RAM) state.




Important:

If you are using the Wake-On-USB Keyboard/Mouse function for 2 USB ports, the +5V_standby power source of your power supply must support $\geq 1.5A$. For 3 or more USB ports, the +5V_standby power source of your power supply must support $\geq 2A$.

I/O Connectors

Digital I/O Connector

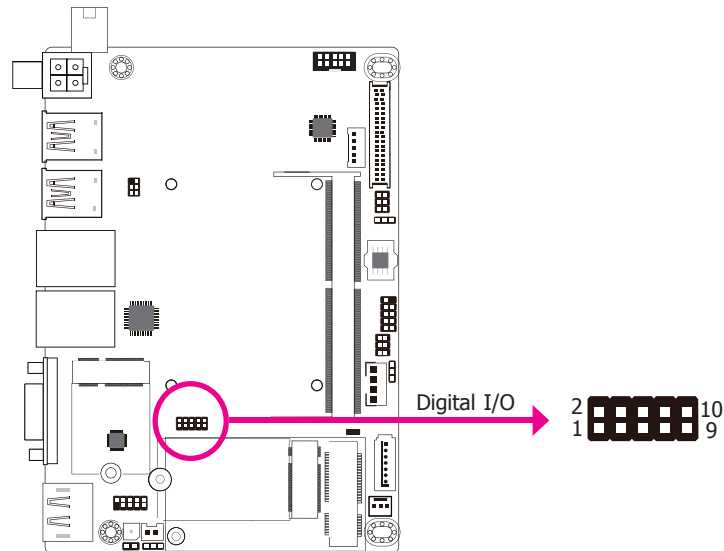


The 8-bit Digital I/O connector provides monitoring and control functions to the connected external devices.

Digital I/O Connector

Pin	Function
1	DIO7
2	DIO6
3	DIO5
4	DIO4
5	DIO3
6	DIO2
7	DIO1
8	DIO0
9	5VSB
10	GND

Front Audio Connector

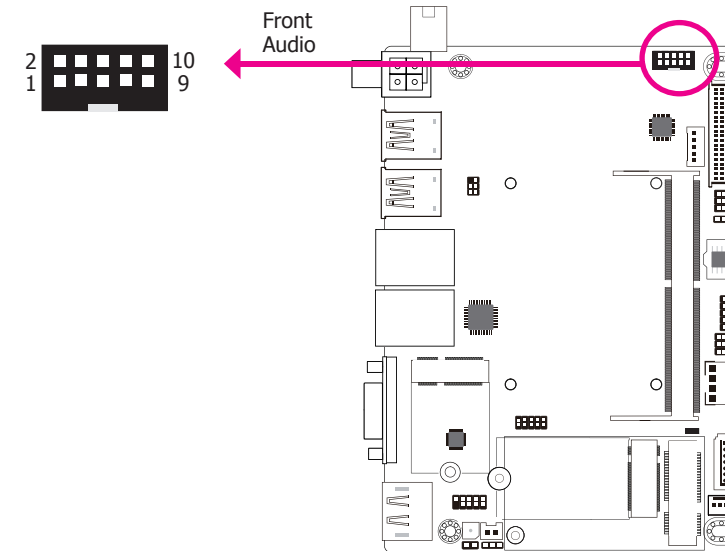

Front Audio

The front audio connector allows you to connect to the line-out and mic-in jacks that are at the front panel of your system.

Driver Installation

Install the audio driver. Refer to the Chapter 4 for more information.

Front Audio Connector


Pin	Function
1	Mic-L
2	GND
3	Mic-R
4	NC
5	Line-R
6	Mic-JD
7	GND
8	NC
9	Line-L
10	Line-JD



Note:

Front Audio Connector
 DF1 PN: 346-520520-200G
 Description: BOX HEADER, 2*5, 2.0mm, GF, 180D, SMD,
 52C-90-10GBE0(PINREX)RoHS

COM (Serial) Port

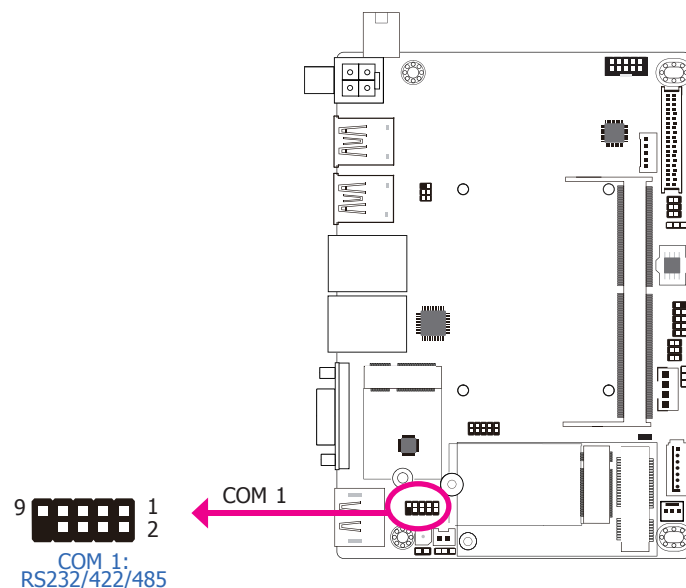

COM 1 can be selected among RS232, RS422 and RS485.

The serial port is asynchronous communication port with 16C550A-compatible UART that can be used with modems, serial printers, remote display terminals, and other serial devices.

Connecting External Serial Port

The COM port may be mounted on a card-edge bracket. Install the card-edge bracket to an available slot at the rear of the system chassis then insert the serial port cable to the COM connector. Make sure the colored stripe on the ribbon cable is aligned with pin 1 of the COM connector.

BIOS Setting

Configure the serial COM port in the Advanced menu ("SIO NUVOTON6106D" submenu) of the BIOS. Refer to Chapter 3 for more information.

COM Port


Pin	RS232	RS422 Full Duplex	RS485
1	DCD-	TX(B)	RX(B)/TX(B)
2	SIN	TX(A)	RX(A)/TX(A)
3	SO	RX(A)	NC
4	DTR-	RX(B)	NC
5	GND	GND	GND
6	DSR-	NC	NC
7	RTS-	NC	NC
8	CTS-	NC	NC
9	RI-	NC	NC



Note:


COM Port
DFI PN: 346-120521-800G
Description: PIN PLUG 2*5-1(K10)/2.0mm SMD W/cap, 222-97-05GBEA(R)(PINREX), RoHS

Standby Power LED

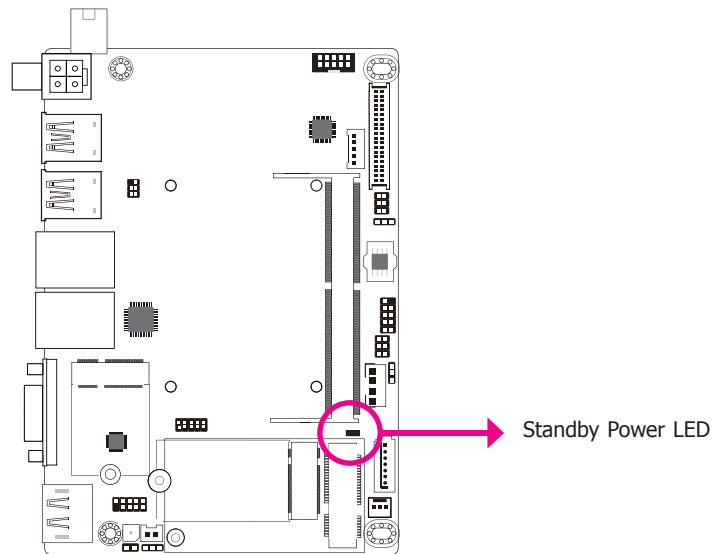

This LED will lit red when the system is in the standby mode. It indicates that there is power on the system board. Power-off the PC and then unplug the power cord prior to installing any devices. Failure to do so will cause severe damage to the motherboard and components.

Front Panel Connector

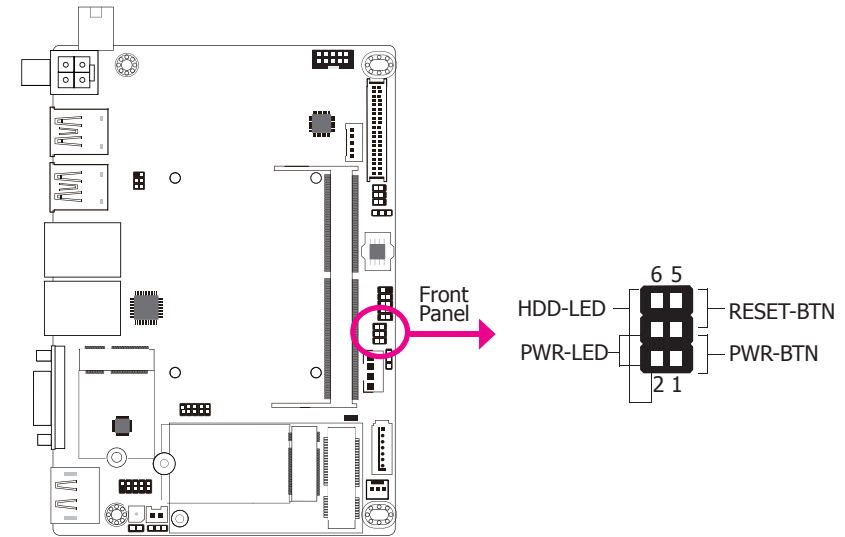

HDD-LED - Hard Drive LED

This LED will be lit when the hard drive is being accessed.

PWR-LED - Power/Standby LED

When the system's power is on, this LED will be lit. When the system is in the S1 (POS - Power On Suspend) state, it will blink every second. When the system is in the S3 (STR - Suspend To RAM) state, it will blink every 4 seconds.

RESET-BTN - Reset Button


This button allows you to reboot without having to power off the system.

PWR-BTN - Power Button

This button is used to power on or off the system.

	Pin	Pin Assignment		Pin	Pin Assignment
HDD-LED	6	HD_LED	PWR-BTN	1	Power Button
	2	LED Power		3	Ground
RESET-BTN	3	Ground	PWR-LED	2	LED Power
	5	Reset Button		4	SUS_LED

SATA (Serial ATA) Connector

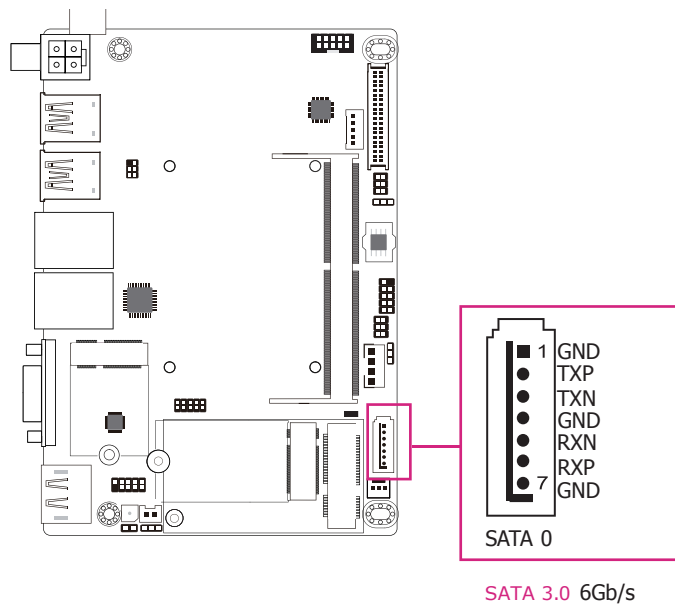

Features


- 1 Serial ATA 3.0 port with data transfer rate up to 6Gb/s
- Integrated Advanced Host Controller Interface (AHCI) controller

The Serial ATA connector is used to connect the Serial ATA device. Connect one end of the Serial ATA data cable to a SATA connector and the other end to your Serial ATA device.

BIOS Setting

Configure the Serial ATA drive in the Advanced menu ("SATA Configuration" submenu) of the BIOS. Refer to Chapter 3 for more information.


SATA (Serial ATA) Power Connector

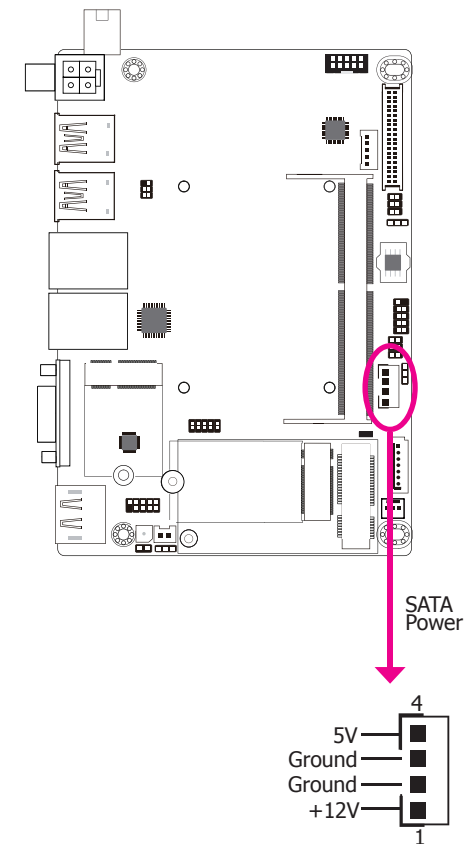

The SATA power connector supplies power to the SATA drive. Connect one end of the provided power cable to the SATA power connector and the other end to your storage device.

LVDS LCD Panel Connector

LCD/Inverter Power Connector

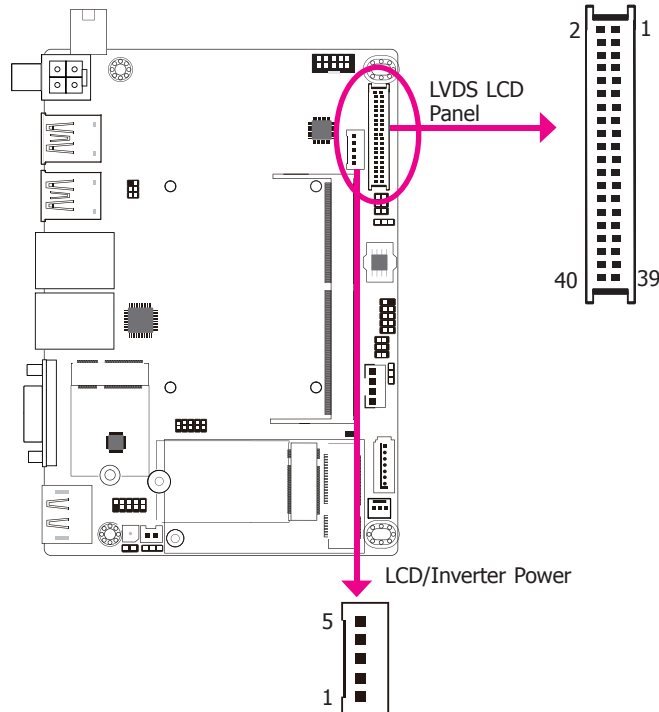

The system board allows you to connect a LCD Display Panel by means of the LVDS LCD panel connector and the LCD/Inverter power connector. These connectors transmit video signals and power from the system board to the LCD panel.

Refer to the table on the right side for the pin functions of these connectors.

BIOS Setting

Configure the system graphics and the LCD panel in the Advanced menu (the "Video Configuration" submenu) of the BIOS. Refer to Chapter 3 for more information.

LVDS LCD Panel Connector

Pin	Function	Pins	Function
1	GND	2	GND
3	LVDS_Out3+ (Odd_3+)	4	LVDS_Out7+ (Even_3+)
5	LVDS_Out3- (Odd_3-)	6	LVDS_Out7- (Even_3-)
7	GND	8	GND
9	LVDS_Out2+ (Odd_2+)	10	LVDS_Out6+ (Even_2+)
11	LVDS_Out2- (Odd_2-)	12	LVDS_Out6- (Even_2-)
13	GND	14	GND
15	LVDS_Out1+ (Odd_1+)	16	LVDS_Out5+ (Even_1+)
17	LVDS_Out1- (Odd_1-)	18	LVDS_Out5- (Even_1-)
19	GND	20	GND
21	LVDS_Out0+ (Odd_0+)	22	LVDS_Out4+ (Even_0+)
23	LVDS_Out0- (Odd_0-)	24	LVDS_Out4- (Even_0-)
25	GND	26	GND
27	LVDS_CLK1+ (Odd_CLK+)	28	LVDS_CLK2+ (Even_CLK+)
29	LVDS_CLK1- (Odd_CLK-)	30	LVDS_CLK2- (Even_CLK-)
31	GND	32	GND
33	DDC_CLK	34	NC
35	DDC_DATA	36	+3.3V
37	Panel Power	38	Panel Power
39	Panel Power	40	Panel Power

LCD/Inverter Power Connector

Pin	Function
1	+12V
2	GND
3	Panel Backlight On/Off Control
4	Dimming Control
5	+5V

**Note:**

1. LVDS LCD Panel Connector:

DFI PN: 346-714000-204G


Description: WTB HEADER 40P, 1.25mm, M, H=4.8mm, 180D, SMT, BEIGE, 712-76-40GWE0(PINEX)RoHS

2. LCD/Inverter Power Connector:

DFI PN: 346-510520-120G

Description: BOX HEADER 1*5P, 2.0mm, 180D, WHITE, DIP 721-81-055W00(PINEX)RoHS

Cooling Fan Connector

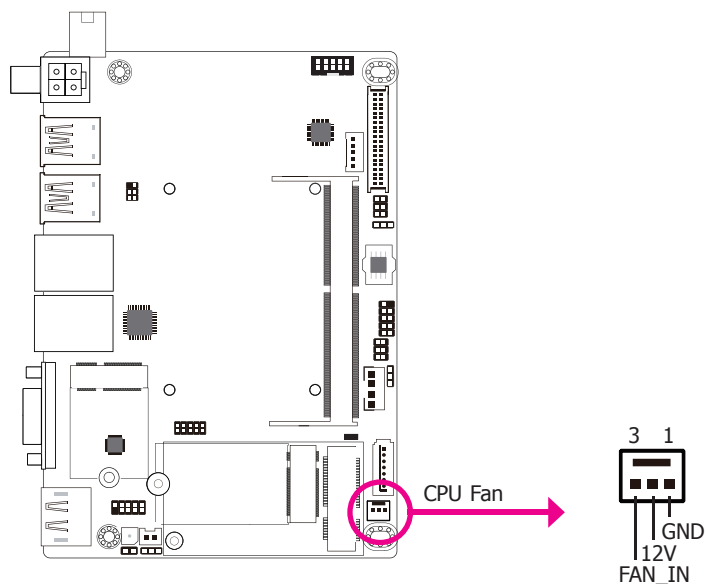


The fan connector is used to connect the cooling fan. The cooling fan will provide adequate airflow throughout the chassis to prevent overheating the CPU and system board components.

BIOS Setting

The Advanced menu ("PC Health Status" of the "SIO NOVOTON6106D" submenu) of the BIOS will display the current speed of the cooling fans. Refer to Chapter 3 for more information.

Expansion Slots

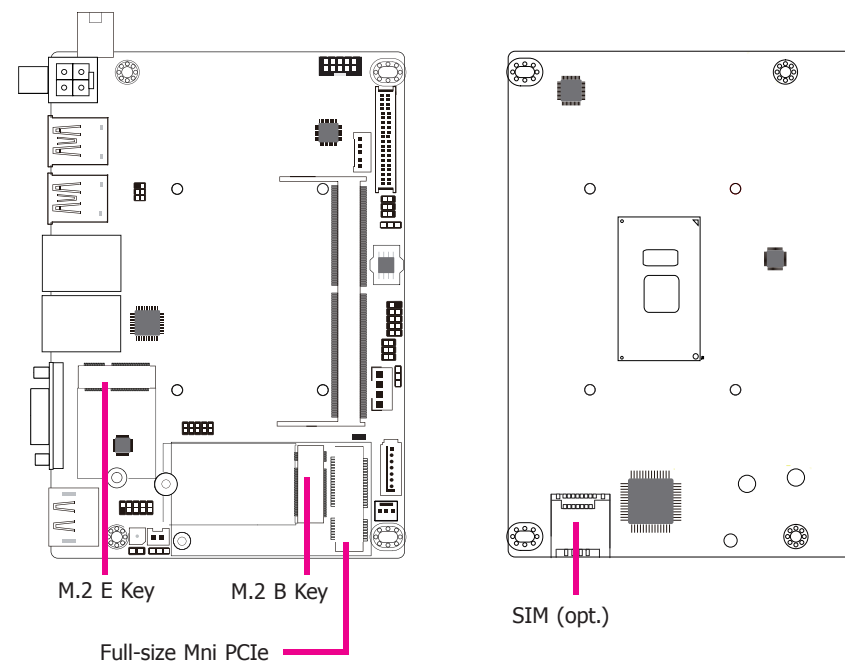

M.2 Sockets

The M.2 socket is the Next Generation Form Factor (NGFF) which is designed to support multiple modules and make the M.2 more suitable in application for solid-state storage. M.2 E key 2230 socket supports PCIe x1 and USB 2.0 signals. M.2 B key 2242 socket supports SATA (default) or PCIe x2 (bus selection by JP7 jumper) and USB 2.0 signals.


Mini PCI Express Slot

The full-size Mini PCIe socket supports PCIe x1 and USB 2.0 or USB 3.1 Gen 1 (optional) signals and is used to install a Mini PCIe card.

SIM (Optional)


The SIM slot on the system board is used to insert a SIM card.

SMBus Connector

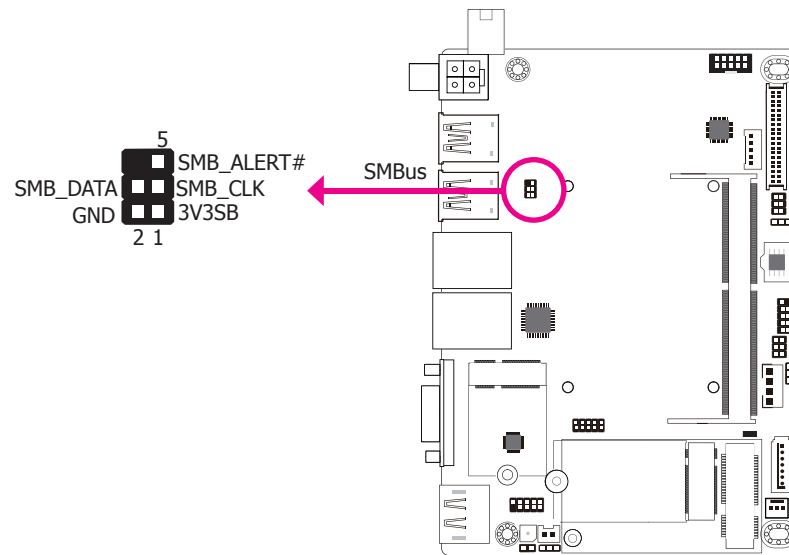

The SMBus (System Management Bus) connector is used to connect SMBus devices. It is a multiple device bus that allows multiple chips to connect to the same bus and enable each one to act as a master by initiating data transfer.

Chassis Intrusion Connector

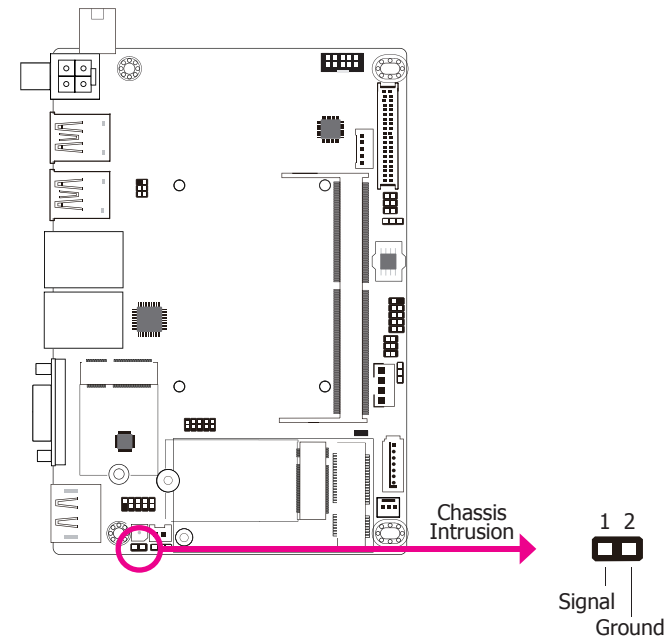


The board supports the chassis intrusion detection function. Connect the chassis intrusion sensor cable from the chassis to this connector. When the system's power is on and a chassis intrusion occurred, an alarm will sound. When the system's power is off and a chassis intrusion occurred, the alarm will sound only when the system restarts.

BIOS Setting

Configure the chassis intrusion detection function in the Advanced menu ("SIO NUVO-TON6106D" submenu) of the BIOS. Refer to Chapter 3 for more information.

Battery

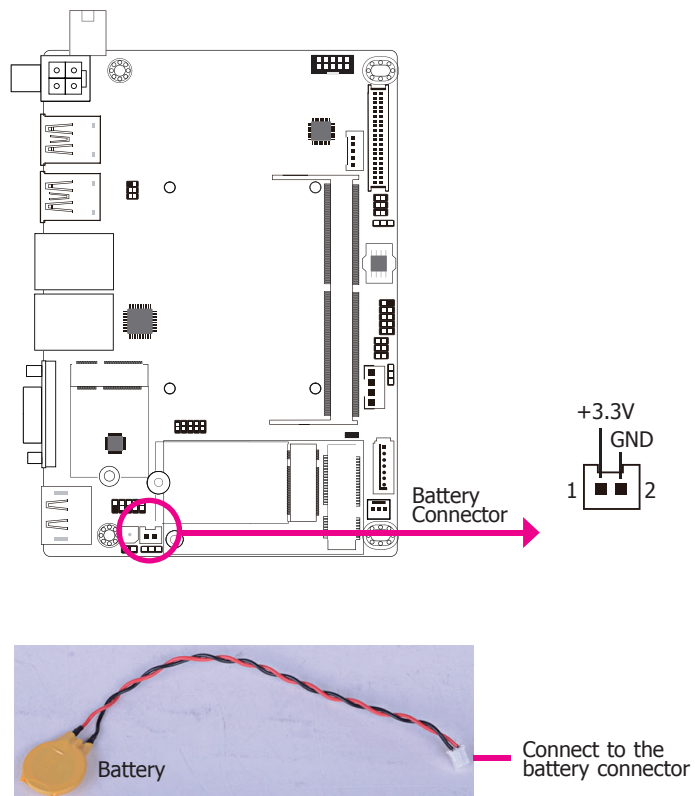

The lithium ion battery powers the real-time clock and CMOS memory. It is an auxiliary source of power when the main power is shut off.

Safety Measures

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to local ordinance.

Chapter 3 - BIOS Setup

Overview

The BIOS is a program that takes care of the basic level of communication between the CPU and peripherals. It contains codes for various advanced features found in this system board. The BIOS allows you to configure the system and save the configuration in a battery-backed CMOS so that the data retains even when the power is off. In general, the information stored in the CMOS RAM of the EEPROM will stay unchanged unless a configuration change has been made such as a hard drive replaced or a device added.

It is possible that the CMOS battery will fail causing CMOS data loss. If this happens, you need to install a new CMOS battery and reconfigure the BIOS settings.


Note:

The BIOS is constantly updated to improve the performance of the system board; therefore the BIOS screens in this chapter may not appear the same as the actual one. These screens are for reference purpose only.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering the BIOS Setup Utility

The BIOS Setup Utility can only be operated from the keyboard and all commands are keyboard commands. The commands are available at the right side of each setup screen.

The BIOS Setup Utility does not require an operating system to run. After you power up the system, the BIOS message appears on the screen and the memory count begins. After the memory test, the message "Press DEL to run setup" will appear on the screen. If the message disappears before you respond, restart the system or press the "Reset" button. You may also restart the system by pressing the <Ctrl> <Alt> and keys simultaneously.

Legends

Keys	Function
Right and Left arrows	Moves the highlight left or right to select a menu.
Up and Down arrows	Moves the highlight up or down between submenu or fields.
<Esc>	Exit to the BIOS Setup Utility.
<F5>	Scrolls forward through the values or options of the highlighted field.
<F6>	Scrolls backward through the values or options of the highlighted field.
<F1>	Displays general help
<F9>	Optimized defaults
<F10>	Saves and resets the setup program.
<Enter>	Press <Enter> to enter the highlighted submenu.

Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu

When "►" appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press <Enter>.

Insyde BIOS Setup Utility

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

InsydeH2O Setup Utility			Rev. 5.0
Main	Advanced	Security	Boot Exit
Project Name	KU553	This is the help for the hour, minute, second field. Valid range is from 0 to 23, 0 to 59, 0 to 59. INCREASE/REDUCE: +/-.	
BIOS Version	B18C.12A		
Processor Type	Intel(R) Core(TM) i5-7300U CPU @ 2.60GHz		
CPUID	0x806E9 (KABYLAKE ULT ULX)		
CPU Speed	2700 MHz		
CPU Stepping	09 (KBL H0/J0 Stepping)		
L1 Data Cache	32 KB		
L1 Instruction Cache	32 KB		
L2 Cache	256 KB		
L3 Cache	3072 KB		
Number Of Processors	2 Core(s) / 4 Thread(s)		
Microcode Rev	0000008E		
Total Memory	4096 MB		
System Memory Speed	2133 MHz		
SODIMM 0	4096 MB		
PCH Rev / SKU	21 (C1 Stepping) / SKL PCH-LP		
Intel ME Version / SKU	(U) iHDCP 2.2 Premium 11.8.50.3434 / CORPORATE		
System Time	[09:07:00]		
System Date	[12/26/2018]		
F1 Help	↑/↓ Select Item	F5/F6 Change Values	F9 Setup Defaults
Esc Exit	←/→ Select Item	Enter Select ► SubMenu	F10 Save and Exit

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

System Date

The date format is <month>, <date>, <year>. Month displays the month, from 01 to 12. Date displays the date, from 01 to 31. Year displays the year, from 2000 to 2099.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.




Important:

Setting incorrect field values may cause the system to malfunction.

InsydeH2O Setup Utility			Rev. 5.0
Main	Advanced	Security	Boot Exit
▶ACPI Configuration ▶CPU Configuration ▶Video Configuration ▶Audio Configuration ▶SATA Configuration ▶USB Configuration ▶PCI Express Configuration ▶ME Configuration ▶MEBX Configuration ▶Active Management Technology Support ▶Debug Configuration ▶UEFI Device Manager ▶SIO NUVOTON6106D ▶Console Redirection			ACPI Configuration Setting
F1 Help	↑/↓ Select Item	F5/F6 Change Values	F9 Setup Defaults
Esc Exit	←/→ Select Item	Enter Select ► SubMenu	F10 Save and Exit

ACPI Configuration

This section is used to configure the system ACPI parameters.

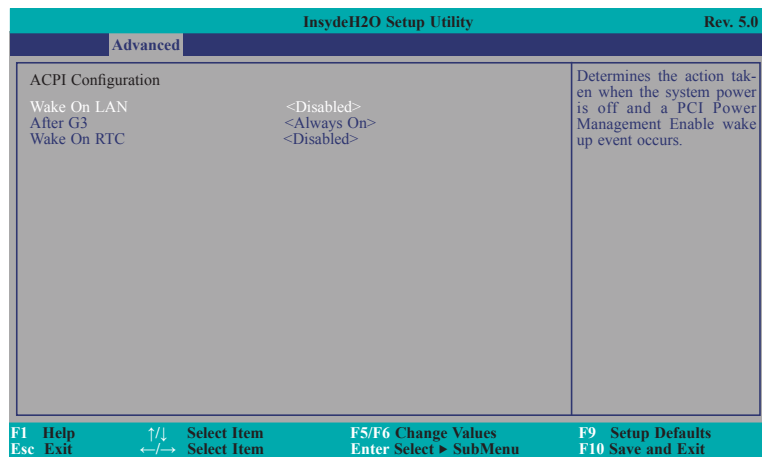

Wake On LAN

This field is used to enable or disable the LAN signal to wake up the system.

After G3

This field is to specify what state to go when power is re-applied after a power failure (G3 state).

Always On The system working state.

Always Off Off, except for trickle current to devices such as the power button.

Wake On RTC

Automatically power the system on at a particular time every day from the Real-time clock battery.


Wake up time

When Wake On RTC is set to enabled, specify the wake up time of the day: <hour> (00~23), <minute> (00~59), <second> (00~59).



Note:

Under Dual Boot Type or UEFI Boot Type mode, if Quiet Boot is set to enabled, BGRT Logo field will appear for configuration. Refer to the Boot menu in this chapter for more information.

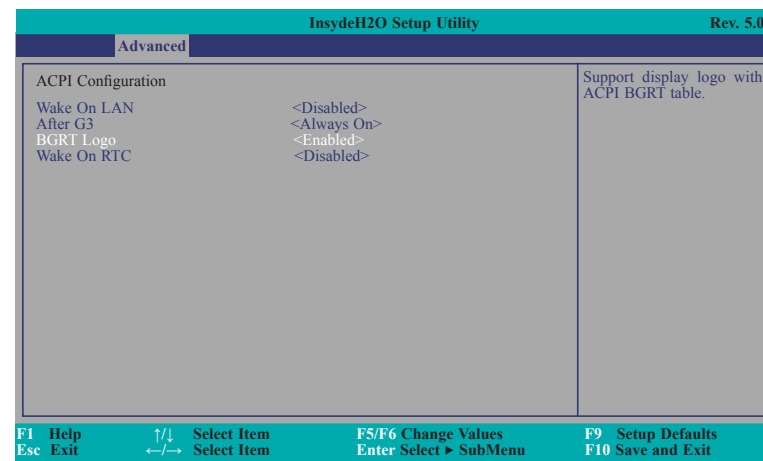


BGRT Logo

This field is used to enable or disable to support display logo with ACPI BGRT table.

CPU Configuration

This section is used to configure the CPU.

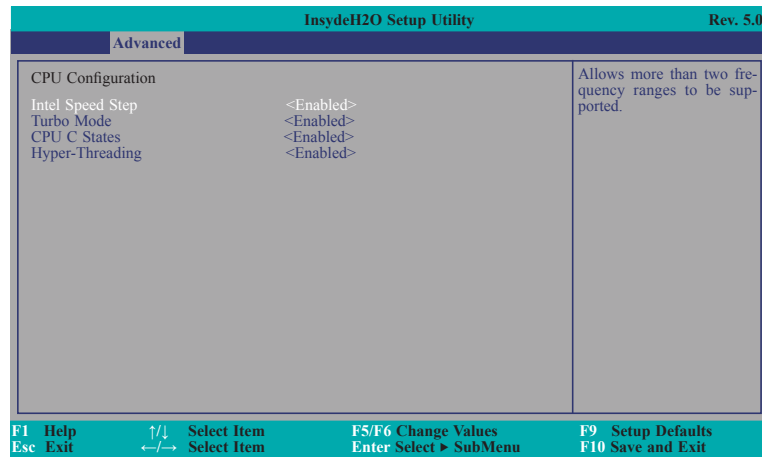

Intel Speed Step

This field is used to enable or disable the Intel Enhanced SpeedStep Technology.

Turbo Mode

Enable or disable the turbo mode.

CPU C States


Enable or disable the CPU Power Management.

Hyper-Threading

Enables this field for Windows XP and Linux which are optimized for Hyper-Threading technology. Select disabled for other OSes not optimized for Hyper-Threading technology. When disabled, only one thread per enabled core is enabled.

Video Configuration

This section configures the video settings.

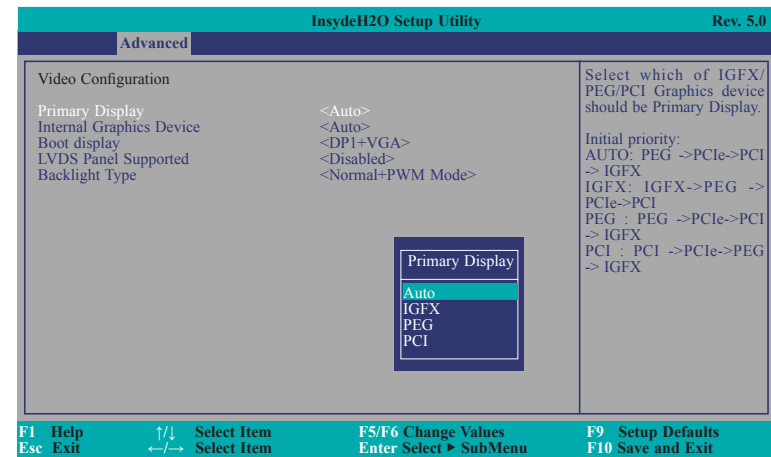

Primary Display

Set the initial priority.

Internal Graphics Device

Keep IGFX enabled or disabled based on the setup options.

Boot display

Set the display device combination.




Note:

To control "Primary Display" & "Boot display", first go to "Boot" menu and select different "Boot Type".

Boot Type : Legacy Boot Type -> Hide Primary Display & Show Boot display

Boot Type : UEFI Boot Type -> Show Primary Display & Hide Boot display

Boot Type : Dual Boot Type -> Show Primary Display & Show Boot display

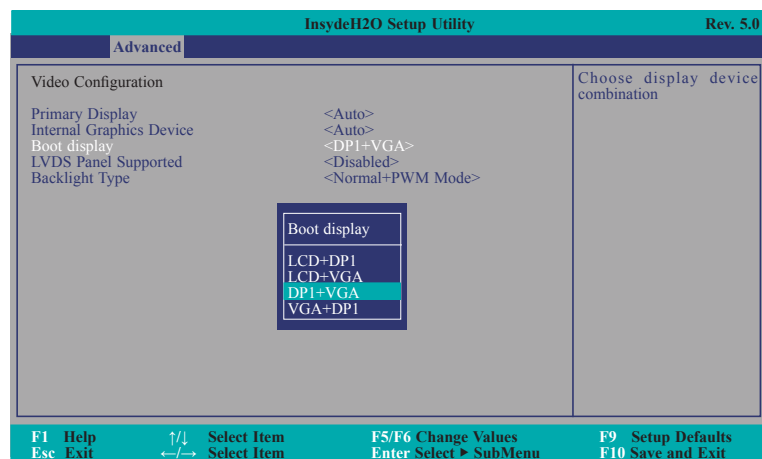

LVDS Panel Supported

This field is used to enable or disable the PTN3460 function for LVDS Panel. If enabled, PTN3460 Configuration and LCD Panel Type fields will appear for configuration.

PTN3460 Configuration

Select PTN3460 color depth configuration: 18 Bit, 24 Bit, 36 Bit or 48 Bit.

LCD Panel Type


Select LCD Panel Type: 800x480, 800x600, 1024x768, 1366x768, 1280x1024, 1920x1080 or 1920x1200.

Backlight Type

This field is only available for Dual Boot Type or Legacy Boot Type mode. Select Backlight Type: Normal+PWM Mode, Normal+DC Mode, Invert+PWM Mode or Invert+DC Mode.

Audio Configuration

This section is used to configure the audio settings.

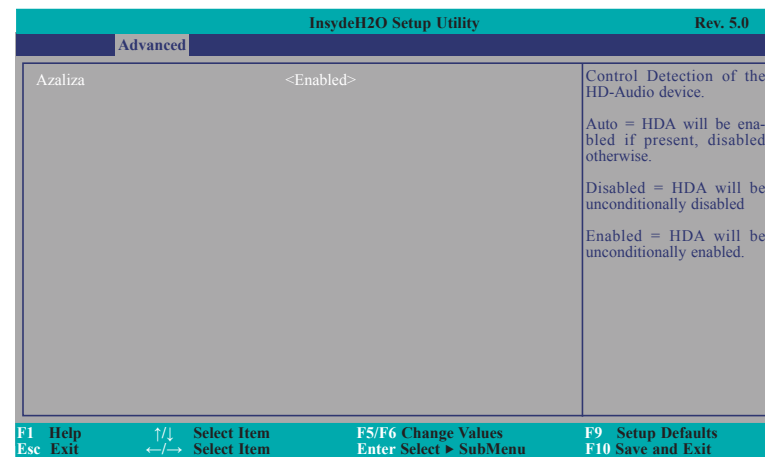

Azalza

Control the detection of the Azalza device.

Disabled

HDA will be unconditionally disabled.

Enabled


HDA will be unconditionally enabled.

Auto

HDA will be enabled if present, disabled otherwise.

SATA Configuration

This section is designed to select the SATA controller and the type of hard disk drive which are installed in your system unit.

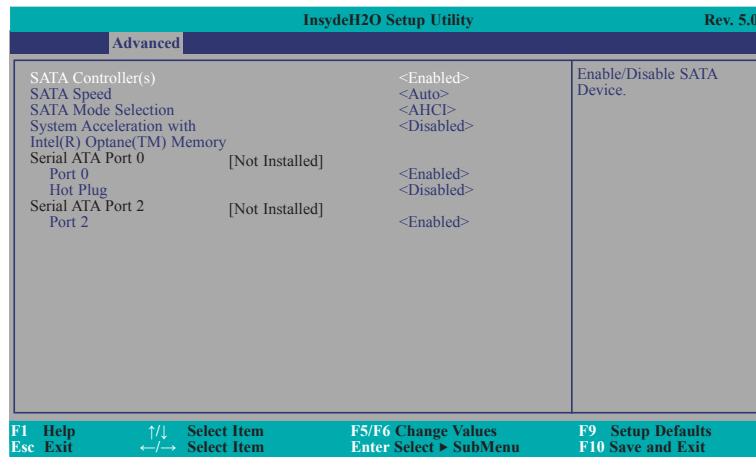

SATA Controller(s)

This field is used to enable or disable Serial ATA devices.

SATA Speed

This field is used to select SATA speed generation limit: Auto, Gen1, Gen2 or Gen3.

SATA Mode Selection

The mode selection determines how the SATA controller(s) operates.

AHCI

This option allows the Serial ATA devices to use AHCI (Advanced Host Controller Interface).

Intel RST Premium With Intel Optane System Acceleration

This option allows you to create RAID or Intel Rapid Storage configuration with Intel® Optane™ system acceleration on Serial ATA devices.

System Acceleration with Intel(R) Optane(TM) Memory


This field is used to enable or disable the system acceleration with Intel® Optane™ memory feature.

Serial ATA Port 0/2 and Hot Plug

These fields are used to enable or disable the serial ATA ports and their hot plugs.

USB Configuration

This section is used to configure the parameters of the USB device.

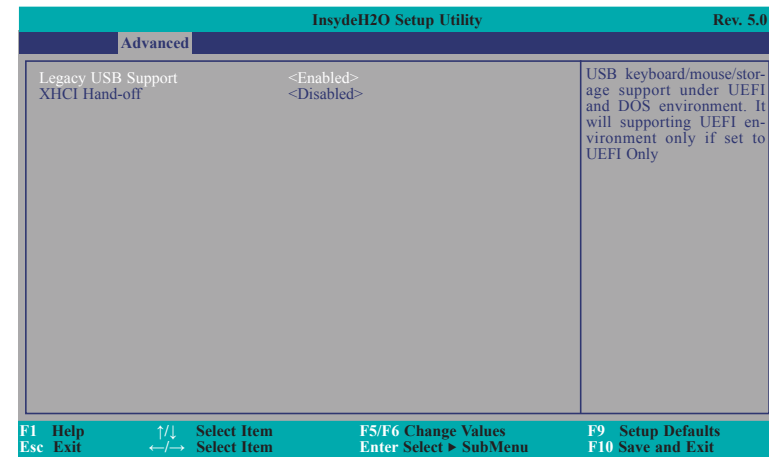

Legacy USB Support

Disabled

Disable USB keyboard/mouse/storage support under UEFI and DOS environment.

Enabled

Enable USB keyboard/mouse/storage support under UEFI and DOS environment.

UEFI Only




Enable USB keyboard/mouse/storage support under UEFI environment.

XHCI Hand-off

Enable or disable to clear USB Legacy SMI bit for XHCI and EHCI.

PCI Express Configuration

This section configures settings relevant to PCI Express root ports.

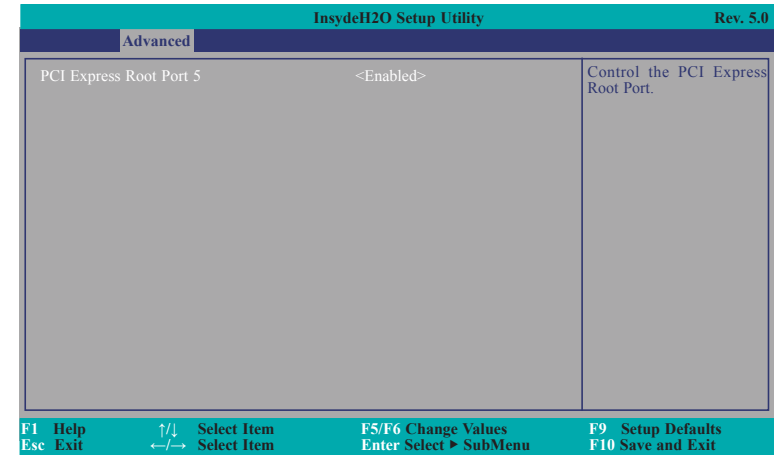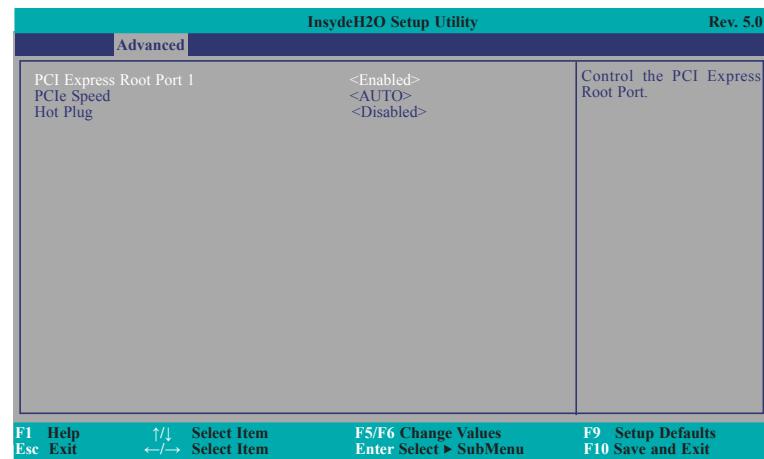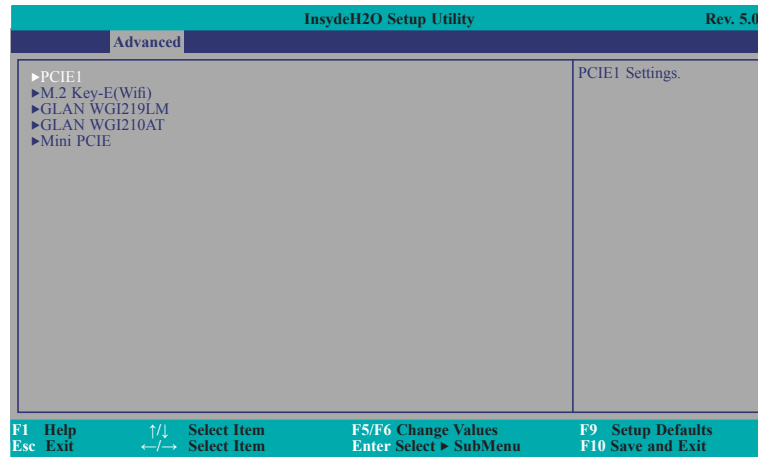

PCI Express Root Port 1/3/5/6/12

This field is used to enable or disable the PCI Express Root Port.

PCIe Speed


Select the speed of the PCI Express Root Port: Auto, Gen1, Gen2 or Gen3.

Hot Plug

This field is used to enable or disable the PCI Express Hot Plug.

ME Configuration

This section configures settings relevant to flash ME region.

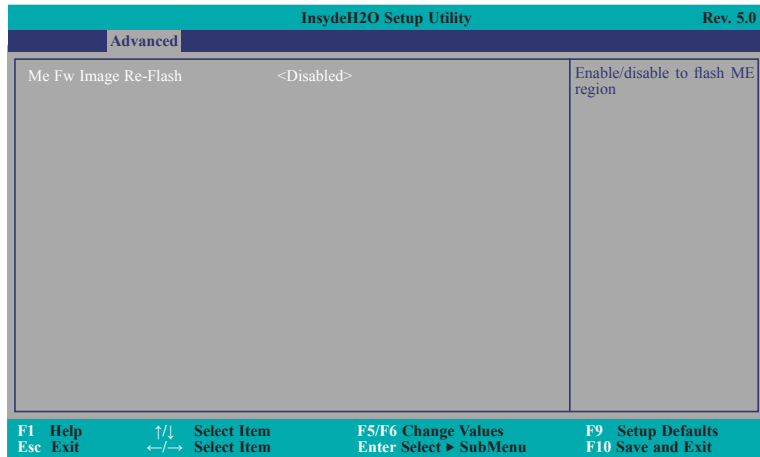

Me Fw Image Re-Flash


This field is used to enable or disable the flash ME region.

MEBX Configuration

Configure Intel® Active Management Technology (Intel® AMT) in the Intel® Management Engine BIOS Extension (MEBX) section. Please refer to **Chapter 6** for more information.

Active Management Technology Support

The section allows users to enable or disable the Intel® Active Management Technology (Intel® AMT). Please refer to **Chapter 6** for more information.

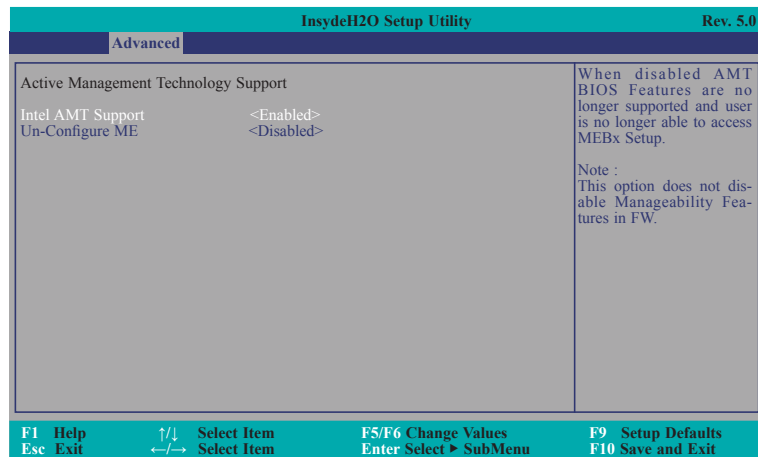

Intel AMT Support (for Core i7/i5 processors only)


This field is used to enable or disable Intel® Active Management Technology.

Un-Configure ME

This field is used to enable or disable to un-configure ME with resetting MEBX password to default.


Debug Configuration

This section configures debug setting.

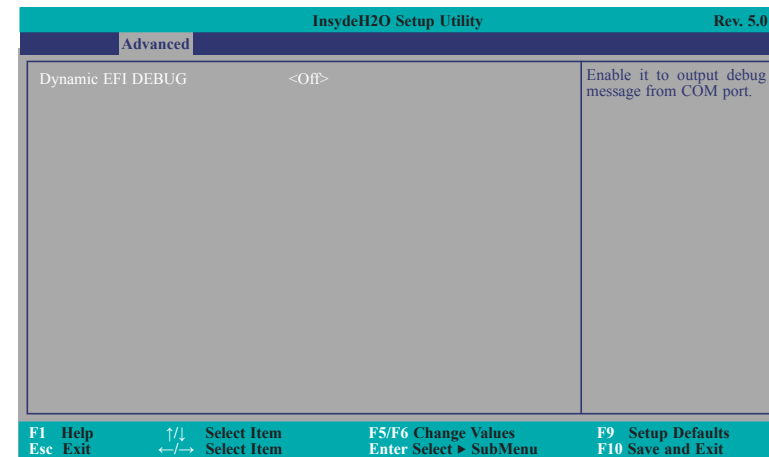


Dynamic EFI DEBUG

This field is used to turn on or off the function to output debug message from COM port. When set to on, relevant EFI debug information will display as below.

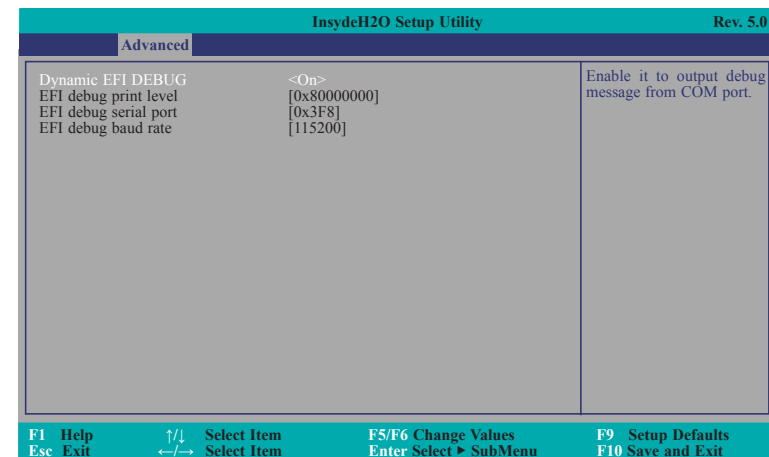


UEFI Device Manager

The section configures UEFI device with option ROM, such as LAN card, etc.

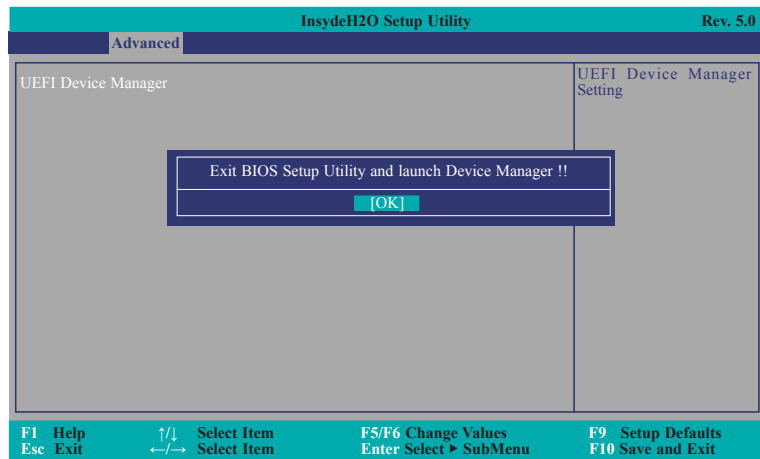


SIO NUVONTON6106D

This section configures the system super I/O chip parameters.

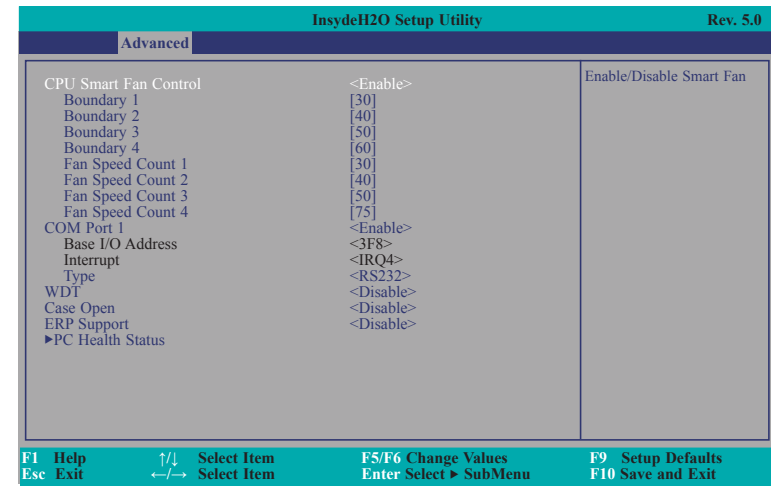

CPU Smart Fan Control

Enable or disable the CPU smart fan. When disabled, Fix Fan Speed Count field will appear for configuration.

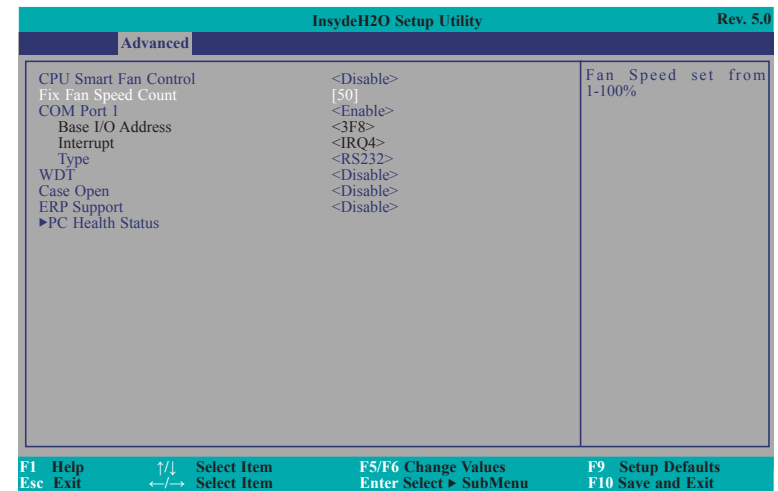

Fix Fan Speed Count

Set the fix fan speed. The range is from 1-100% (full speed).

Boundary 1 to Boundary 4

Set the boundary temperatures that determine the operation of the fan with different fan speeds accordingly. For example, when the system or the CPU temperature reaches boundary temperature 1, the system or CPU fan should be turned on and operate at the designated speed. The range is from 0-127°C.

Fan Speed Count 1 to Fan Speed Count 4

Set the fan speed. The range is from 1-100% (full speed).

COM Port 1

Configure the settings to use the serial port.

Disable No configuration

Enable User configuration

Type

Choose RS232/RS485/RS422 (Peer-to-Peer) for COM type.

WDT

Enable or disable the watchdog function. A counter will appear if you select to enable WDT. Input any value between 1 to 255 seconds.

Case Open

Enable or disable the case open detection.

ERP Support

Enable or disable ERP Support Setting.


PC Health Status

This section displays the PC health status.

InsydeH2O Setup Utility		Rev. 5.0
Advanced		
PC Health Status		
Voltage		
VBAT	3.056	V
VCORE	0.896	V
VDDQ	1.200	V
5V	4.939	V
+12V	12.144	V
Temperature		
System (°C/°F)	38.5 C/	101.3 F
CPU (°C/°F)	45.5 C/	113.9 F
Fan Speed		
CPU FAN	0	RPM
F1 Esc	Help Exit	↑/↓ Select Item ←/→ Select Item
		F5/F6 Change Values Enter Select ► SubMenu
		F9 Setup Defaults F10 Save and Exit

Console Redirection


This section configures settings relevant to console redirection.

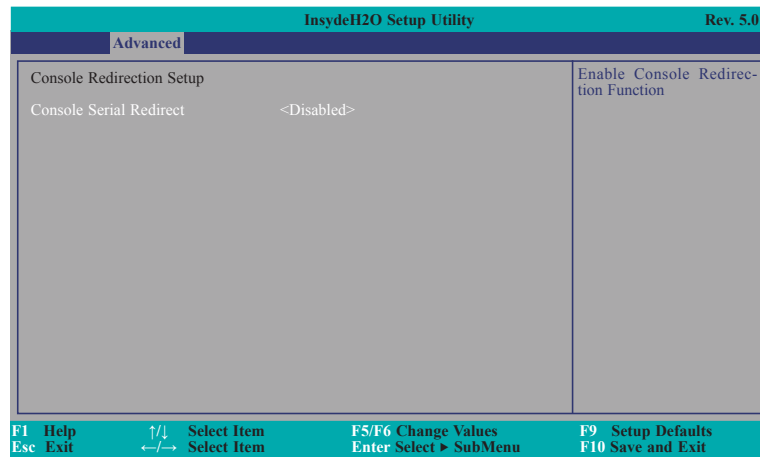

Console Serial Redirect

This field is used to enable or disable the console serial redirection function.

When Console Serial Redirect is set to enabled, the screen will appear like below:

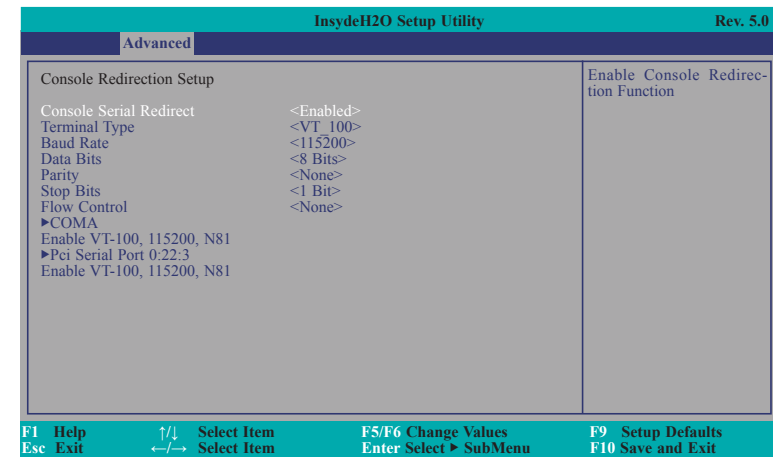

Terminal Type

Select terminal type: VT_100, VT_100+, VT_UTF8 or PC_ANSI.

Baud Rate

Select baud rate: 115200, 57600, 38400, 19200, 9600, 4800, 2400 or 1200.

Data Bits

Select data bits: 7 Bits or 8 Bits.

Parity

Select parity bits: None, Even or Odd.


Stop Bits

Select stop bits: 1 Bit or 2 Bits.

Flow Control

Select flow control type: None, RTS/CTS or XON/XOFF.

COMA and Pci Serial Port 0:22:3

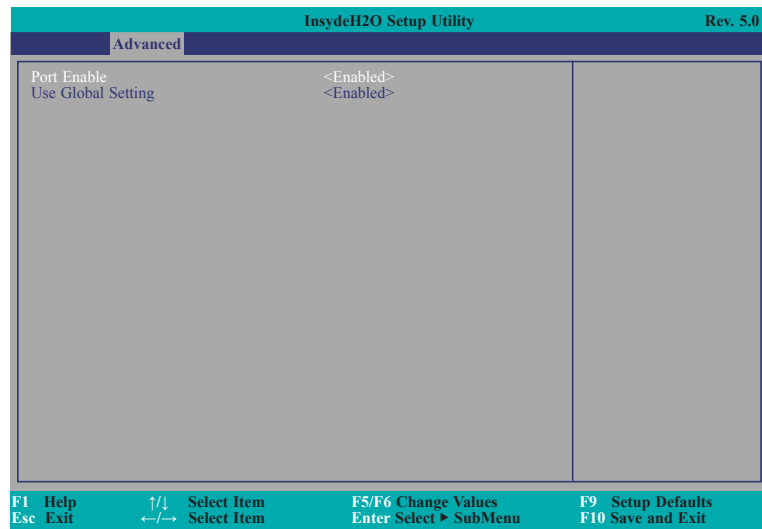


Port Enable

This field is used to enable or disable the COM port to redirect the console.


Use Global Setting

This field is to enable or disable to use global setting. When enabled the global setting, setting of the COM port will be the same as those in Console Redirection section. When disabled the global setting, setting of the COM port can be configured independently in this section.

When Use Global Setting is set to disabled, the screen will appear like below:

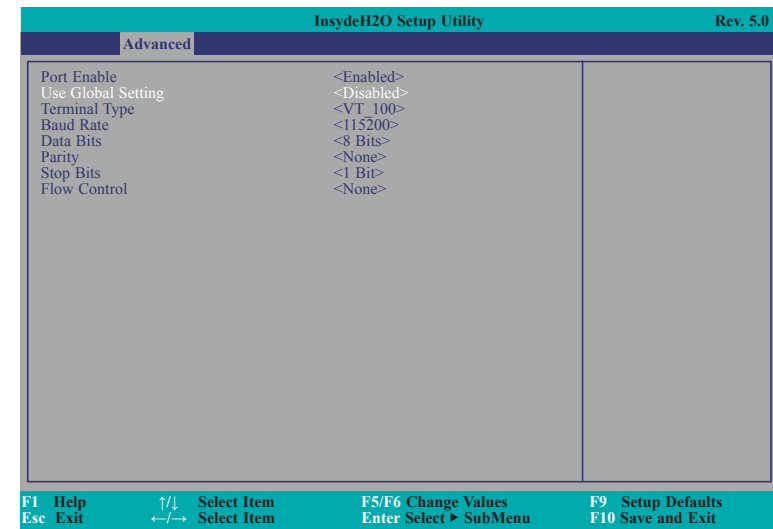

Security

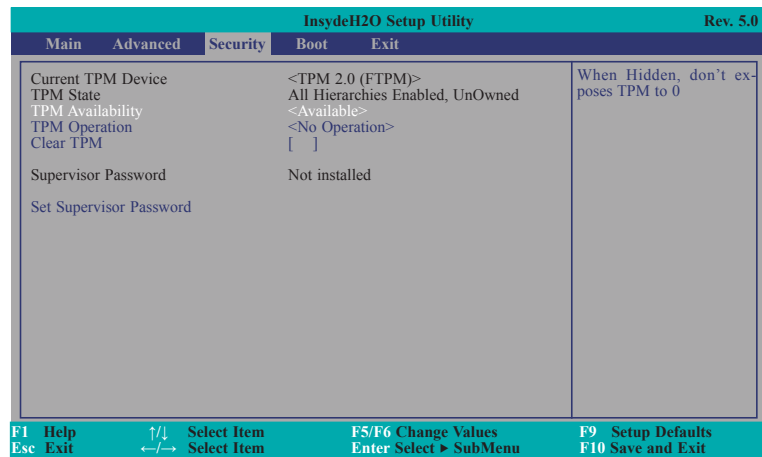

TPM Availability

Show or hide the TPM availability and its configurations.

TPM Operation

Enable or disable the TPM function. It displays the following options:

No Operation No changes to current state.

Enable Enable and activate TPM.


Clear TPM

Remove all TPM context associated with a specific owner.

Set Supervisor Password

Set the supervisor's password and the length of the password must be greater than one character.

Boot

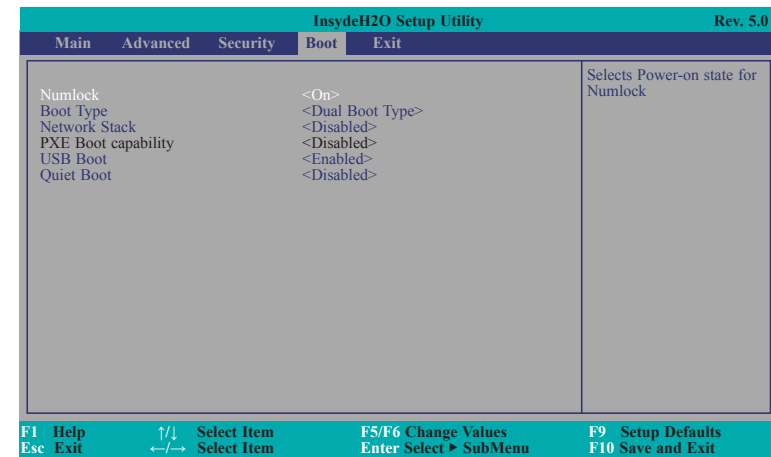

Numlock

Select the power-on state for numlock.

Boot Type

Select the boot type. The options are Dual Boot Type, Legacy Boot Type or UEFI Boot Type.

If you select "Dual Boot Type" or "UEFI Boot Type", the "Network Stack", "PXE Boot capability", "USB Boot" and "Quiet Boot" will show up.

If you select "Legacy Boot Type", "PXE Boot to LAN", "USB Boot" and "Quiet Boot" will show up.



Note:

If the boot type is set to UEFI, the method for RAID volume creation will be different. Please refer to Chapter 5 - RAID for more information.

Network Stack

This field is used to enable or disable network stack.

PXE Boot capability

Disabled Support Network Stack

UEFI IPv4/IPv6

Legacy Legacy PXE OPRM only

PXE Boot to LAN


Disables or enables PXE boot to LAN.

USB Boot

Enable or disable to change USB boot devices boot order.

Quiet Boot

Enable or disable booting in text mode.

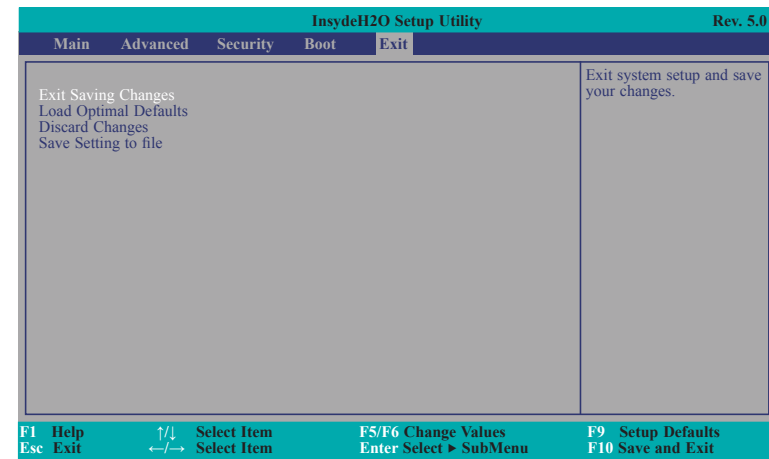Exit**Exit Saving Changes**

Select Yes and press <Enter> to exit the system setup and save your changes.

Load Optimal Defaults

Select YES and press <Enter> to load optimal defaults.

Discard Changes

Select YES and press <Enter> to exit the system setup without saving your changes.

Save Setting to file

Select this option to save BIOS configuration settings to a USB flash device.

Restore Setting from file

This field will appear only when a USB flash device is detected. Select this field to restore setting from the USB flash device.

Updating the BIOS

To update the BIOS, you will need the new BIOS file and a flash utility. Please contact technical support or your sales representative for the files and specific instructions about how to update BIOS with the flash utility. For updating Insyde BIOS in UEFI mode, you may refer to the how-to-video at <https://www.dfi.com/Knowledge/Video/31>.

Notice: BIOS SPI ROM

1. The Intel® Management Engine has already been integrated into this system board. Due to the safety concerns, the BIOS (SPI ROM) chip cannot be removed from this system board and used on another system board of the same model.
2. The BIOS (SPI ROM) on this system board must be the original equipment from the factory and cannot be used to replace one which has been utilized on other system boards.
3. If you do not follow the methods above, the Intel® Management Engine will not be updated and will cease to be effective.

**Note:**

- a. You can take advantage of flash tools to update the default configuration of the BIOS (SPI ROM) to the latest version anytime.
- b. When the BIOS IC needs to be replaced, you have to populate it properly onto the system board after the EEPROM programmer has been burned and follow the technical person's instructions to confirm that the MAC address should be burned or not.

Chapter 4 - Supported Software


Please download drivers, utilities and software applications required to enhance the performance of the system board at <https://www.dfi.com/product/index/1429>.

Intel Chipset Software Installation Utility


The Intel Chipset Software Installation Utility is used for updating Windows® INF files so that the Intel chipset can be recognized and configured properly in the system.

To install the utility, download "KU553 Chipset Driver" zip file at our website.


1. Setup is ready to install the utility. Click "Next".

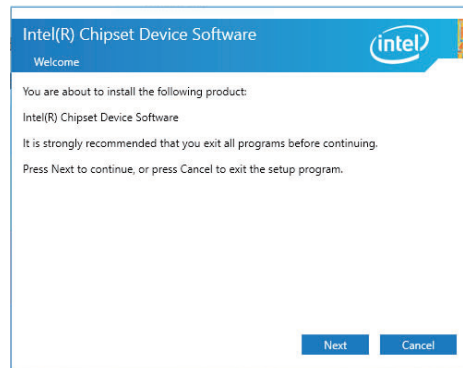


2. Read the license agreement then click "Accept".

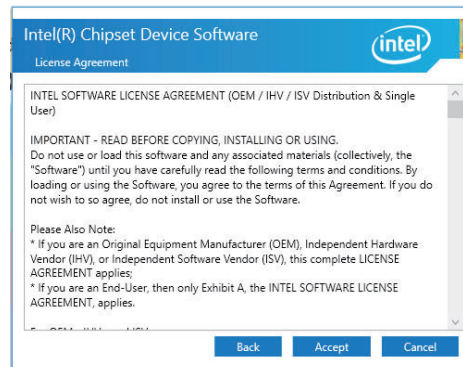

3. Go through the readme document for more installation tips then click "Install".

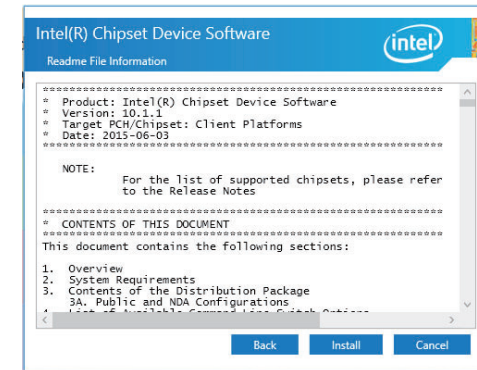


4. The step displays the installing status in the progress.

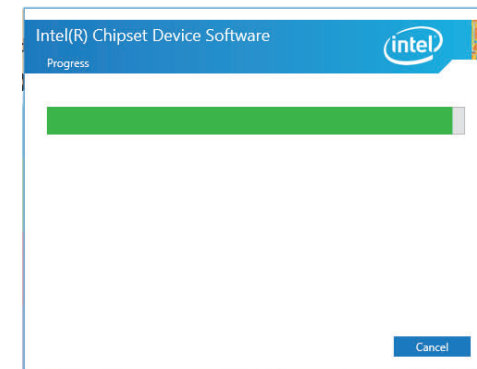

5. After completing installation, click "Restart Now" to exit setup.


Restarting the system will allow the new software installation to take effect.

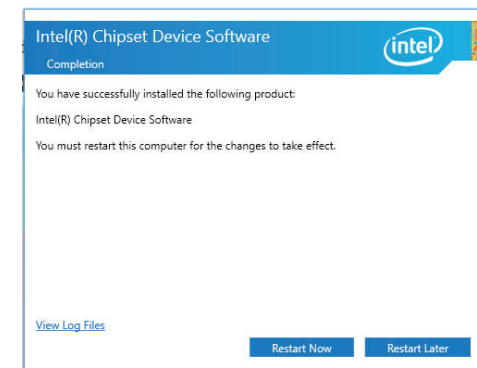

Intel Graphics Driver

To install the driver, download "KU553 Graphics Driver" zip file at our website.


1. Setup is now ready to install the graphics driver. Click "Next".

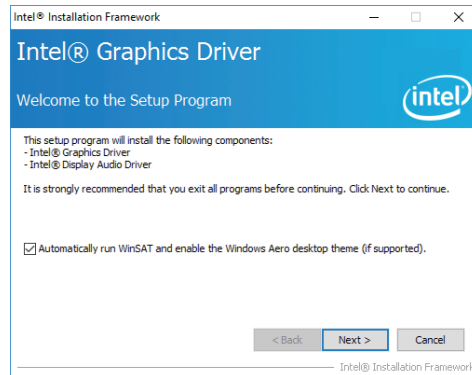


By default, the "Automatically run WinSAT and enable the Windows Aero desktop theme" is enabled. With this enabled, after installing the graphics driver and the system rebooted, the screen will turn blank for 1 to 2 minutes (while WinSAT is running) before the Windows 10 desktop appears. The "blank screen" period is the time Windows is testing the graphics performance.

We recommend that you skip this process by disabling this function then click "Next".


2. Read the license agreement then click "Yes".

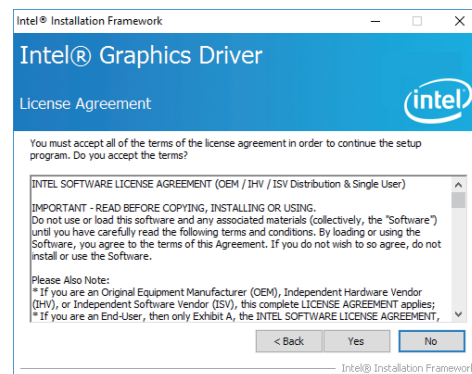

3. Go through the readme document for system requirements and installation tips then click "Next".

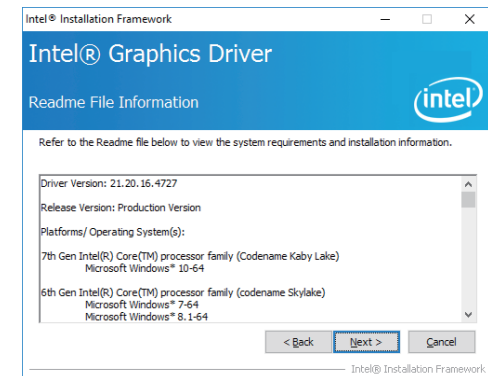


4. Setup is now installing the driver. Click "Next" to continue.

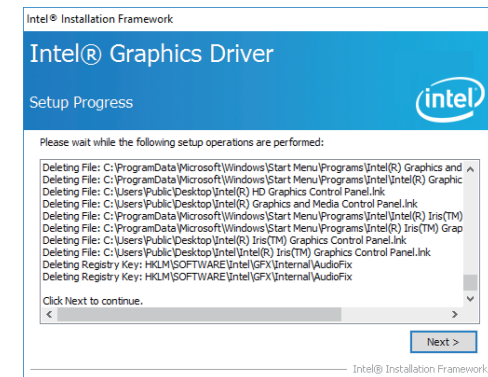

5. Click "Yes, I want to restart this computer now" then click "Finish".


Restarting the system will allow the new software installation to take effect.

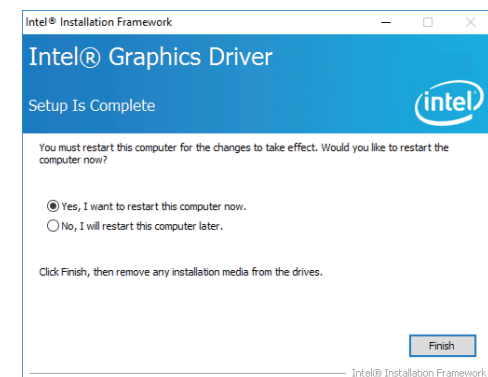

Audio Driver


To install the driver, download "KU553 Audio Driver" zip file at our website.

1. Setup is ready to install the driver. Click "Next".

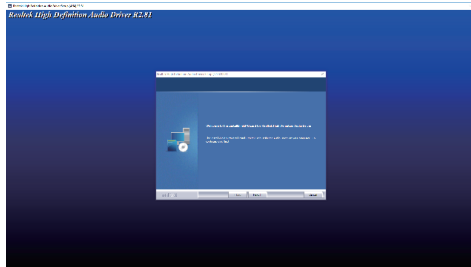

2. Click "Yes, I want to restart my computer now" then click "Finish".


Restarting the system will allow the new software installation to take effect.

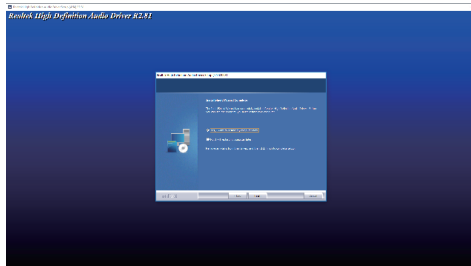


Intel LAN Driver

To install the driver, download "KU553 LAN Driver" zip file at our website.


1. Setup is ready to install the driver. Click "Next".

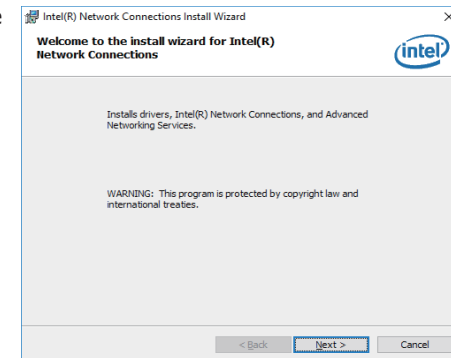


2. Click "I accept the terms in the license agreement" then click "Next".

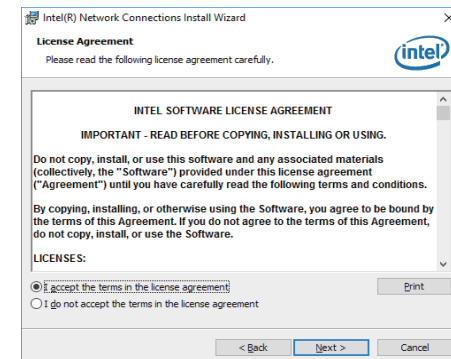


3. Select the program features you want installed then click "Next".

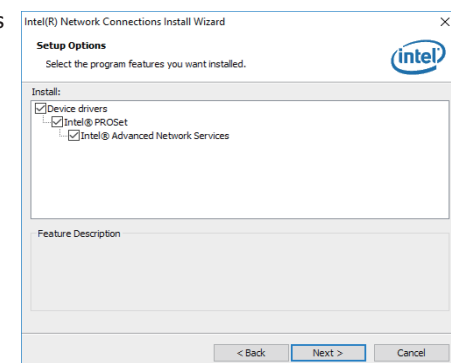


- Click "Install" to begin the installation.

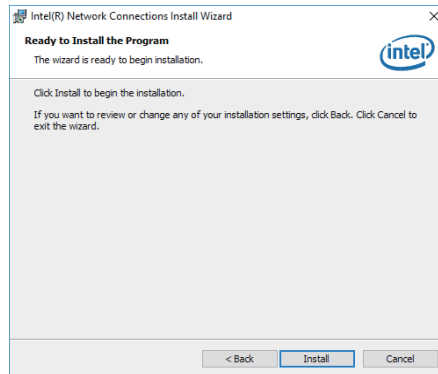

- The step displays the installing status in the progress.

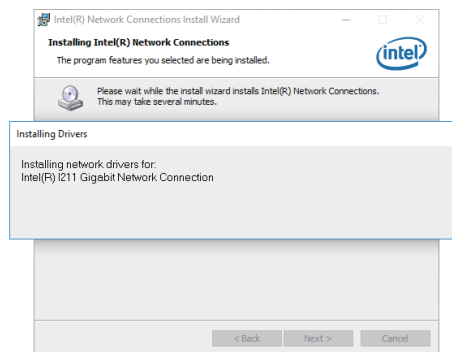


- After completing installation, click "Finish".

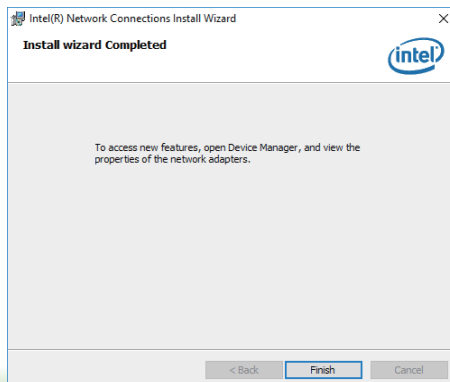


Intel Management Engine Driver

To install the driver, download "KU553 ME Driver" zip file at our website.


- Setup is ready to install the driver. Click "Next".

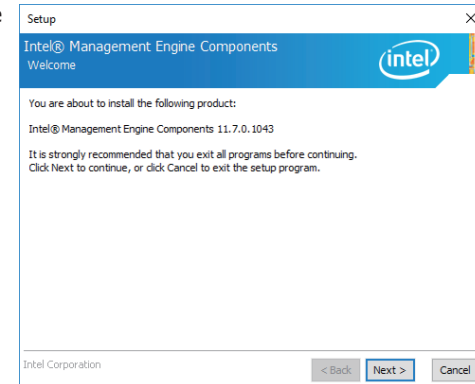


- Read the license agreement then tick "I accept the terms in the License Agreement". Click "Next".

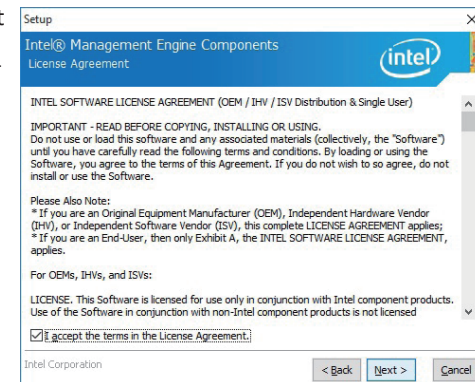


- Click "Next" to install to the default folder, or click "Change" to choose another destination folder.

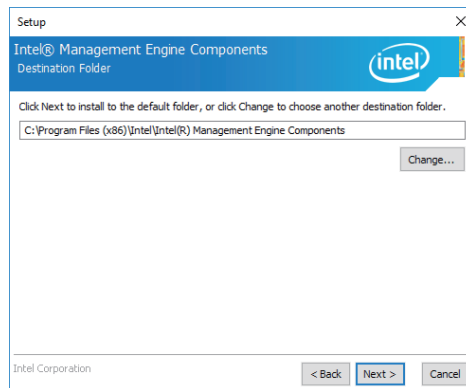

- Please wait while the product is being installed.

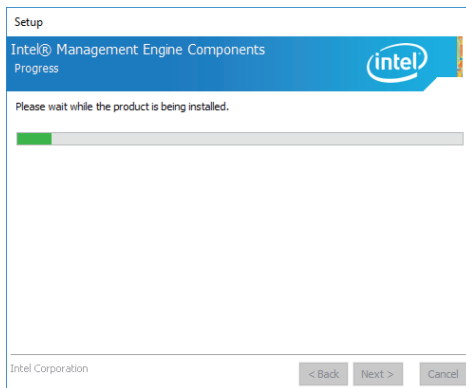


- After completing installation, click "Finish".

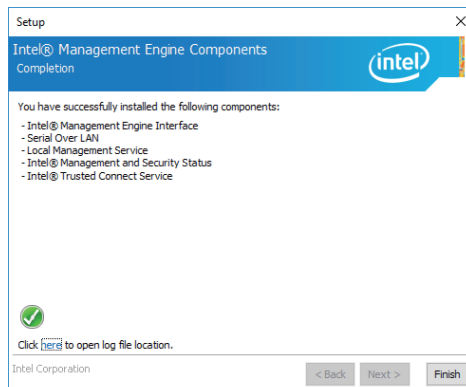


IO Driver

To install the driver, download "KU553 IO Driver" zip file at our website.


- Setup is ready to install the driver. Click "Next".

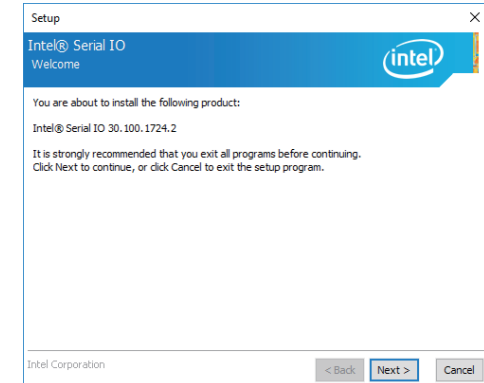


- Read the license agreement carefully. Tick "I accept the terms in the License Agreement" then click "Next".

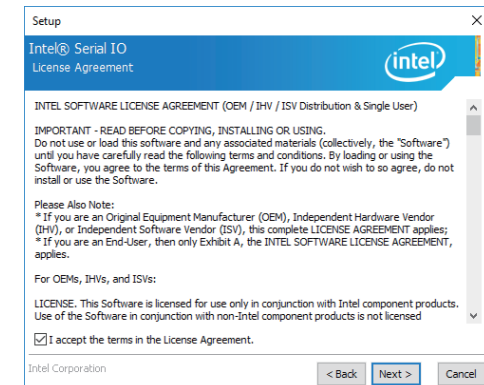


3. Go through the readme document for system requirements and installation tips then click "Next".

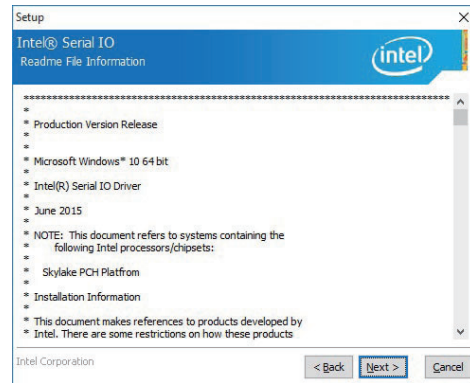

4. Setup is ready to install the driver. Click "Next".

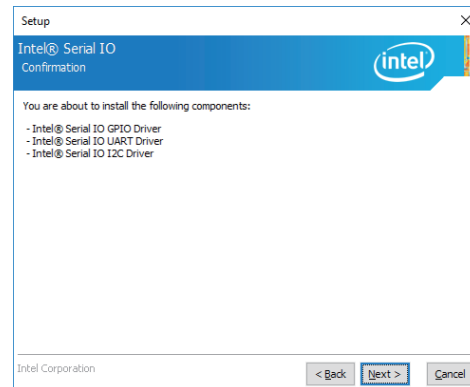


5. Setup is now installing the driver.

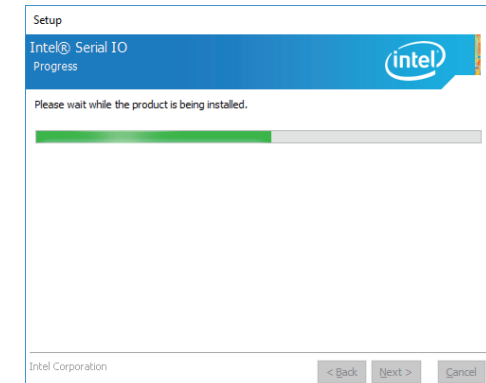

6. Click "Yes, I want to restart this computer now" then click "Finish".

Restarting the system will allow the new software installation to take effect.

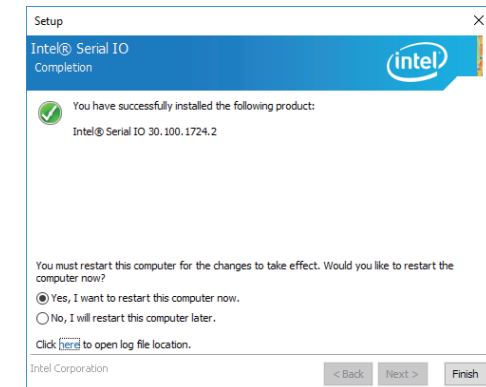


Intel® Rapid Storage Technology


The Intel Rapid Storage Technology is a utility that allows you to monitor the current status of the SATA drives. It enables enhanced performance and power management for the storage subsystem.

To install the driver, download "KU553 Intel Rapid Storage Driver" zip file at our website.


1. Setup is ready to install the utility. Click "Next".

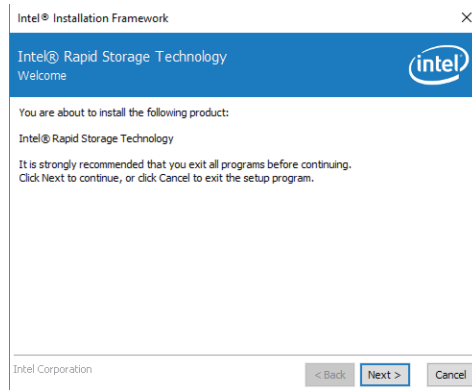


2. Read the license agreement and click "I accept the terms in the License Agreement". Then, click "Next".

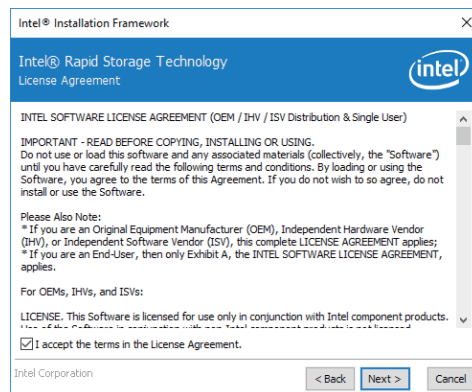


3. Go through the readme document to view system requirements and installation information then click "Next".

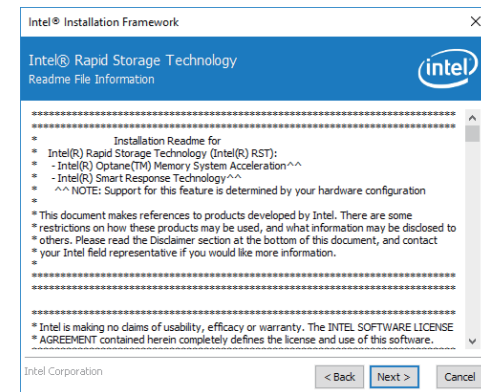


4. Click "Next" to install to the default folder or click "change to choose another destination folder".

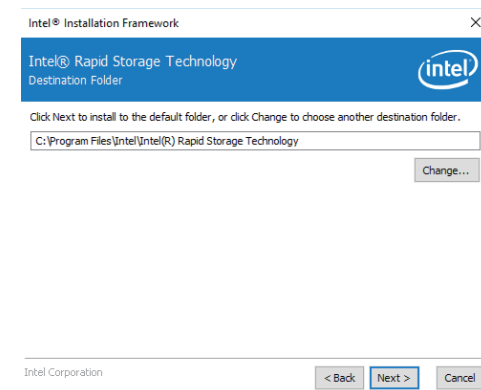

5. Confirm the installation and click "Next".

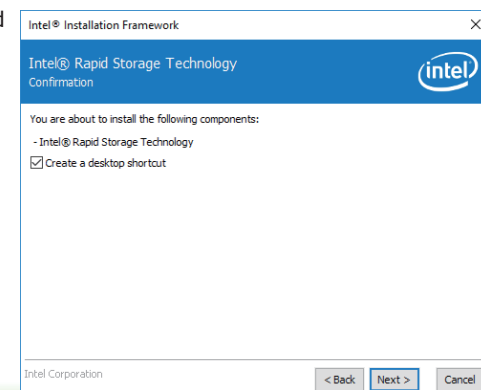

6. Click “Yes, I want to restart this computer now” to complete the installation and then click “Finish”.

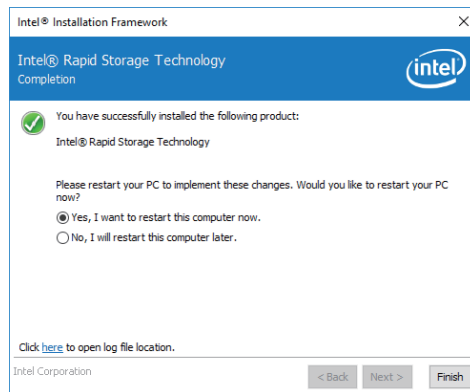

Chapter 5 - RAID

The system board allows configuring RAID on Serial ATA drives. It supports RAID 0 and RAID 1.

RAID Levels

RAID 0 (Striped Disk Array without Fault Tolerance)

RAID 0 uses two new identical hard disk drives to read and write data in parallel, interleaved stacks. Data is divided into stripes and each stripe is written alternately between two disk drives. This improves the I/O performance of the drives at different channel; however it is not fault tolerant. A failed disk will result in data loss in the disk array.

RAID 1 (Mirroring Disk Array with Fault Tolerance)

RAID 1 copies and maintains an identical image of the data from one drive to the other drive. If a drive fails to function, the disk array management software directs all applications to the other drive since it contains a complete copy of the drive's data. This enhances data protection and increases fault tolerance to the entire system. Use two new drives or an existing drive and a new drive but the size of the new drive must be the same or larger than the existing drive.

Settings

To enable the RAID function, the following settings are required.

1. Connect the Serial ATA drive.
2. Enable RAID in the Insyde BIOS.
3. Create a RAID volume.
- 3-1. Create a RAID volume if the boot type is UEFI.
4. Install the Intel Rapid Storage Technology Utility.

Step 1: Connect the Serial ATA Drive

Refer to chapter 2 for details on connecting the Serial ATA drive.



Important:

1. Make sure you have installed the Serial ATA drive and connected the data cable. Otherwise you will not be able to enter the RAID BIOS utility.
2. Treat the cable with extreme caution, especially while creating RAID. A damaged cable will ruin the entire installation process and operating system. The system will not boot and you will lose all data in the hard drives. Please give special attention to this warning because there is no way of recovering back the data.

Step 2: Enable RAID in the Insyde BIOS

1. Power-on the system then press to enter the main menu of the Insyde BIOS.
2. Go to "Advanced" menu, and select the "SATA Configuration" submenu.
3. Change the "SATA Mode Selection" to "Intel RST Premium With Intel Optane System Acceleration" mode.
4. Save the changes in the "Exit" menu.
5. Reboot the system.


Step 3: Create a RAID Volume

1. When the Intel® RST option ROM status screen displays during POST, press <Ctrl> and <I> simultaneously to enter the option ROM user interface.
2. Select 1: Create RAID Volume and press <Enter>.
3. Use the up or down arrow keys to select the RAID level and press <Enter>.
4. Use the up or down arrow keys to select the strip size and press <Enter>.
5. Select the capacity and press <Enter>. You must select less than one hundred percent of the available volume space to leave space for the second volume.
6. Press <Enter> to create the volume.
7. At the prompt, press <Y> to confirm volume creation.
8. Select 4: Exit and press <Enter>.
9. Press <Y> to confirm exit.

Step 3-1: Create a RAID Volume if the boot type is UEFI

If the boot type is set to UEFI, RAID volume creation will be different. Please use the following steps to create RAID volumes. To set the boot type, enter the Insyde BIOS and go to "Boot" > "Boot Type".

1. Go to the "Advanced" menu of the Insyde BIOS and select "UEFI Device Manager".

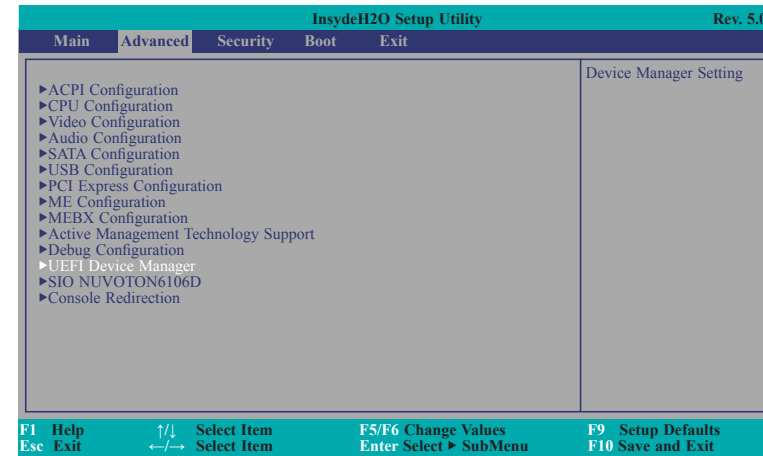

2. The screen displays all available drives. Select "Create RAID volume" to create a RAID volume".
3. Use the up or down arrow keys to select the RAID level and press <Enter>.
4. Use the up or down arrow keys to scroll through the list of hard drives and press <Enter> to select the drive.
5. Press <Enter>.
6. Use the up or down arrow keys to select the strip size and press <Enter>.
7. Enter the volume size and press <Enter>.
8. At the prompt, press <Y> to confirm volume creation.

Step 4: Install the Intel Rapid Storage Technology Utility

The Intel Rapid Storage Technology is a utility that allows you to monitor the current status of the SATA drives. It enables enhanced performance and power management for the storage subsystem.

To install the driver, download "KU553 Intel Rapid Storage Driver" zip file at our website. Please refer to **Chapter 4** for more information.

Chapter 6 - Intel AMT Settings

Overview

Intel Active Management Technology (Intel® AMT) combines hardware and software solution to provide maximum system defense and protection to networked systems.

The hardware and software information are stored in non-volatile memory. With its built-in manageability and latest security applications, Intel® AMT provides the following functions.

- **Discover**

Allows remote access and management of networked systems even while PCs are powered off; significantly reducing desk-side visits.

- **Repair**


Remotely repair systems after OS failures. Alerting and event logging help detect problems quickly to reduce downtime.

- **Protect**


Intel AMT's System Defense capability remotely updates all systems with the latest security software. It protects the network from threats at the source by proactively blocking incoming threats, reactively containing infected clients before they impact the network, and proactively alerting when critical software agents are removed.

Enable Intel® AMT in the Insyde BIOS


1. Power-on the system then press to enter the main menu of the Insyde BIOS.
2. In the **Advanced** menu, select **Active Management Technology Support**.

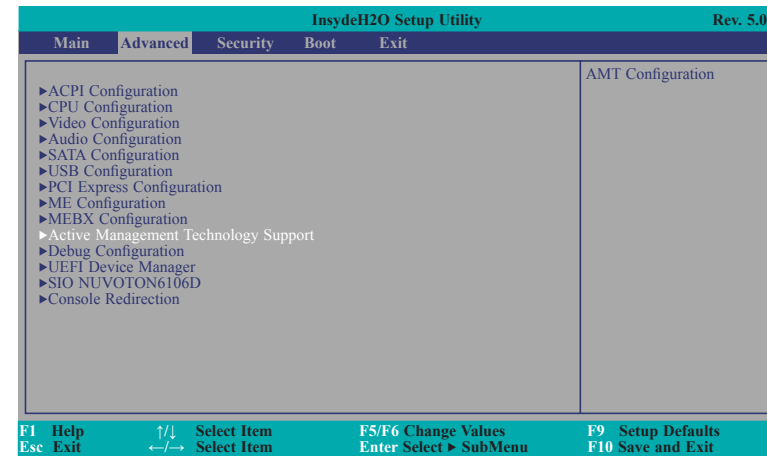

3. Select **Enabled** in the **Intel AMT Support** field.

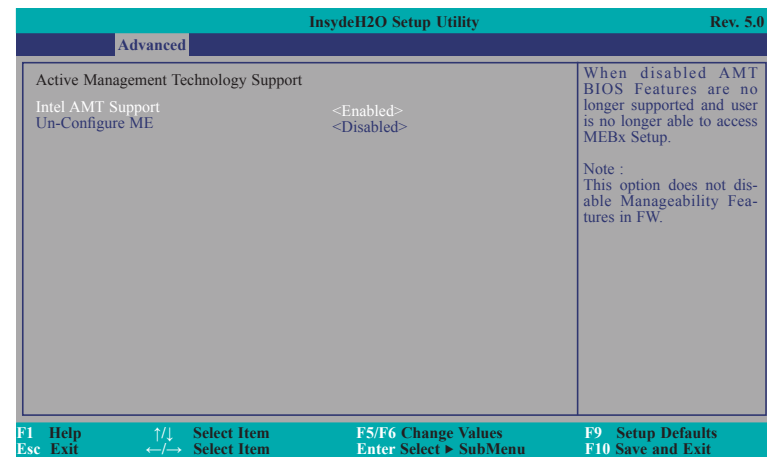


4. In the **Exit** menu, select **Exit Saving Changes** then select **Yes** and press Enter.

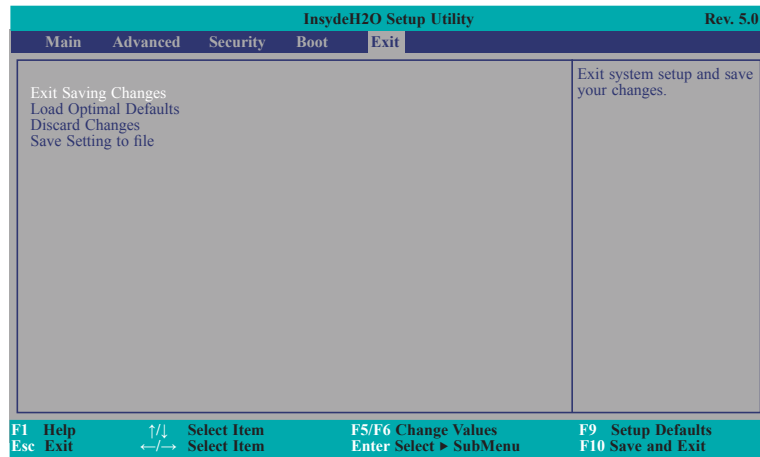


Configure Intel® AMT in the Intel® Management Engine BIOS Extension (MEBX) Section

- After the system reboots, press to enter the main menu of the Insyde BIOS.
- In the **Advanced** menu, select **MEBX Configuration**.

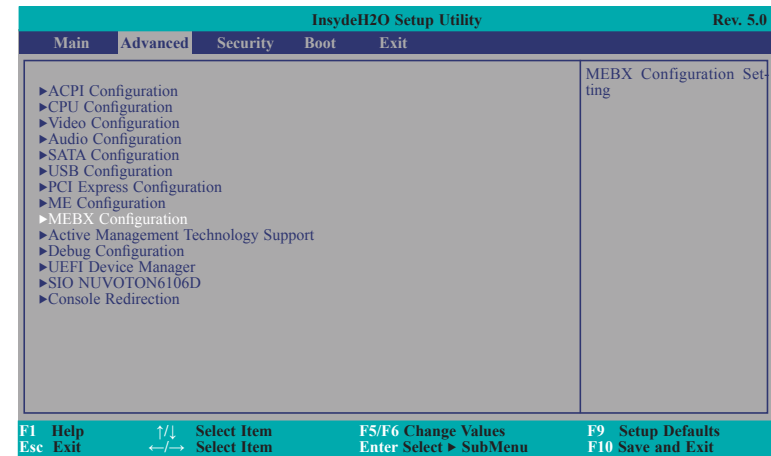

- Select **MEBX Configuration** and press Enter.

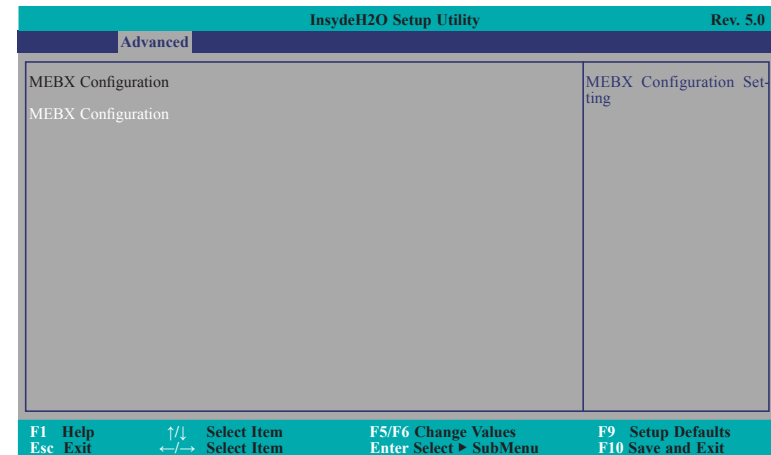

4. Select **MEBx Login** and press Enter. You will be prompted for a password. The default password is "admin". Enter the default password in the space provided under Intel(R) ME Password then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

MAIN MENU

MEBx Login

- > Intel(R) ME General Settings
- > Intel(R) AMT Configuration

MEBx Exit

Intel(R) ME Password

Intel(R) ME Password

[↑↓] =Move Highlight [Enter] =Select Entry [Esc] =Exit

5. Enter a new password in the space provided under Intel(R) ME New Password then press Enter. The password must include:

- 8-32 characters
- Strong 7-bit ASCII characters excluding : , and " characters
- At least one digit character (0, 1, ...9)
- At least one 7-bit ASCII non alpha-numeric character, above 0x20, (e.g. !, \$, ;)
- Both lower case and upper case characters

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

MAIN MENU

MEBx Login

- > Intel(R) ME General Settings
- > Intel(R) AMT Configuration

MEBx Exit

Intel(R) ME New Password

Intel(R) ME Password

[↑↓] =Move Highlight [Enter] =Select Entry [Esc] =Exit

6. You will be asked to verify the new password. Enter the same new password in the space provided under Verify Password then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

MAIN MENU

MEBx Login

- > Intel(R) ME General Settings
- > Intel(R) AMT Configuration

MEBx Exit

Verify password

Intel(R) ME Password

[↑↓] =Move Highlight [Enter] =Select Entry [Esc] =Exit

7. Select **Intel(R) ME General Settings** then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

MAIN MENU

- > **Intel(R) ME General Settings**
- > Intel(R) AMT Configuration

MEBx Exit

[↑↓] =Move Highlight [Enter] =Select Entry [Esc] =Exit

8. If you want to change ME password, select **Change ME Password** then press Enter. Enter the current password in the space provided under Intel(R) ME Password then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL(R) ME PLATFORM CONFIGURATION

Change ME Password
Local FW Update <Enabled>

Intel(R) ME Password

Intel(R) ME New Password

[↑↓] =Move Highlight [Enter] =Select Entry [Esc] =Exit

9. Enter a new password in the space provided under Intel(R) ME New Password then press Enter. The password must include:

- 8-32 characters
- Strong 7-bit ASCII characters excluding : , and " characters
- At least one digit character (0, 1, ...9)
- At least one 7-bit ASCII non alpha-numeric character, above 0x20, (e.g. !, \$, ;)
- Both lower case and upper case characters

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL(R) ME PLATFORM CONFIGURATION

Change ME Password
Local FW Update <Enabled>

Intel(R) ME New Password

Intel(R) ME New Password

[↑↓] =Move Highlight [Enter] =Select Entry [Esc] =Exit

10. You will be asked to verify the new password. Enter the same new password in the space provided under Verify Password then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL(R) ME PLATFORM CONFIGURATION

Change ME Password
Local FW Update <Enabled>

Verify password

Intel(R) ME New Password

[↑↓] =Move Highlight [Enter] =Select Entry [Esc] =Exit

11. Select **Local FW Update** then press Enter. Select **Enabled** or **Disabled** or **Password Protected** then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved


INTEL(R) ME PLATFORM CONFIGURATION

Change ME Password
Local FW Update <Enabled>


Disabled
Enabled
Password Protected

[↑↓] =Move Highlight <Enter> =Complete Entry [Esc] =Discard Changes


12. Press Esc until you return to the **Main Menu**. Select **Intel(R) AMT Configuration** then press Enter.

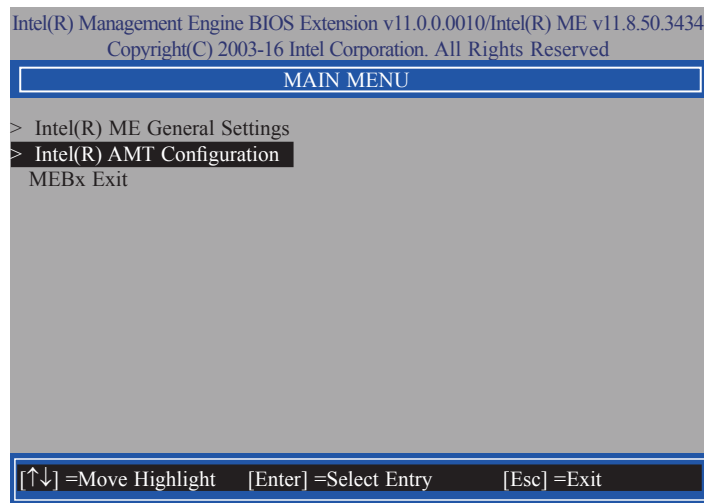


14. In the **Intel(R) AMT Configuration** menu, select **SOL/Storage Redirection/KVM** then press Enter.

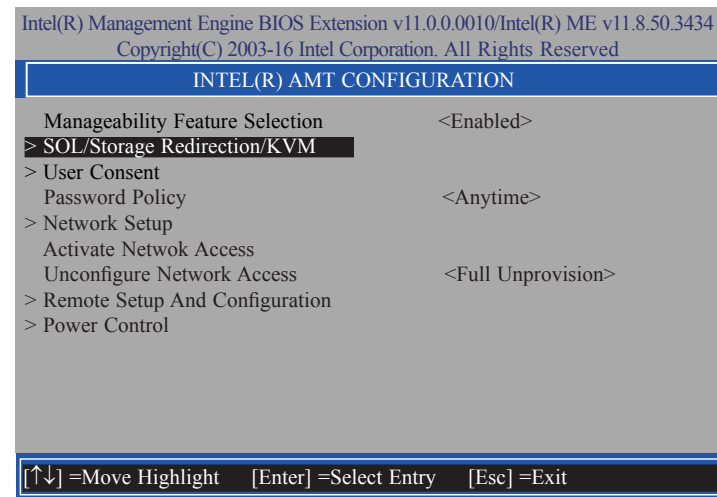


13. In the **Intel(R) AMT Configuration** menu, select **Manageability Feature Selection** then press Enter. Select **Enabled** or **Disabled** then press Enter.

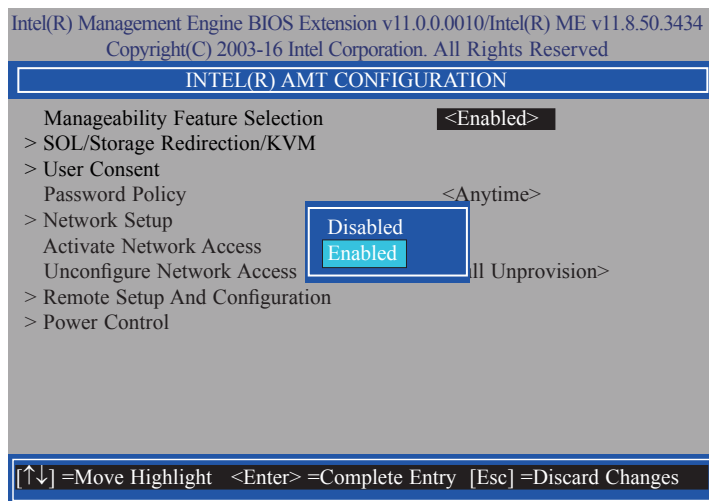


15. In the **SOL/Storage Redirection/KVM** menu, select **Username and Password** then press Enter. Select **Enabled** or **Disabled** then press Enter.

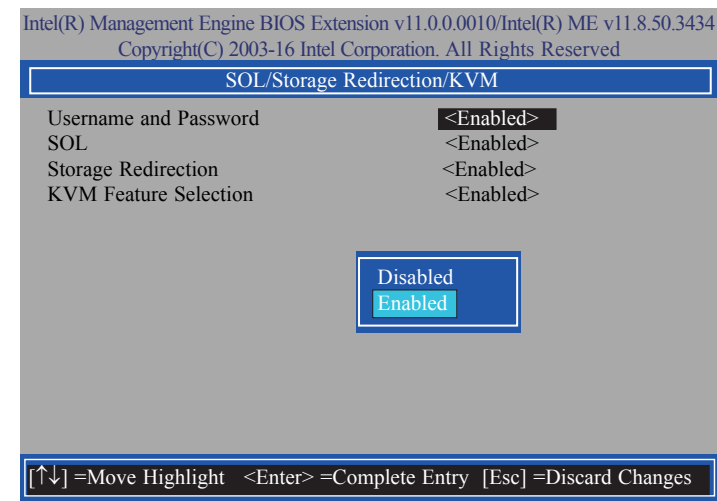


16. In the **SOL/Storage Redirection/KVM** menu, select **SOL** then press Enter. Select **Enabled** or **Disabled** then press Enter.

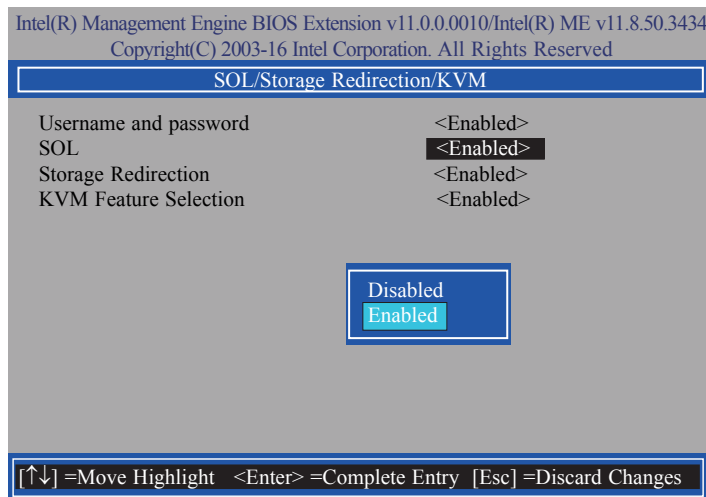


18. In the **SOL/Storage Redirection/KVM** menu, select **KVM Feature Selection** then press Enter. Select **Enabled** or **Disabled** then press Enter.

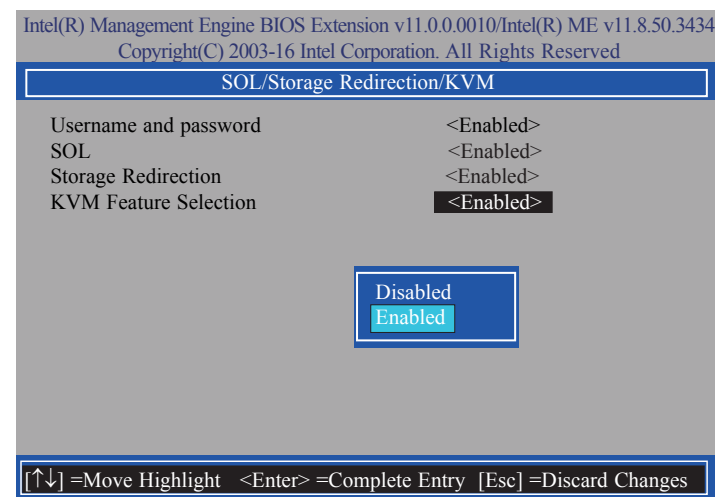


17. In the **SOL/Storage Redirection/KVM** menu, select **Storage Redirection** then press Enter. Select **Enabled** or **Disabled** then press Enter.

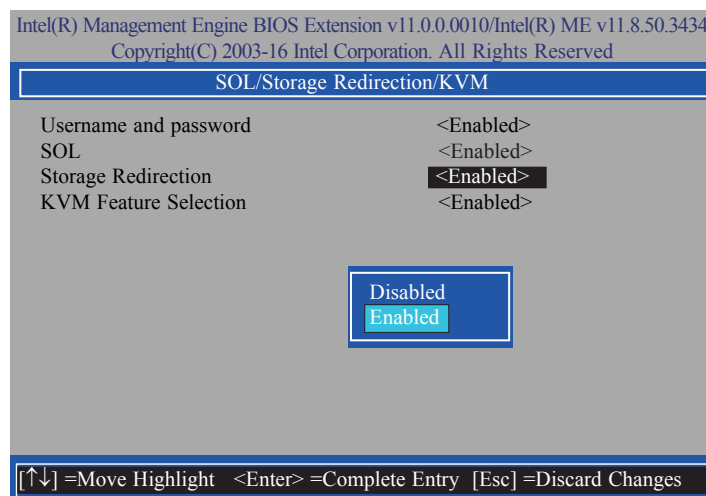


19. Press Esc until you return to the **Intel(R) AMT Configuration** menu. Select **User Consent** then press Enter.

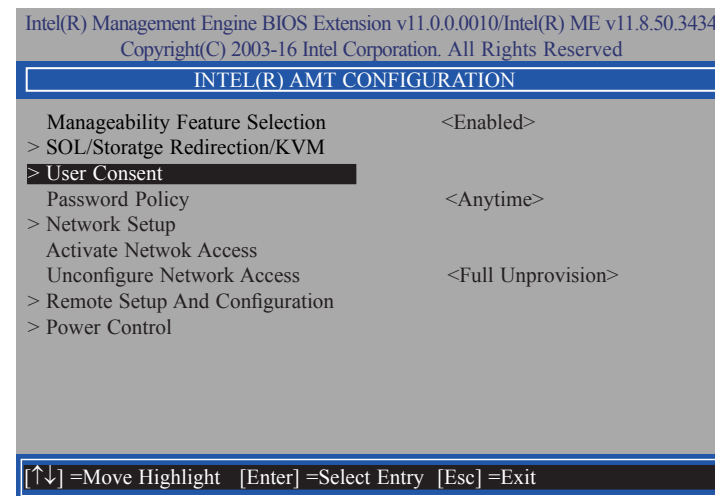

20. In the **User Consent** menu, select **User Opt-in** then press Enter. Select **NONE** or **KVM** or **ALL** then press Enter.

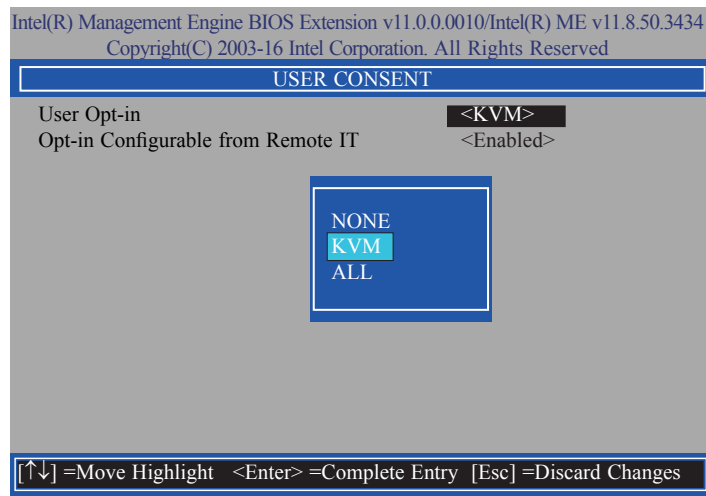


21. In the **User Consent** menu, select **Opt-in Configurable from Remote IT** then press Enter. Select **Enabled** or **Disabled** then press Enter.

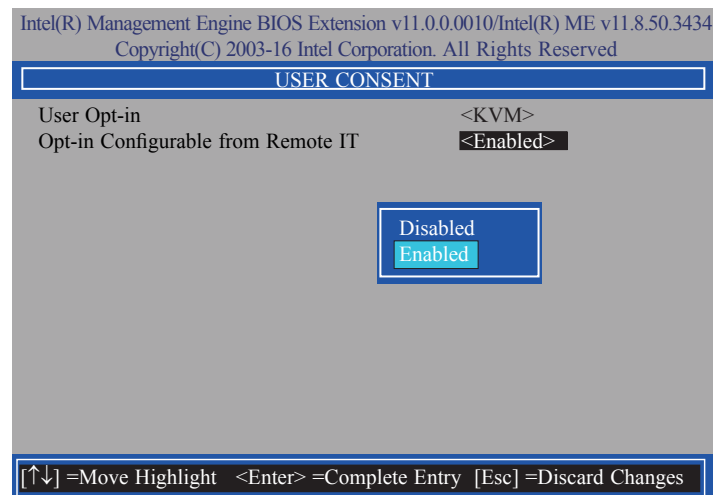


22. Press Esc until you return to the **Intel(R) AMT Configuration** menu. Select **Password Policy** then press Enter.


You may choose to use a password only during setup and configuration or to use a password anytime the system is being accessed.

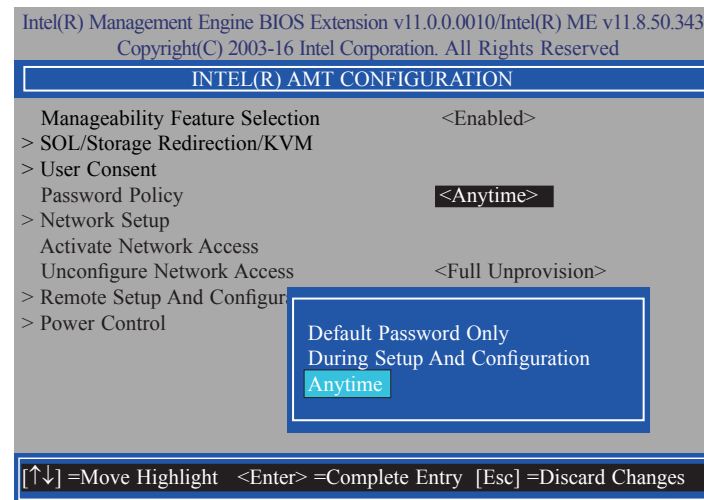


23. In the **Intel(R) AMT Configuration** menu, select **Network Setup** then press Enter.

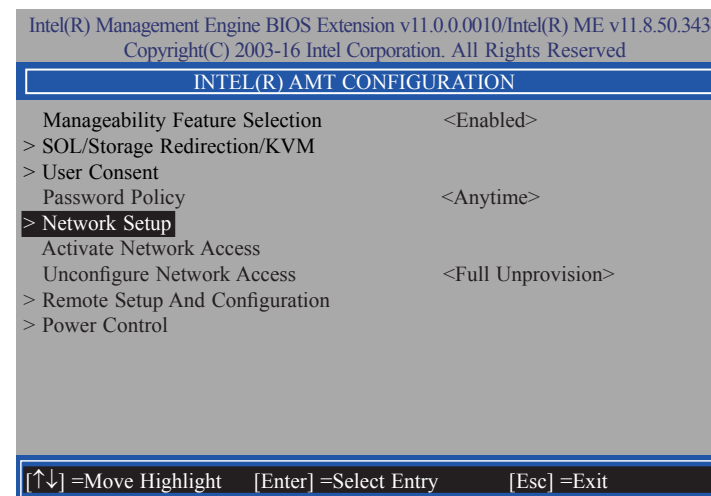


24. In the **Intel(R) ME Network Setup** menu, select **Intel(R) ME Network Name Settings** then press Enter.

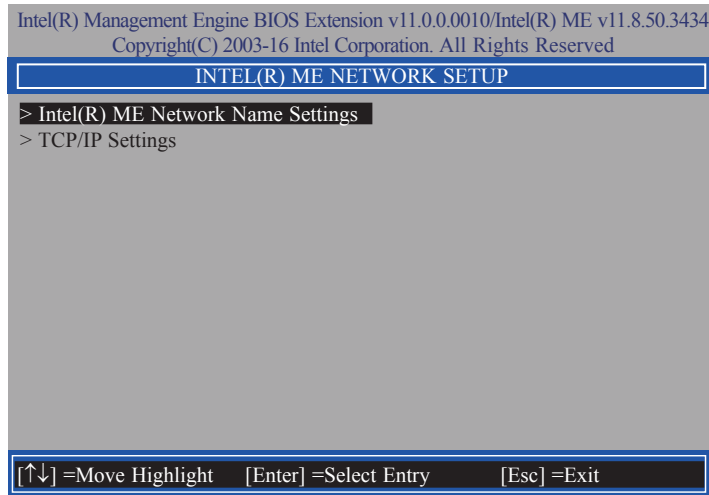


25. In the **Intel(R) ME Network Name Settings** menu, select **Host Name** then press Enter. Enter the computer's host name then press Enter.

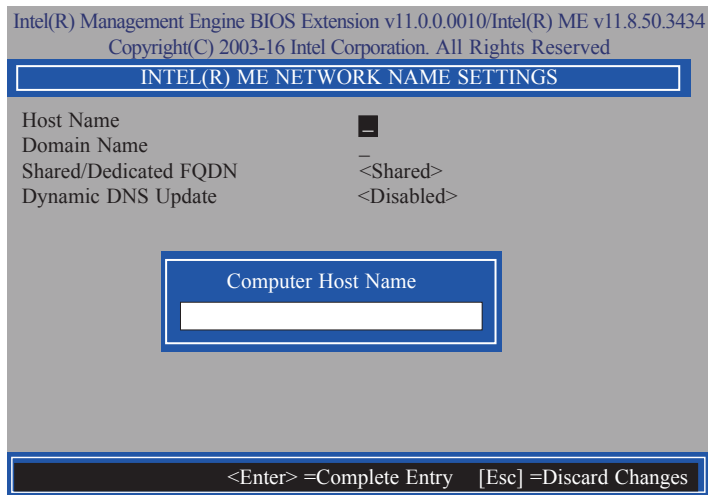

26. Select **Domain Name** then press Enter. Enter the computer's domain name then press Enter.

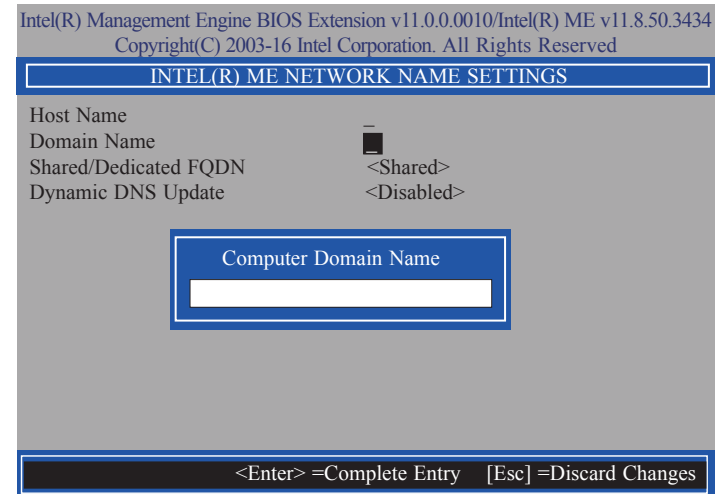

27. Select **Shared/Dedicated FQDN** then press Enter. Select **Shared** or **Dedicated** then press Enter.

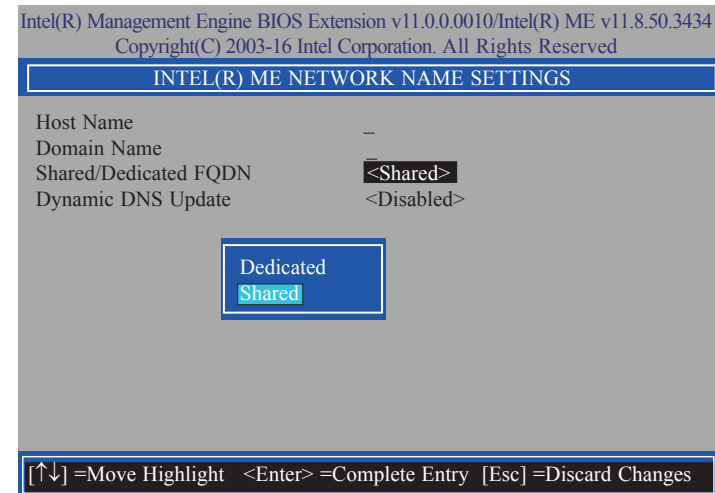

28. Select **Dynamic DNS Update** then press Enter. Select **Enabled** or **Disabled** then press Enter. If **Dynamic DNS Update** is set to **Enabled**, **Periodic Update Interval** and **TTL** fields will show up.

The screenshot shows the 'INTEL(R) ME NETWORK NAME SETTINGS' screen. It has a blue header bar with the title in white. Below the header, the settings are listed on the left and their values on the right:

- Host Name: -
- Domain Name: -
- Shared/Dedicated FQDN: <Shared>
- Dynamic DNS Update: <Disabled>

Below the settings is a blue box with a white border containing two options: 'Disabled' (highlighted in cyan) and 'Enabled'.

At the bottom, a blue bar contains the navigation instructions in white text: '[↑↓] =Move Highlight <Enter> =Complete Entry [Esc] =Discard Changes'.

30. Select **TTL** then press Enter. Enter value then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.5.343
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL(R) ME NETWORK NAME SETTINGS

Host Name	-
Domain Name	-
Shared/Dedicated FQDN	<Shared>
Dynamic DNS Update	<Enabled>
Periodic Update Interval	1440
TTL	900

Value in Seconds

900

<Enter> =Complete Entry [Esc] =Discard Changes

29. Select **Periodic Update Interval** then press Enter. Enter value then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL(R) ME NETWORK NAME SETTINGS

Host Name	-
Domain Name	-
Shared/Dedicated FQDN	<Shared>
Dynamic DNS Update	<Enabled>
Periodic Update Interval	1440
TTL	900

Value=0 or >=20

<Enter> =Complete Entry [Esc] =Discard Changes

31. Press Esc until you return to the **Intel(R) ME Network Setup** menu. Select **TCP/IP Settings** then press Enter. In the **TCP/IP Settings** menu, select **Wired LAN IPv4 Configuration** then press Enter.

```
Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.343
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

TCP/IP SETTINGS

> Wired LAN IPV4 Configuration

[↑↓] =Move Highlight    [Enter] =Select Entry    [Esc] =Exit
```

32. In the **Wired LAN IPv4 Configuration** menu, select **DHCP Mode** then press Enter. Select **Enabled** or **Disabled** then press Enter. If set to **Disabled**, **IPv4 Address**, **Subnet Mask Address**, **Default Gateway Address**, **Preferred DNS Address** and **Alternate DNS Address** will show up.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

WIRED LAN IPV4 CONFIGURATION

DHCP Mode <Enabled>

Disabled
Enabled

[↑↓] =Move Highlight <Enter> =Complete Entry [Esc] =Discard Changes

33. Select **IPv4 Address** then press Enter. Enter address then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

WIRED LAN IPV4 CONFIGURATION

DHCP Mode <Disabled>

IPv4 Address 0.0.0.0

Subnet Mask Address 0.0.0.0

Default Gateway Address 0.0.0.0

Preferred DNS Address 0.0.0.0

Alternate DNS Address 0.0.0.0

IP address (e.g. 123.123.123.100)
0.0.0.0

<Enter> =Complete Entry [Esc] =Discard Changes

34. Select **Subnet Mask Address** then press Enter. Enter address then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

WIRED LAN IPV4 CONFIGURATION

DHCP Mode <Disabled>

IPv4 Address 0.0.0.0

Subnet Mask Address 0.0.0.0

Default Gateway Address 0.0.0.0

Preferred DNS Address 0.0.0.0

Alternate DNS Address 0.0.0.0

Subnet mask (e.g. 255.255.255.0)
0.0.0.0

<Enter> =Complete Entry [Esc] =Discard Changes

35. Select **Default Gateway Address** then press Enter. Enter address then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

WIRED LAN IPV4 CONFIGURATION

DHCP Mode <Disabled>

IPv4 Address 0.0.0.0

Subnet Mask Address 0.0.0.0

Default Gateway Address 0.0.0.0

Preferred DNS Address 0.0.0.0

Alternate DNS Address 0.0.0.0

Default Gateway address
0.0.0.0

<Enter> =Complete Entry [Esc] =Discard Changes

36. Select **Preferred DNS Address** then press Enter. Enter address then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

WIRED LAN IPV4 CONFIGURATION

DHCP Mode	<Disabled>
IPV4 Address	0.0.0.0
Subnet Mask Address	0.0.0.0
Default Gateway Address	0.0.0.0
Preferred DNS Address	0.0.0.0
Alternate DNS Address	0.0.0.0

Preferred DNS address
0.0.0.0

<Enter> =Complete Entry [Esc] =Discard Changes

37. Select **Alternate DNS Address** then press Enter. Enter address then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

WIRED LAN IPV4 CONFIGURATION

DHCP Mode	<Disabled>
IPV4 Address	0.0.0.0
Subnet Mask Address	0.0.0.0
Default Gateway Address	0.0.0.0
Preferred DNS Address	0.0.0.0
Alternate DNS Address	0.0.0.0

Alternate DNS address
0.0.0.0

<Enter> =Complete Entry [Esc] =Discard Changes

38. Press Esc until you return to the **Intel(R) AMT Configuration** menu. If you want to activate the current network settings and open the ME network interface, select **Activate Network Access**, press Enter, then press Y.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL(R) AMT CONFIGURATION

Manageability Feature Selection	<Enabled>
> SOL/Storage Redirection/KVM	
> User Consent	
Password Policy	<Anytime>
> Network Setup	
Activate Network Access	
Unconfigure Network Access	<Full Unprovision>
> Remote Setup And Configuration	
> Power Control	

Activates the current network settings and opens the ME network interface
Continue: (Y/N)

[↑↓] =Move Highlight [Enter] =Select Entry [Esc] =Exit

39. In the **Intel(R) AMT Configuration** menu, select **Unconfigure Network Access** then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved


INTEL(R) AMT CONFIGURATION

Manageability Feature Selection	<Enabled>
> SOL/Storage Redirection/KVM	
> User Consent	
Password Policy	<Anytime>
> Network Setup	
Activate Network Access	
Unconfigure Network Access	<Full Unprovision>
> Remote Setup And Configuration	
> Power Control	


Full Unprovision

[↑↓] =Move Highlight <Enter> =Complete Entry [Esc] =Discard Changes


40. In the **Intel(R) AMT Configuration** menu, select **Remote Setup And Configuration** then press Enter.

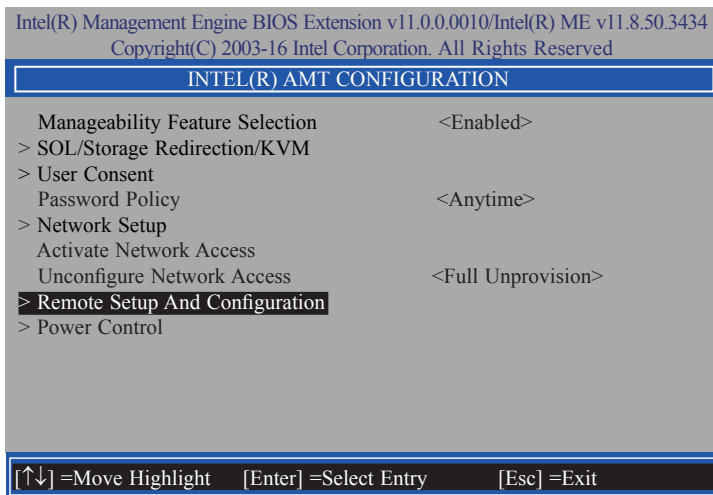


41. In the **Intel(R) Remote Setup And Configuration** menu, select **Current Provisioning Mode** then press Enter.

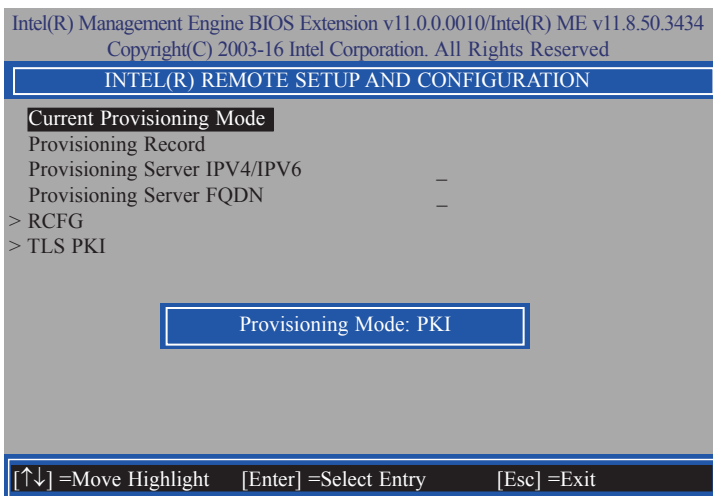

42. In the **Intel(R) Remote Setup And Configuration** menu, select **Provisioning Record** then press Enter.

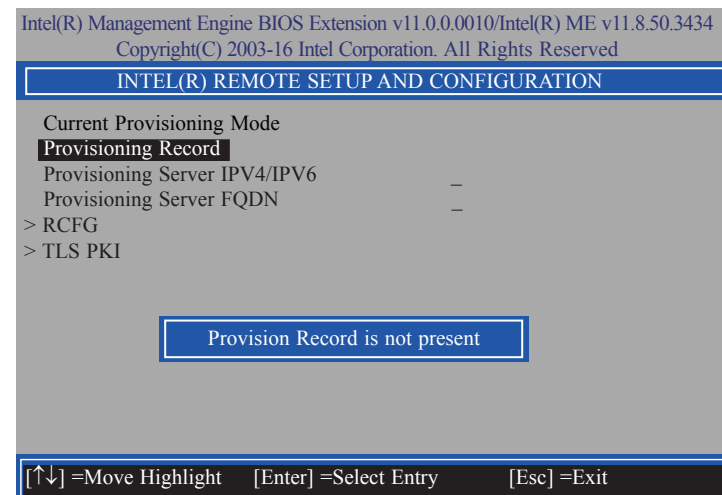

43. In the **Intel(R) Remote Setup And Configuration** menu, select **Provisioning Server IPV4/IPV6** then press Enter. Enter the address then press Enter.

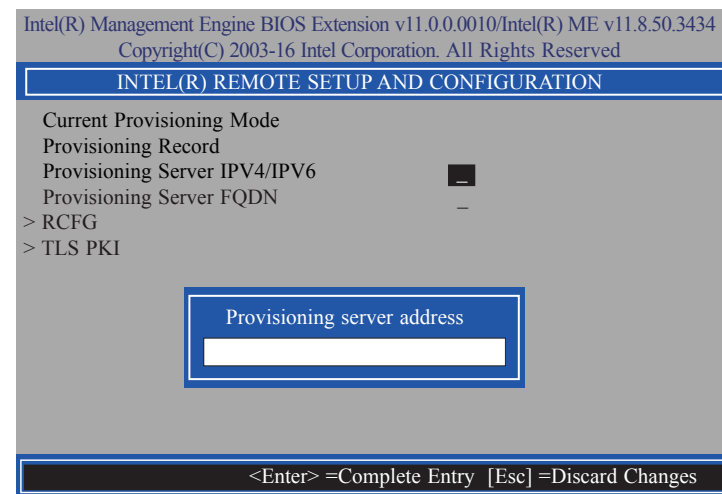

44. In the **Intel(R) Remote Setup And Configuration** menu, select **Provisioning Server FQDN** then press Enter. Enter the FQDN then press Enter.

45. If you want to activate remote configuration, in the **Intel(R) Remote Setup And Configuration** menu, select **RCFG** then press Enter. Select **Start Configuration** then press Enter. Press **Y** to activate.

46. Press Esc until you return to the **Intel(R) Remote Setup And Configuration** menu. Select **TLS PKI** then press Enter. Select **Remote Configuration **** then press Enter. Select **Enabled** or **Disabled** then press Enter.

47. Select **PKI DNS Suffix** and press Enter. Enter the PKI DNS Suffix then press Enter.

48. In the **Intel(R) Remote Configuration** menu, select **Manage Hashes** then press Enter. Select the hash name then press Insert to enter custom hash certificate name, press Delete to delete hash, press Enter to view hash information, press + to activate or deactivate hash, and press Esc to exit.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL(R) REMOTE CONFIGURATION

Hash Name	Active	Default	Algorithm
VeriSign Class 3	Active: [*]	Default: [*]	SHA256
VeriSign Class 3	Active: [*]	Default: [*]	SHA256
Go Daddy Class 2	Active: [*]	Default: [*]	SHA256
Comodo AAA CA	Active: [*]	Default: [*]	SHA256
Starfield Class 2	Active: [*]	Default: [*]	SHA256
VeriSign Class 3	Active: [*]	Default: [*]	SHA256
VeriSign Class 3	Active: [*]	Default: [*]	SHA256
VeriSign Class 3	Active: [*]	Default: [*]	SHA256
GTE CyberTrust Gl	Active: [*]	Default: [*]	SHA256
Baltimore CyberTr	Active: [*]	Default: [*]	SHA256
Cyber Trust Global	Active: [*]	Default: [*]	SHA256
Verizon Global Ro	Active: [*]	Default: [*]	SHA256
Entrust. net CA (2	Active: [*]	Default: [*]	SHA256
Entrust Root CA	Active: [*]	Default: [*]	SHA256
VeriSign Universa	Active: [*]	Default: [*]	SHA256
Go Daddy Root CA	Active: [*]	Default: [*]	SHA256
Entrust Root CA -	Active: [*]	Default: [*]	SHA256
Startfield Root CA	Active: [*]	Default: [*]	SHA256

[Ins] =Add New Hash [Delete] =Delete Hash [+] =Activate Hash
[↑↓] =Move Highlight [Enter] =View Hash [Esc] =Exit

49. Press Esc until you return to the **Intel(R) AMT Configuration** menu, select **Power Control** then press Enter. In the **Intel(R) AMT Power Control** menu, select **Intel(R) AMT ON in Host Sleep States** then press Enter. Select an option then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL(R) AMT POWER CONTROL

These configurations are effective only after AMT provisioning has started

Intel(R) AMT ON in Host Sleep States <Mobile: ON in S0, ME Wake in S3, S4-5 (AC only)>

Idle Timeout 65535

Mobile: ON in S0
Mobile: ON in S0, ME Wake in S3, S4-5 (AC only)

[↑↓] =Move Highlight <Enter> =Complete Entry [Esc] =Discard Changes

50. In the **Intel(R) AMT Power Control** menu, select **Idle Timeout** then press Enter. Enter the timeout value and press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

INTEL(R) AMT POWER CONTROL

These configurations are effective only after AMT provisioning has started

Intel(R) AMT ON in Host Sleep States <Mobile: ON in S0, ME Wake in S3, S4-5>

Idle Timeout 65535

Timeout Value (1-65535)
65535

<Enter> =Complete Entry [Esc] =Discard Changes

51. Press Esc until you return to the **Main Menu**. Select **MEBx Exit** then press Enter. Press Y to exit.

Intel(R) Management Engine BIOS Extension v11.0.0.0010/Intel(R) ME v11.8.50.3434
Copyright(C) 2003-16 Intel Corporation. All Rights Reserved

MAIN MENU

> Intel(R) ME General Settings
> Intel(R) AMT Configuration
MEBx Exit

Are you sure you want to exit?(Y/N):

Exit

[↑↓] =Move Highlight [Enter] =Select Entry [Esc] =Exit

Appendix A - Troubleshooting Checklist

Troubleshooting Checklist

This chapter of the manual is designed to help you with problems that you may encounter with your personal computer. To efficiently troubleshoot your system, treat each problem individually. This is to ensure an accurate diagnosis of the problem in case a problem has multiple causes.

Some of the most common things to check when you encounter problems while using your system are listed below.

1. The power switch of each peripheral device is turned on.
2. All cables and power cords are tightly connected.
3. The electrical outlet to which your peripheral devices connected is working. Test the outlet by plugging in a lamp or other electrical device.
4. The monitor is turned on.
5. The display's brightness and contrast controls are adjusted properly.
6. All add-in boards in the expansion slots are seated securely.
7. Any add-in board you have installed is designed for your system and is set up correctly.

Monitor/Display

If the display screen remains dark after the system is turned on:

1. Make sure that the monitor's power switch is on.
2. Check that one end of the monitor's power cord is properly attached to the monitor and the other end is plugged into a working AC outlet. If necessary, try another outlet.
3. Check that the video input cable is properly attached to the monitor and the system's display adapter.
4. Adjust the brightness of the display by turning the monitor's brightness control knob.

The picture seems to be constantly moving.

1. The monitor has lost its vertical sync. Adjust the monitor's vertical sync.
2. Move away any objects, such as another monitor or fan, that may be creating a magnetic field around the display.
3. Make sure your video card's output frequencies are supported by this monitor.

The screen seems to be constantly wavering.

1. If the monitor is close to another monitor, the adjacent monitor may need to be turned off. Fluorescent lights adjacent to the monitor may also cause screen wavering.

Power Supply

When the computer is turned on, nothing happens.

1. Check that one end of the AC power cord is plugged into a live outlet and the other end properly plugged into the back of the system.
2. Make sure that the voltage selection switch on the back panel is set for the correct type of voltage you are using.
3. The power cord may have a "short" or "open". Inspect the cord and install a new one if necessary.

Hard Drive

Hard disk failure.

1. Make sure the correct drive type for the hard disk drive has been entered in the BIOS.
2. If the system is configured with two hard drives, make sure the bootable (first) hard drive is configured as Master and the second hard drive is configured as Slave. The master hard drive must have an active/bootable partition.

Excessively long formatting period.

If your hard drive takes an excessively long period of time to format, it is likely a cable connection problem. However, if your hard drive has a large capacity, it will take a longer time to format.

Serial Port

The serial device (modem, printer) doesn't output anything or is outputting garbled characters.

1. Make sure that the serial device's power is turned on and that the device is on-line.
2. Verify that the device is plugged into the correct serial port on the rear of the computer.
3. Verify that the attached serial device works by attaching it to a serial port that is working and configured correctly. If the serial device does not work, either the cable or the serial device has a problem. If the serial device works, the problem may be due to the onboard I/O or the address setting.
4. Make sure the COM settings and I/O address are configured correctly.

Keyboard

Nothing happens when a key on the keyboard was pressed.

1. Make sure the keyboard is properly connected.
2. Make sure there are no objects resting on the keyboard and that no keys are pressed during the booting process.

System Board

1. Make sure the add-in card is seated securely in the expansion slot. If the add-in card is loose, power off the system, re-install the card and power up the system.
2. Check the jumper settings to ensure that the jumpers are properly set.
3. Verify that all memory modules are seated securely into the memory sockets.
4. Make sure the memory modules are in the correct locations.
5. If the board fails to function, place the board on a flat surface and seat all socketed components. Gently press each component into the socket.
6. If you made changes to the BIOS settings, re-enter setup and load the BIOS defaults.