



SU171/SU173

Mini-ITX Industrial Motherboard User's Manual

Copyright

This publication contains information that is protected by copyright. No part of it may be reproduced in any form or by any means or used to make any transformation/adaptation without the prior written permission from the copyright holders.

This publication is provided for informational purposes only. The manufacturer makes no representations or warranties with respect to the contents or use of this manual and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. The user will assume the entire risk of the use or the results of the use of this document. Further, the manufacturer reserves the right to revise this publication and make changes to its contents at any time, without obligation to notify any person or entity of such revisions or changes.

Changes after the publication's first release will be based on the product's revision. The website will always provide the most updated information.

© 2018. All Rights Reserved.

Trademarks

Product names or trademarks appearing in this manual are for identification purpose only and are the properties of the respective owners.

FCC and DOC Statement on Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables must be used in order to comply with the emission limits.

Table of Contents

Copyright.....	2
Trademarks.....	2
FCC and DOC Statement on Class B	2
About this Manual.....	4
Warranty	4
Static Electricity Precautions	4
Safety Measures.....	4
About the Package.....	5
Chapter 1 - Introduction.....	6
Specifications.....	6
Features.....	7
Chapter 2 - Hardware Installation	9
Board Layout.....	9
System Memory.....	9
Installing the DIMM Module.....	10
Jumper Settings.....	11
Clear CMOS Data	11
Auto Power-on Select	12
LVDS Panel Power Select.....	12
LCD/Inverter Power Select	13
LVDS Backlight Power Select	13
eDP Panel Power Select (Optional)	14
eDP Inverter Power Select (Optional)	14
eDP Backlight Power Select (Optional)	15
COM 1/COM 2 RS232/Power Select	15
Mini PCIe/mSATA Signal Select	16
Rear Panel I/O Ports.....	17
12V DC-in (SU171)/15~36V DC-in (SU173)	17
Graphics Interfaces	18
RJ45 LAN Ports	18
USB Ports.....	19

Audio.....	20
I/O Connectors.....	20
Digital I/O Connector.....	20
Digital I/O Power Connector	20
SATA (Serial ATA) Connectors	21
SATA (Serial ATA) Power Connectors	21
COM (Serial) Ports	22
Front Panel Connector	23
Cooling Fan Connectors.....	23
LVDS LCD Panel Connector.....	24
LCD/Inverter Power Connector.....	24
S/PDIF Connector.....	25
SMBus Connector	25
Expansion Slots	26
Chassis Intrusion Connector	26
eDP Connector (Optional).....	27
LPC Connector	28
Standby Power LED	29
Battery	29

Chapter 3 - BIOS Setup30

Overview.....	30
Insyde BIOS Setup Utility.....	31
Main	31
Advanced	31
Security	40
Boot	42
Exit	44
Updating the BIOS.....	44
Notice: BIOS SPI ROM	45

Chapter 4 - Supported Software46

Chapter 5 - RAID.....62

Chapter 6 - Intel AMT Settings65

Appendix A - Troubleshooting Checklist....78

About this Manual

An electronic file of this manual is included in the DVD. To view the user's manual in the DVD, insert the DVD into a DVD-ROM drive. The autorun screen (Main Board Utility DVD) will appear. Click "User's Manual" on the main menu.

Warranty

1. Warranty does not cover damages or failures that arised from misuse of the product, inability to use the product, unauthorized replacement or alteration of components and product specifications.
2. The warranty is void if the product has been subjected to physical abuse, improper installation, modification, accidents or unauthorized repair of the product.
3. Unless otherwise instructed in this user's manual, the user may not, under any circumstances, attempt to perform service, adjustments or repairs on the product, whether in or out of warranty. It must be returned to the purchase point, factory or authorized service agency for all such work.
4. We will not be liable for any indirect, special, incidental or consequential damages to the product that has been modified or altered.

Static Electricity Precautions

It is quite easy to inadvertently damage your PC, system board, components or devices even before installing them in your system unit. Static electrical discharge can damage computer components without causing any signs of physical damage. You must take extra care in handling them to ensure against electrostatic build-up.

1. To prevent electrostatic build-up, leave the system board in its anti-static bag until you are ready to install it.
2. Wear an antistatic wrist strap.
3. Do all preparation work on a static-free surface.
4. Hold the device only by its edges. Be careful not to touch any of the components, contacts or connections.
5. Avoid touching the pins or contacts on all modules and connectors. Hold modules or connectors by their ends.



Important:

Electrostatic discharge (ESD) can damage your processor, disk drive and other components. Perform the upgrade instruction procedures described at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

Safety Measures

To avoid damage to the system:

- Use the correct AC input voltage range.

To reduce the risk of electric shock:

- Unplug the power cord before removing the system chassis cover for installation or servicing. After installation or servicing, cover the system chassis before plugging the power cord.

About the Package

The package contains the following items. If any of these items are missing or damaged, please contact your dealer or sales representative for assistance.

- One SU171/SU173 motherboard
- One COM port cable (Length: 250mm, 1 x COM port)
- One Serial ATA data with power cable (Length: 300mm)
- One DVD
- One Heat sink

The board and accessories in the package may not come similar to the information listed above. This may differ in accordance to the sales region or models in which it was sold. For more information about the standard package in your region, please contact your dealer or sales representative.

Optional Items

- USB port cable (Length: 200mm)
- COM port cable (Length: 250mm, 1 x COM port)
- Serial ATA data with power cable (Length: 300mm)
- Power adapter (100W, 12V, Level 6)
- Power adapter (120W, 19V)
- LPC EXT-RS232 module (4 x RS232 ports)
- LPC EXT-RS485 module (4 x RS485 ports)
- I/O shield
- Half height I/O shield
- DT122 Chassis

The board and accessories in the package may not come similar to the information listed above. This may differ in accordance to the sales region or models in which it was sold. For more information about the standard package in your region, please contact your dealer or sales representative.

Before Using the System Board

Before using the system board, prepare basic system components.

If you are installing the system board in a new system, you will need at least the following internal components.

- Memory module
- Storage devices such as hard disk drive, DVD-ROM, etc.

You will also need external system peripherals you intend to use which will normally include at least a keyboard, a mouse and a video display monitor.

Chapter 1 - Introduction

Specifications

SYSTEM	Processor	6th Generation Intel® Core™ Processors, BGA 1356 Intel® Core™ i7-6600U Processor, Dual Core, 4M Cache, 2.6GHz (3.4GHz), 15W Intel® Core™ i5-6300U Processor, Dual Core, 3M Cache, 2.4GHz (3.0GHz), 15W Intel® Core™ i3-6100U Processor, Dual Core, 3M Cache, 2.3GHz, 15W Intel® Celeron® Processor 3955U, Dual Core, 2M Cache, 2.0GHz, 15W
	Memory	Two 204-pin SODIMM up to 16GB Dual Channel DDR3L 1600MHz
	BIOS	Insyde SPI 128Mbit
GRAPHICS	Controller	Intel® HD Graphics GT Series
	Feature	OpenGL 4.4, DirectX 12, OpenCL 2.1 HW Decode: AVC/H.264, MPEG2, VC1/WMV9, JPEG/MJPEG, HEVC/H265, VP8, VP9 HW Encode: AVC/H.264, MPEG2, JPEG, HEVC/H265, VP8, VP9
	Display	1 x LVDS/eDP (eDP available upon request) 1 x HDMI/DP (DP available upon request) 1 x DP++ LVDS: dual channel 48-bit, resolution up to 1920x1200 @ 60Hz DP: resolution up to 4096x2304 @ 60Hz HDMI: resolution up to 2560x1600 @ 60Hz or 4096x2160 @ 24Hz
	Triple Displays	LVDS + HDMI + DP++ LVDS + DP + DP++ (available upon request) eDP + HDMI + DP++ (available upon request) eDP + DP + DP++ (available upon request)
EXPANSION	Interface	1 x PCIe x4 (Gen 3) 1 x SIM (available upon request) 1 x Full-size Mini PCIe (PCIe/USB/SATA) 1 x Full-size Mini PCIe (PCIe/USB)
AUDIO	Audio Codec	Realtek ALC888S-VD2-GR
ETHERNET	Controller	1 x Intel® I210AT PCIe (10/100/1000Mbps) 1 x Intel® I219LM PCIe with iAMT11.0 (10/100/1000Mbps) (only Core i7/i5 supports iAMT)
REAR I/O	Ethernet	2 x GbE (RJ-45)
	USB	4 x USB 3.0
	Display	1 x HDMI/DP (DP available upon request) 1 x DP++
	Audio	1 x Line-out 1 x Mic-in
INTERNAL I/O	Serial	2 x RS-232/422/485 (RS-232 w/ power) (2.0mm pitch) 2 x RS-232 (2.0mm pitch)
	USB	4 x USB 2.0 (2.0mm pitch) or 2 x USB 2.0 (2.0mm pitch) + 1 x Vertical USB 2.0 (type A) (available upon request)
	Display	1 x LVDS LCD Panel Connector 1 x LCD/Inverter Power 1 x eDP LCD Panel Connector (available upon request)

	Audio	1 x S/PDIF
	SATA	2 x SATA 3.0 (up to 6Gb/s) 2 x SATA Power RAID 0/1/5
	DIO	1 x 8-bit DIO
	LPC	1 x LPC (supports LPC EXT-RS232/RS485 module)
	SMBus	1 x SMBus
WATCHDOG TIMER	Output & Interval	System Reset, Programmable via Software from 1 to 255 Seconds
SECURITY	TPM	Available Upon Request
POWER	Type	Single 12V +/-10% DC (SU171) Wide Range 15~36V (SU173)
	Connector	DC-in Jack Right Angle Connector (4-pin) (available upon request) Vertical Type Connector (4-pin) (available upon request)
	Consumption	SU171 Typical: 6600U:12V @ 0.98A (11.76Watt); 6300U:12V @ 0.95A (11.40Watt) Max: 6600U:12V @ 1.62A (19.44Watt); 6300U:12V @ 1.58A (18.96Watt) SU173 Typical: 6600U:19V @ 0.48A (9.12Watt); 6300U:19V @ 0.43A (8.170Watt) Max: 6600U:19V @ 1.05A (19.95Watt); 6300U:19V @ 0.90A (17.10Watt)
	RTC Battery	Lithium 3V (210mAh)
OS SUPPORT	Microsoft /Linux	Windows 7 (/WES7) 32/64-bit Windows 8.1 (64-bit) Windows 10 IoT Enterprise 64-bit Debian 8 (with VESA graphic driver) CentOS 7 (with VESA graphic driver) Ubuntu 15.10 (Intel graphic driver available)
ENVIRONMENT	Temperature	Operating: 0 to 60°C / -20 to 70°C Storage: -40 to 85°C
	Humidity	Operating: 5 to 90% RH Storage: 5 to 90% RH
	MTBF	SU171 : 357,691 hrs @ 25°C; 206,450 hrs @ 45°C ; 130,229 hrs @ 60°C SU173 : 347,511 hrs @ 25°C; 200,230 hrs @ 45°C ; 126,434 hrs @ 60°C Calculation model: Telcordia Issue 2, Method I Case 3 Environment: GB, GC – Ground Benign, Controlled
MECHANICAL	Dimensions	Mini-ITX Form Factor 170mm (6.7") x 170mm (6.7")
	Height	PCB: 1.6mm Top Side: 16.5mm, Bottom Side: 3.5mm
CERTIFICATIONS		CE, FCC Class B, RoHS

Features

• Watchdog Timer

The Watchdog Timer function allows your application to regularly “clear” the system at the set time interval. If the system hangs or fails to function, it will reset at the set time interval so that your system will continue to operate.

• DDR3L

DDR3L is a higher performance DDR3 SDRAM interface providing less voltage and higher speed successor. DDR3L SDRAM modules support 1600MHz for DDR modules. DDR3L delivers increased system bandwidth and improved performance to provide its higher bandwidth and its increase in performance at a lower power.

• Graphics

The integrated Intel® HD graphics engine delivers an excellent blend of graphics performance and features to meet business needs. It provides excellent video and 3D graphics with outstanding graphics responsiveness. These enhancements deliver the performance and compatibility needed for today's and tomorrow's business applications. Supports 1 LVDS/eDP, 1 HDMI/DP and 1 DP++ interface for triple display outputs.

• PCI Express

PCI Express is a high bandwidth I/O infrastructure that possesses the ability to scale speeds by forming multiple lanes.

• Serial ATA

Serial ATA is a storage interface that is compliant with SATA 1.0a specification. With speed of up to 6Gb/s (SATA 3.0), it improves hard drive performance faster than the standard parallel ATA whose data transfer rate is 100MB/s.

• Gigabit LAN

Intel® I210AT PCI Express Gigabit Ethernet and Intel® I219LM with iAMT11.0 Gigabit Ethernet Phy controllers support up to 1Gbps data transmission.

• Wake-On-LAN

This feature allows the network to remotely wake up a Soft Power Down (Soft-Off) PC. It is supported via the onboard LAN port or via a PCIe LAN card that uses the PCIe PME (Power Management Event) signal. However, if your system is in the Suspend mode, you can power-on the system only through an IRQ or DMA interrupt.



Important:

The 5V_standby power source of your power supply must support $\geq 720\text{mA}$.

• Wake-On-USB

This function allows you to use a USB keyboard or USB mouse to wake up a system from the S3 (STR - Suspend To RAM) state.



Important:

If you are using the Wake-On-USB Keyboard/Mouse function for 2 USB ports, the 5V_standby power source of your power supply must support $\geq 1.5\text{A}$. For 3 or more USB ports, the 5V_standby power source of your power supply must support $\geq 2\text{A}$.

• RTC Timer

The RTC installed on the system board allows your system to automatically power-on on the set date and time.

- **ACPI STR**

The system board is designed to meet the ACPI (Advanced Configuration and Power Interface) specification. ACPI has energy saving features that enables PCs to implement Power Management and Plug-and-Play with operating systems that support OS Direct Power Management. ACPI when enabled in the Power Management Setup will allow you to use the Suspend to RAM function.

With the Suspend to RAM function enabled, you can power-off the system at once by pressing the power button or selecting "Standby" when you shut down Windows® without having to go through the sometimes tiresome process of closing files, applications and operating system. This is because the system is capable of storing all programs and data files during the entire operating session into RAM (Random Access Memory) when it powers-off. The operating session will resume exactly where you left off the next time you power-on the system.



Important:

The 5V_standby power source of your power supply must support $\geq 720\text{mA}$.

- **Power Failure Recovery**


When power returns after an AC power failure, you may choose to either power-on the system manually or let the system power-on automatically.

- **USB**

The system board supports the new USB 3.0. It is capable of running at a maximum transmission speed of up to 5 Gbit/s (625 MB/s) and is faster than USB 2.0 (480 Mbit/s, or 60 MB/s) and USB 1.1 (12Mb/s). USB 3.0 reduces the time required for data transmission, reduces power consumption, and is backward compatible with USB 2.0. It is a marked improvement in device transfer speeds between your computer and a wide range of simultaneously accessible external Plug and Play peripherals.

Chapter 2 - Hardware Installation

Board Layout

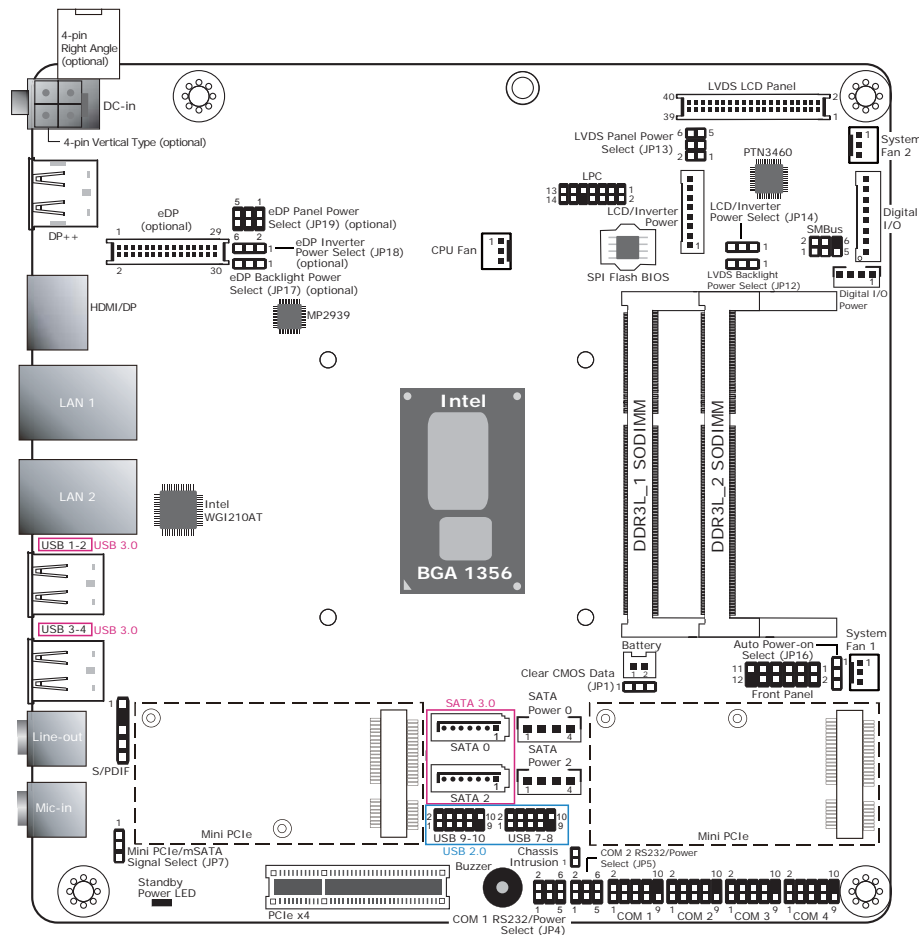

- SU171: Single 12V +/-10% DC.
SU173: Wide Range 15~36V.
- The eDP connector is optional. Please contact your sales representative for more information.
- JP17, JP18 an JP19 will work when the eDP connector is populated on the system board.



Important:


Electrostatic discharge (ESD) can damage your board, processor, disk drives, add-in boards, and other components. Perform installation procedures at an ESD workstation only. If such a station is not available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the system chassis. If a wrist strap is unavailable, establish and maintain contact with the system chassis throughout any procedures requiring ESD protection.

System Memory



Important:

When the Standby Power LED lights red, it indicates that there is power on the system board. Power-off the PC then unplug the power cord prior to installing any devices. Failure to do so will cause severe damage to the motherboard and components.

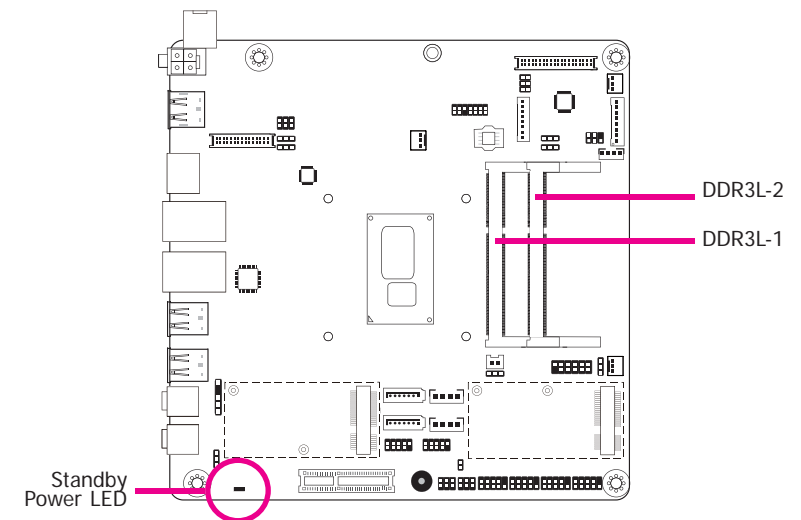

Features

- Two 204-pin DDR3L SODIMM sockets
- Supports 1600MHz DDR3L SDRAM
- Supports up to 16GB system memory
- Supports dual channel memory interface

The system board supports the following memory interface.

Single Channel (SC)

Data will be accessed in chunks of 64 bits (8B) from the memory channels.

Dual Channel (DC)

Data will be accessed in chunks of 128 bits from the memory channels. Dual channel provides better system performance because it doubles the data transfer rate.

Single Channel	DIMMs are on the same channel. DIMMs in a channel can be identical or completely different. However, we highly recommend using identical DIMMs. Not all slots need to be populated.
Dual Channel	DIMMs of the same memory configuration are on different channels.


Installing the DIMM Module



Note:

The system board used in the following illustrations may not resemble the actual board. These illustrations are for reference only.

1. Make sure the PC and all other peripheral devices connected to it has been powered down.
2. Disconnect all power cords and cables.
3. Locate the SODIMM socket on the system board.
4. Note the key on the socket. The key ensures the module can be plugged into the socket in only one direction.

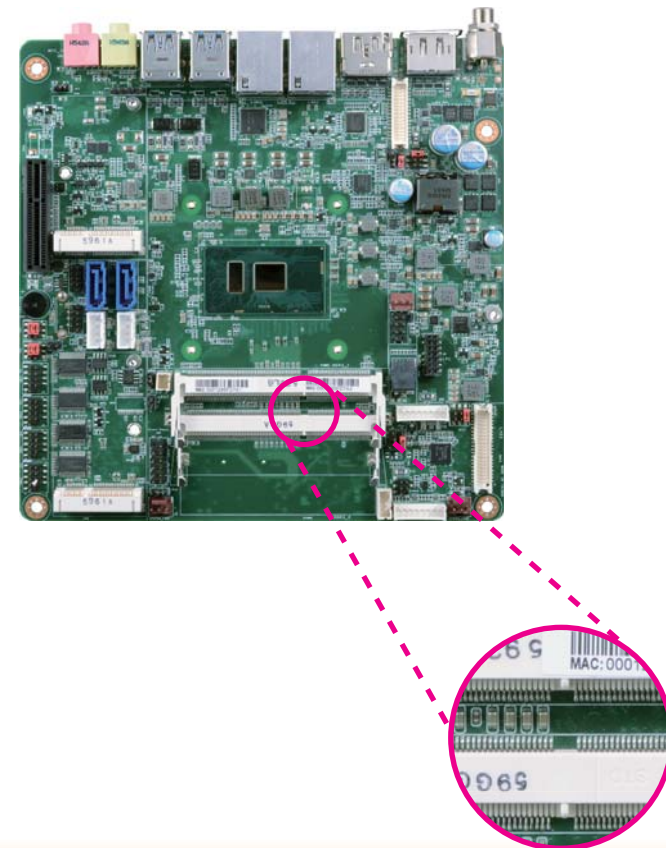

5. Grasping the module by its edges, align the module into the socket at an approximately 30 degrees angle. Apply firm even pressure to each end of the module until it slips down into the socket. The contact fingers on the edge of the module will almost completely disappear inside the socket.




6. Push down the module until the clips at each end of the socket lock into position. You will hear a distinctive “click”, indicating the module is correctly locked into position.



Jumper Settings

Clear CMOS Data

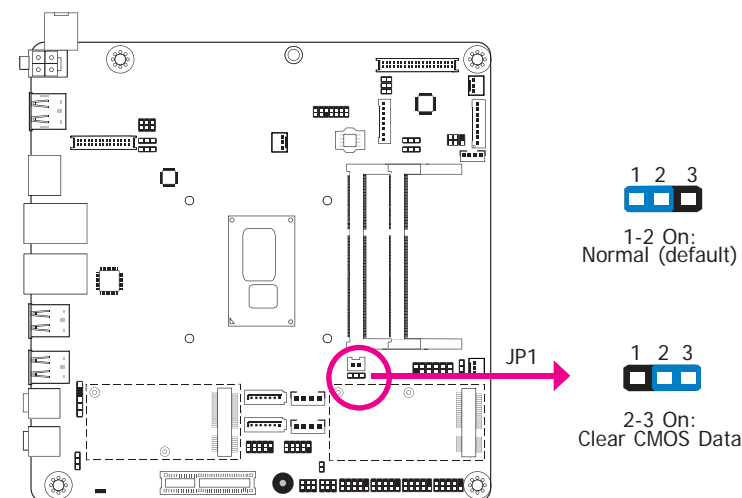

If you encounter the following,


- a) CMOS data becomes corrupted.
- b) You forgot the supervisor or user password.

you can reconfigure the system with the default values stored in the ROM BIOS.

To load the default values stored in the ROM BIOS, please follow the steps below.

1. Power-off the system and unplug the power cord.
2. Set JP1 pins 2 and 3 to On. Wait for a few seconds and set JP1 back to its default setting, pins 1 and 2 On.
3. Now plug the power cord and power-on the system.


Auto Power-on Select

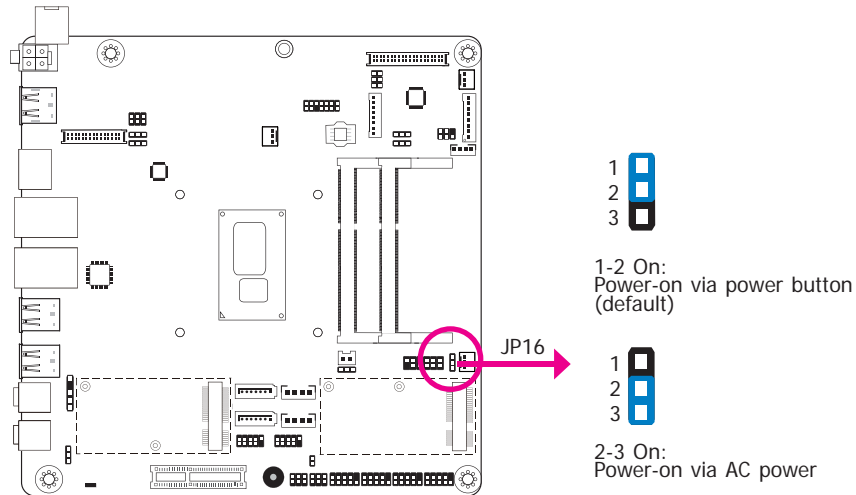

JP16 is used to select the method of powering on the system. If you want the system to power-on whenever AC power comes in, set JP16 pins 2 and 3 to On. If you want to use the power button, set pins 1 and 2 to On.

When using the JP16 "Power On" feature to power the system back on after a power failure occurs, the system may not power on if the power lost is resumed within 5 seconds (power flicker).

LVDS Panel Power Select

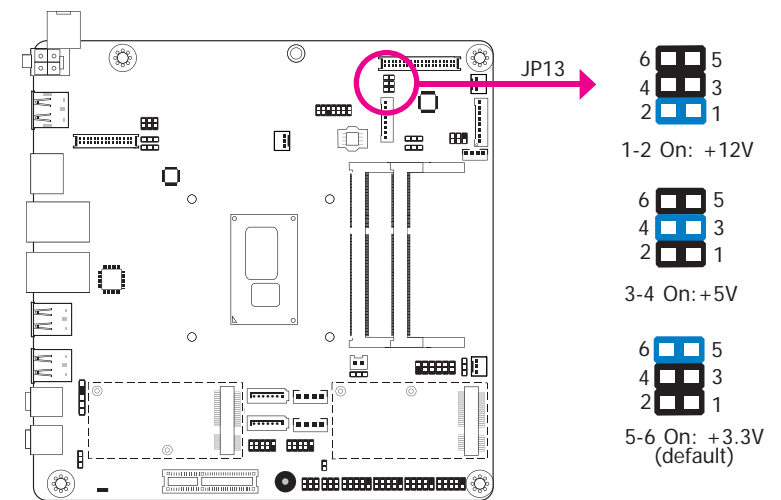


JP13 is used to select the power supplied with the LVDS LCD panel.



Important:


Before powering-on the system, make sure that the power settings of JP13 match the LCD panel's specification. Selecting the incorrect voltage will seriously damage the LCD panel.

LCD/Inverter Power Select

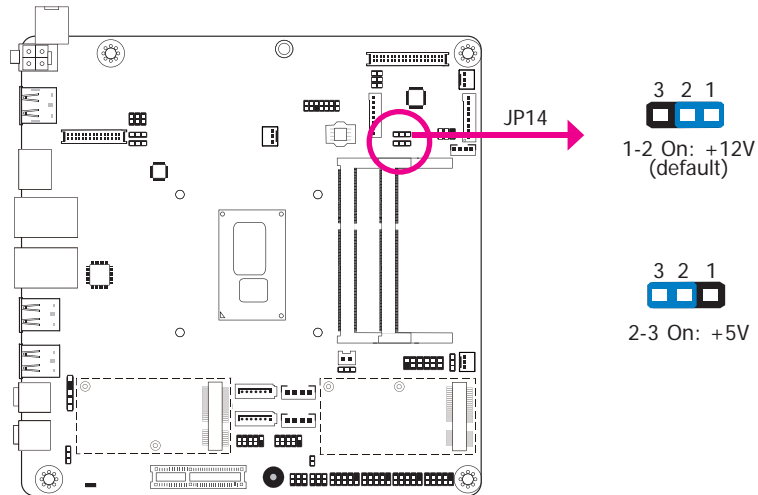

JP14 is used to select the power level of the LCD/Inverter power connector.

LVDS Backlight Power Select

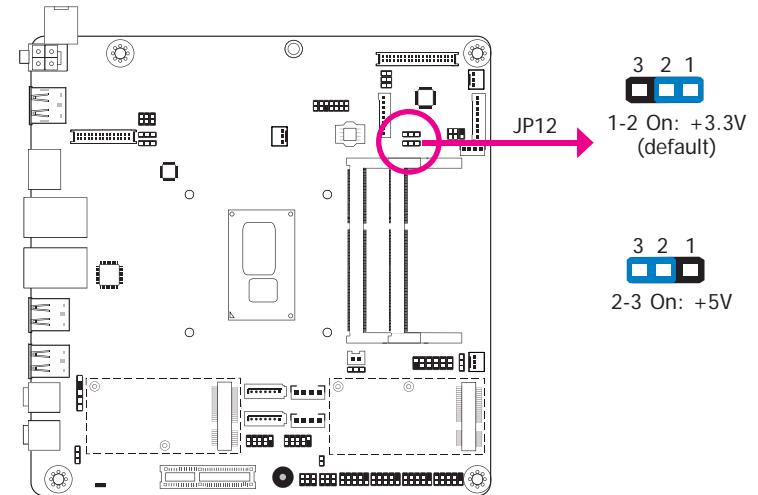


JP12 is used to select the power level of backlight control: +3.3V (default) or +5V.



Important:

Before powering-on the system, make sure that the power settings of JP12 match the power specification of backlight control. Selecting the incorrect voltage will seriously damage the backlight.

eDP Panel Power Select (Optional)

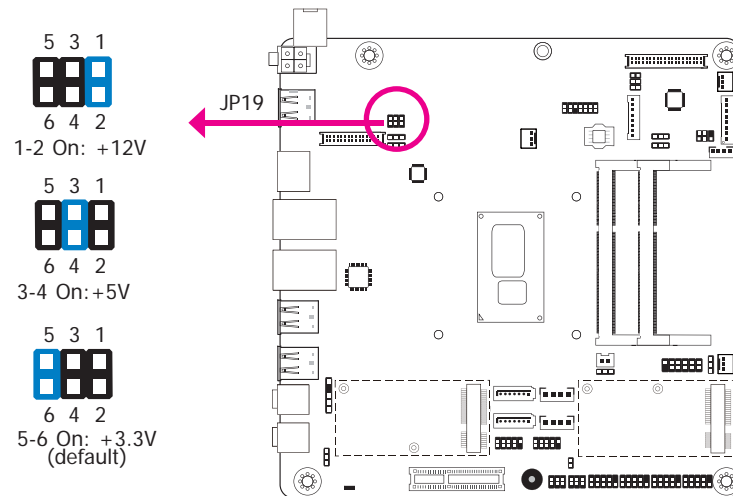


JP19 is used to select the power supplied with the eDP panel.

**Important:**


Before powering-on the system, make sure that the power settings of JP19 match the eDP panel's specification. Selecting the incorrect voltage will seriously damage the eDP panel.

eDP Inverter Power Select (Optional)

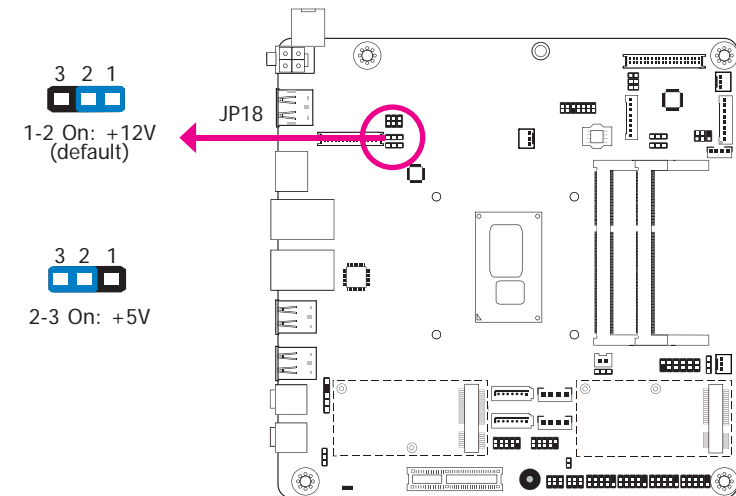

JP18 is used to select the power level of the eDP Inverter power supply.

eDP Backlight Power Select (Optional)

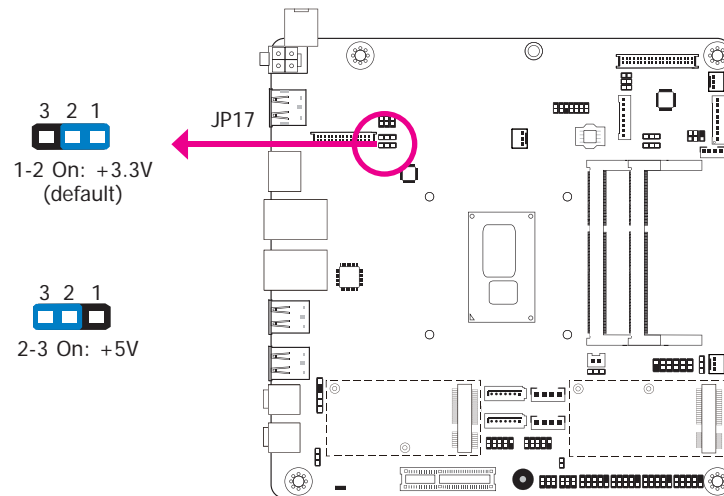


JP17 is used to select the power level of backlight control: +3.3V (default) or +5V.


**Important:**

Before powering-on the system, make sure that the power settings of JP17 match the power specification of backlight control. Selecting the incorrect voltage will seriously damage the backlight.


COM 1/COM 2 RS232/Power Select

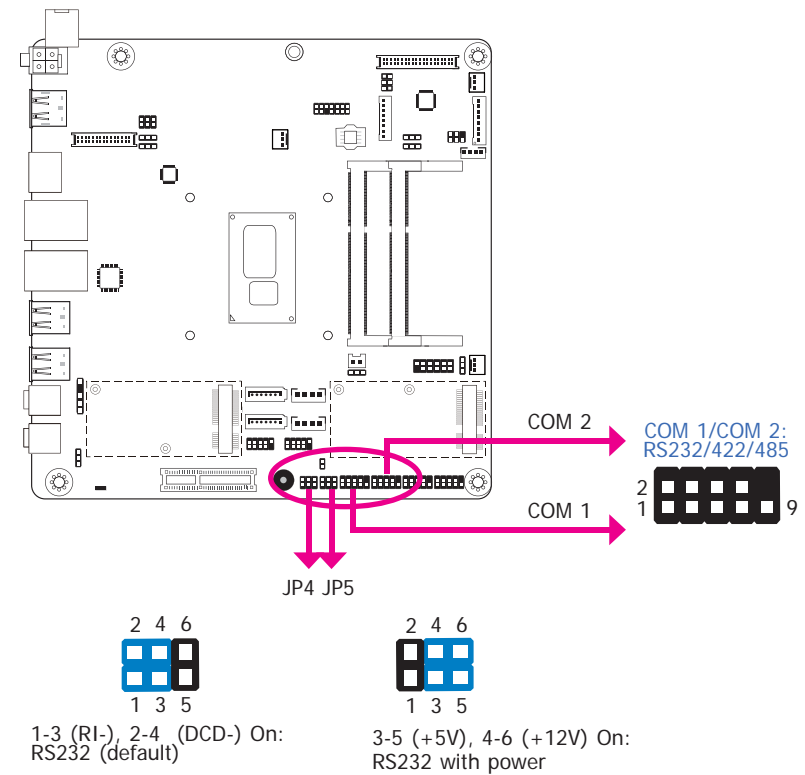

JP4 (for COM1) and JP5 (for COM 2) are designed to configure Serial COM ports to pure RS232 or RS232 with power.

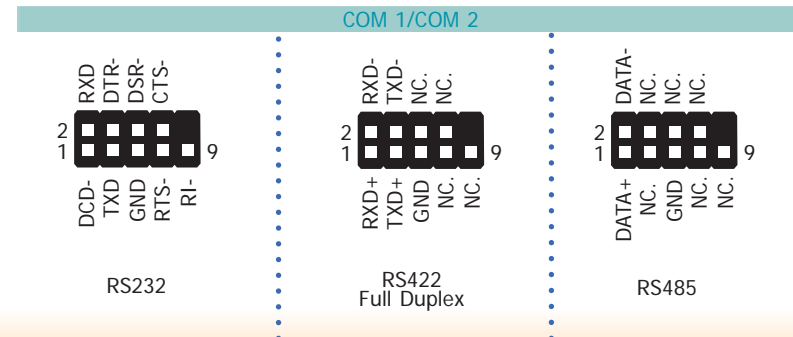

Mini PCIe/mSATA Signal Select

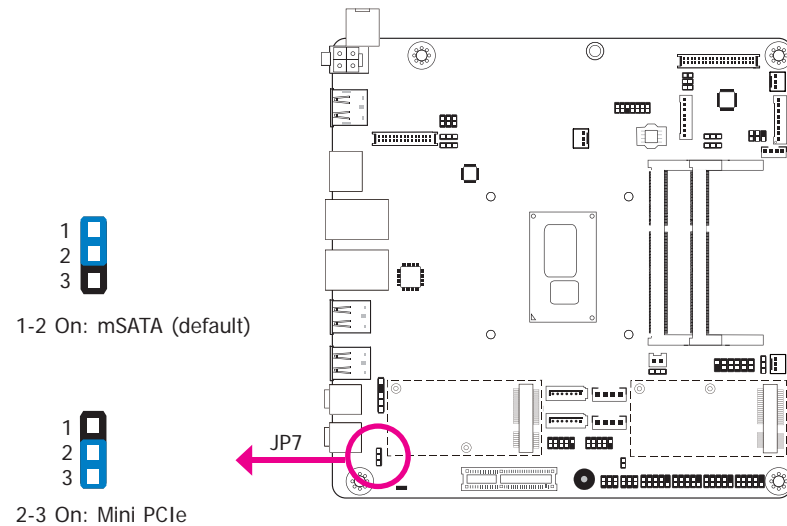

JP7 is used to select the Mini PCIe signal: Mini PCIe or mSATA (default).


Rear Panel I/O Ports



The rear panel I/O ports consist of the following:

- 1 12V DC-in jack (default) - SU171
- 1 15~36V DC-in jack (default) - SU173
- 1 HDMI/DP port (DP available upon request)
- 1 DP++ port
- 2 RJ45 LAN ports
- 4 USB 3.0 ports
- 1 Line-out jack
- 1 Mic-in jack

12V DC-in (SU171)/15~36V DC-in (SU173)

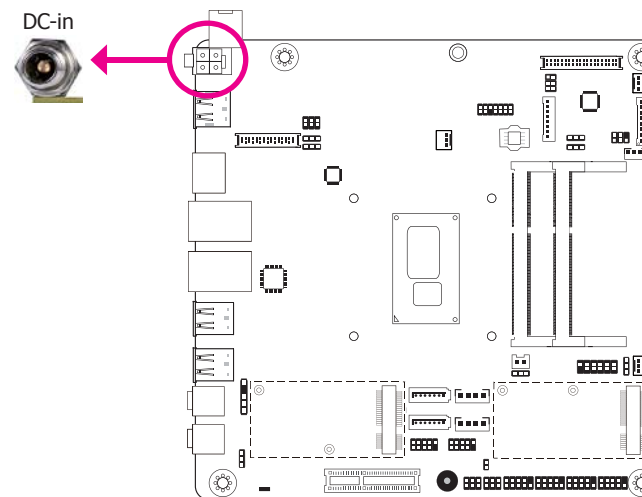

This jack is considered a low power solution. Connect a DC power cord to this jack. Using a voltage more than the recommended range may fail to boot the system or cause damage to the system board.


The DC-in jack on the system board co-lays with a 4-pin right angle connector (optional) or 4-pin vertical type connector (optional) as the photo displayed below.



Graphics Interfaces

The display ports consist of the following:

- 1 DP++ port
- 1 HDMI/DP port

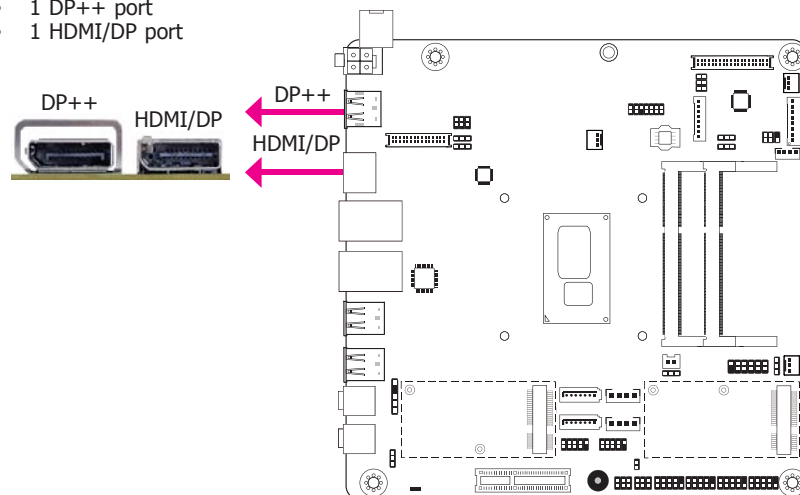

DP Port

The DP port is a digital display interface used to connect a display device such as a computer monitor. It is used to transmit audio and video simultaneously. The interface, which is developed by VESA, delivers higher performance features than any other digital interface.

HDMI Port

The HDMI port which carries both digital audio and video signals is used to connect a LCD monitor or digital TV that has the HDMI port.


BIOS Setting

Configure the display devices in the Advanced menu ("Video Configuration" submenu) of the BIOS. Refer to chapter 3 for more information.

Driver Installation

Install the graphics driver. Refer to chapter 4 for more information.

RJ45 LAN Ports

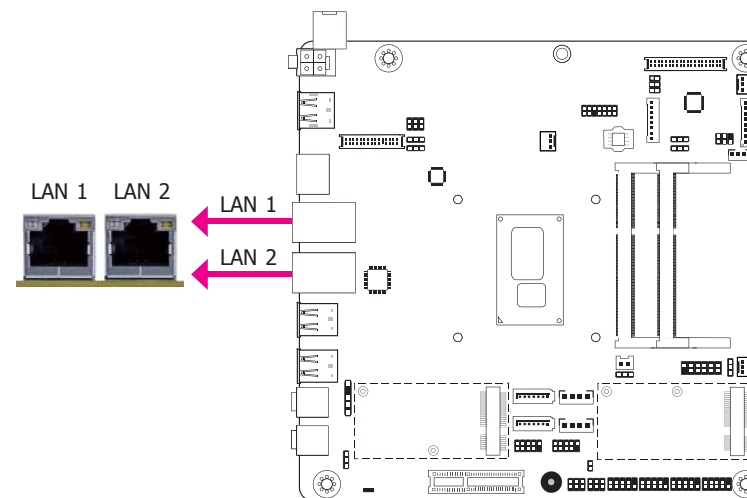

Features

- Intel® I210AT PCIe (10/100/1000Mbps)
- Intel® I219LM PCIe with iAMT11.0 (10/100/1000Mbps) (only Core i7/i5 supports iAMT)

The LAN ports allow the system board to connect to a local area network by means of a network hub.


BIOS Setting

Configure the onboard LAN ports in the Advanced menu ("ACPI Configuration" submenu) of the BIOS. Refer to chapter 3 for more information.

Driver Installation

Install the LAN drivers. Refer to chapter 4 for more information.

USB Ports

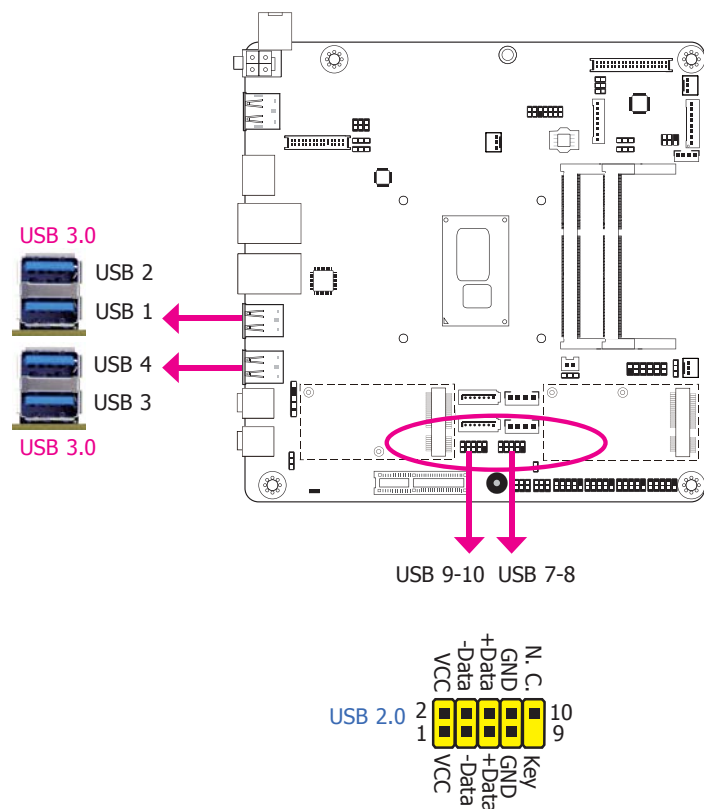

The USB device allows data exchange between your computer and a wide range of simultaneously accessible external Plug and Play peripherals.

The system board is equipped with four onboard USB 3.0 ports (USB 1-2/3-4). The 10-pin connectors allow you to connect 4 additional USB 2.0 ports (USB 7-8/9-10). The additional USB ports may be mounted on a card-edge bracket. Install the card-edge bracket to an available slot at the rear of the system chassis and then insert the USB port cables to a connector.

BIOS Setting

Configure the onboard USB in the Advanced menu ("USB Configuration" submenu) of the BIOS. Refer to chapter 3 for more information.

Driver Installation

You may need to install the proper drivers in your operating system to use the USB device. Refer to your operating system's manual or documentation for more information.

Wake-On-USB Keyboard/Mouse


The Wake-On-USB Keyboard/Mouse function allows you to use a USB keyboard or USB mouse to wake up a system from the S3 (STR - Suspend To RAM) state.



Important:

If you are using the Wake-On-USB Keyboard/Mouse function for 2 USB ports, the +5V_standby power source of your power supply must support $\geq 1.5A$. For 3 or more USB ports, the +5V_standby power source of your power supply must support $\geq 2A$.

Audio

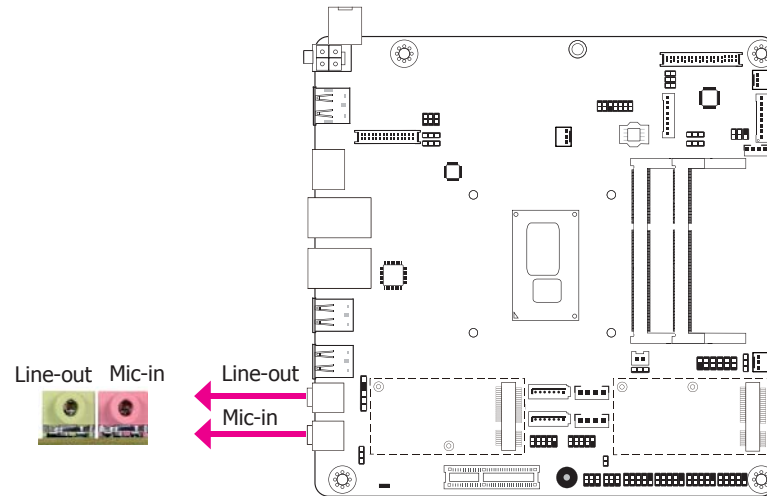

Rear Audio

The system board is equipped with 2 audio jacks. A jack is a one-hole connecting interface for inserting a plug.

- **Line-out Jack (Lime)**
This jack is used to connect a headphone or external speakers.
- **Mic-in (Pink)**
This jack is used to connect an external microphone.

BIOS Setting

Configure the onboard audio devices in the Advanced menu ("Audio Configuration" submenu) of the BIOS. Refer to chapter 3 for more information.


Driver Installation

Install the audio driver. Refer to the chapter 4 for more information.

I/O Connectors

Digital I/O Connector

Digital I/O Power Connector

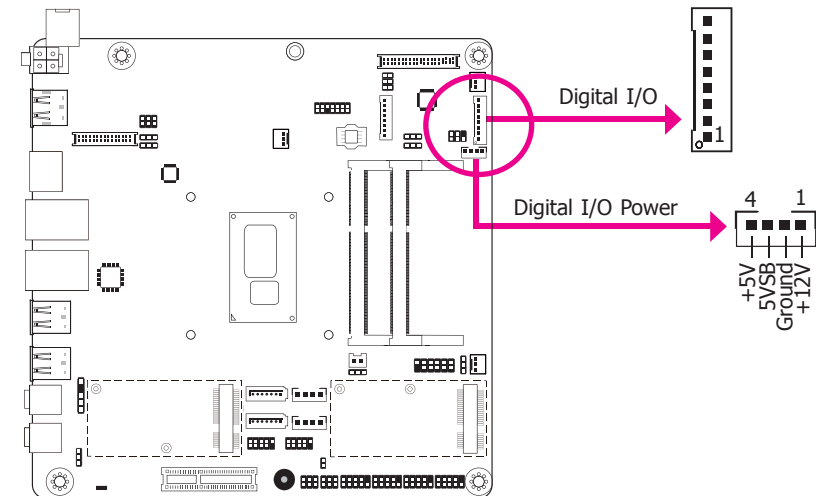


The 8-bit Digital I/O connector provides powering-on function to external devices that are connected to the connector.


Digital I/O Connector

Pins	Function
1	DIO7
2	DIO6
3	DIO5
4	DIO4
5	DIO3
6	DIO2
7	DIO1
8	DIO0

SATA (Serial ATA) Connectors

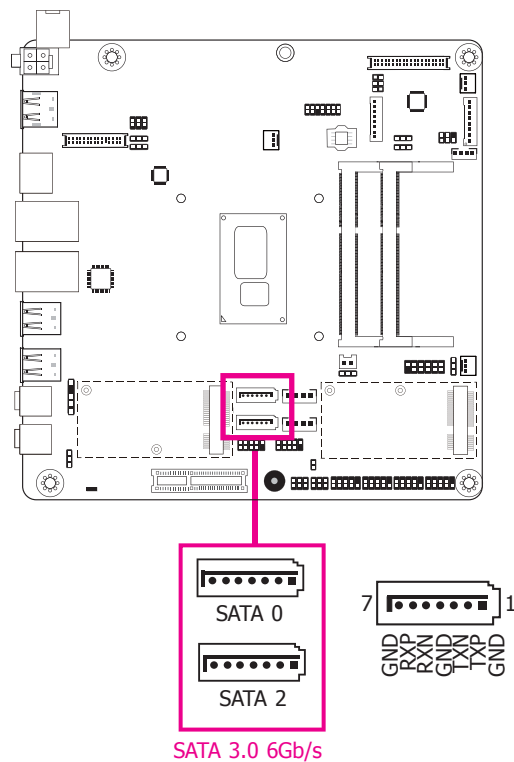

SATA (Serial ATA) Power Connectors

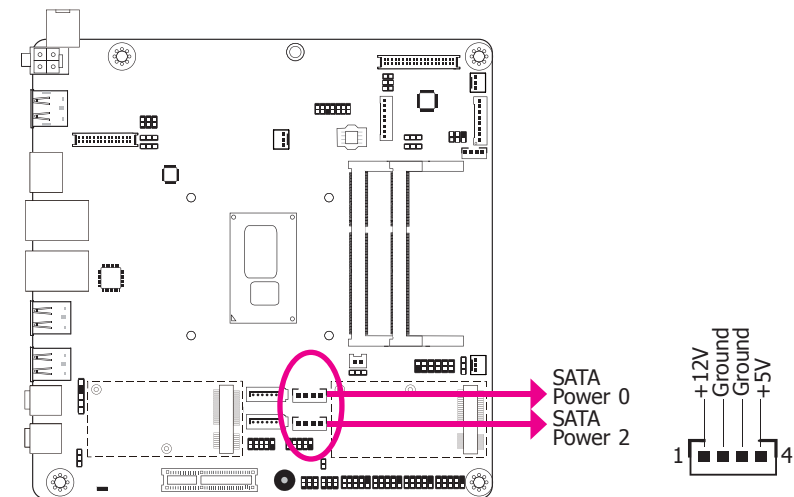

These SATA power connectors supply power to the SATA drive. Connect one end of the provided power cable to the SATA power connector and the other end to your storage device.

Features


- 2 Serial ATA 3.0 ports with data transfer rate up to 6Gb/s
- Integrated Advanced Host Controller Interface (AHCI) controller
- Supports RAID 0/1/5

The Serial ATA connectors are used to connect Serial ATA devices. Connect one end of the Serial ATA data cable to a SATA connector and the other end to your Serial ATA device.

BIOS Setting

Configure the Serial ATA drives in the Advanced menu ("SATA Configuration" submenu) of the BIOS. Refer to chapter 3 for more information.

COM (Serial) Ports

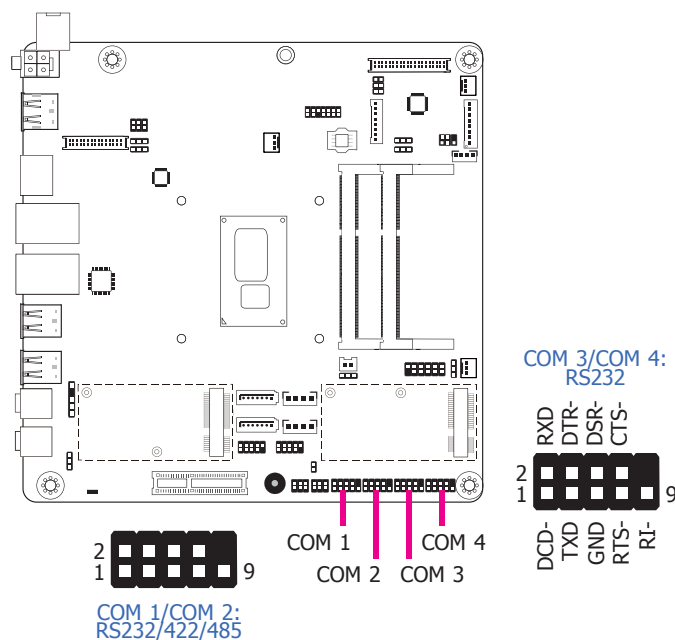


The pin functions of COM 1 and COM 2 will vary according to BIOS' setting. JP4 (for COM1) and JP5 (for COM 2) are designed to configure Serial COM ports to pure RS232 or RS232 with power. Refer to "COM 1/COM 2 RS232/Power Select" in this chapter for more information.

COM 3 and COM 4 are fixed at RS232.

The serial ports are asynchronous communication ports with 16C550A-compatible UARTs that can be used with modems, serial printers, remote display terminals, and other serial devices.

Connecting External Serial Ports


Your COM port may come mounted on a card-edge bracket. Install the card-edge bracket to an available slot at the rear of the system chassis then insert the serial port cable to the COM connector. Make sure the colored stripe on the ribbon cable is aligned with pin 1 of the COM connector.

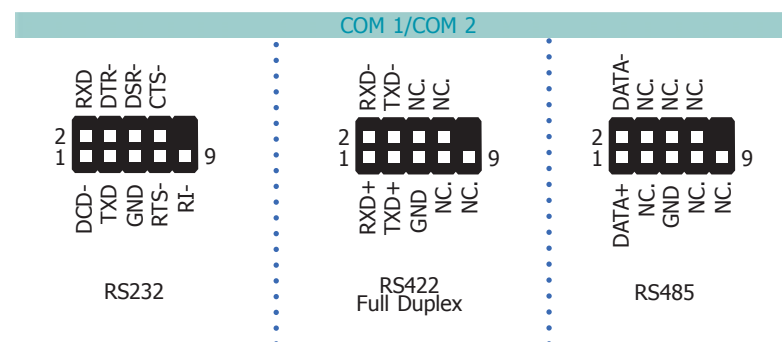

BIOS Setting

Configure the serial COM ports in the Advanced menu ("SIO NUVOTON6106D" submenu) of the BIOS. Refer to the chapter 3 for more information.

Front Panel Connector

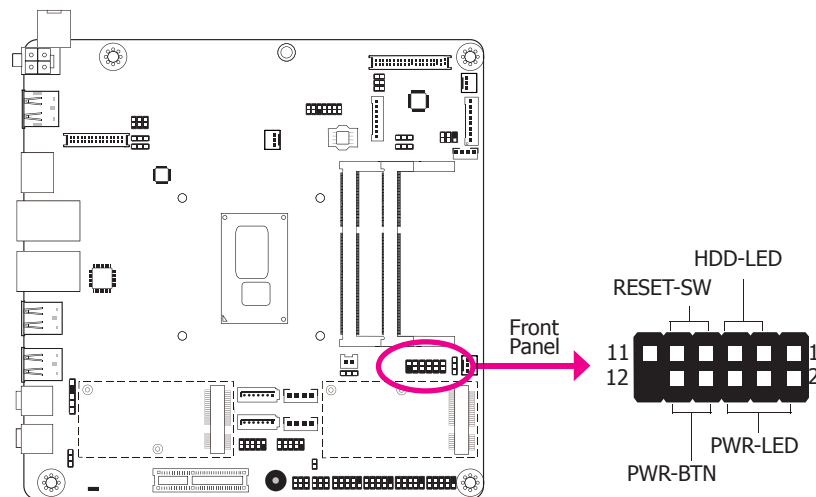

HDD-LED - HDD LED

This LED will light when the hard drive is being accessed.

RESET-SW - Reset Switch

This switch allows you to reboot without having to power off the system.

PWR-LED - Power/Standby LED


When the system's power is on, this LED will light. When the system is in the S1 (POS - Power On Suspend) state, it will blink every second. When the system is in the S3 (STR - Suspend To RAM) state, it will blink every 4 seconds.

PWR-BTN - Power Switch

This switch is used to power on or off the system.

	Pin	Pin Assignment		Pin	Pin Assignment
HDD-LED	3	3V3	PWR-LED	2	3V3SB
	5	HDD_LED		4	3V3SB
RESET-SW	7	Ground	PWR-BTN	6	Power_LED
	9	RST Signal		8	Ground
	11	N.C.		10	Power_Button

Cooling Fan Connectors

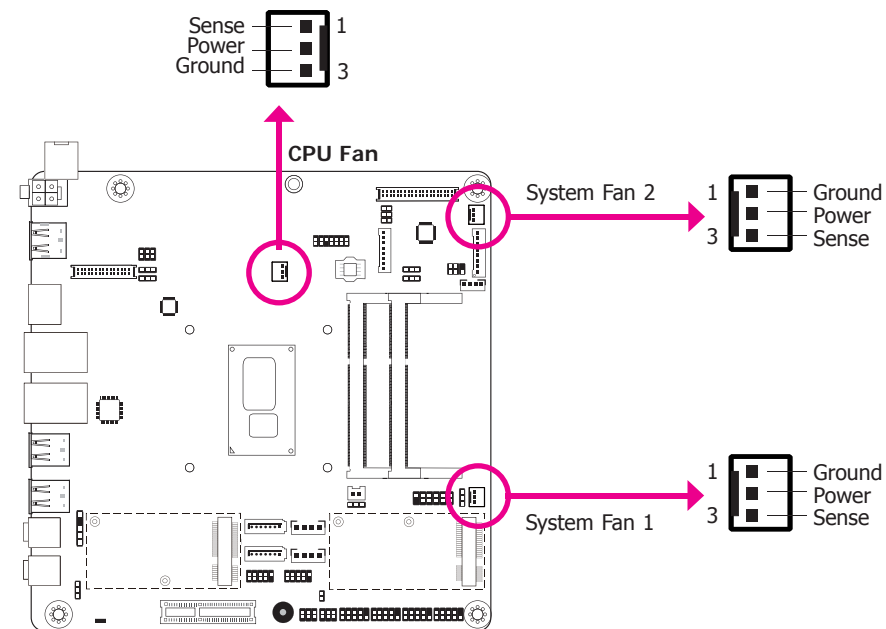


The fan connectors are used to connect cooling fans. The cooling fans will provide adequate airflow throughout the chassis to prevent overheating the CPU and system board components.

BIOS Setting

The Advanced menu ("SIO NUVOTON6106D" submenu) of the BIOS will display the current speed of the cooling fans. Refer to chapter 3 for more information.

LVDS LCD Panel Connector

LCD/Inverter Power Connector

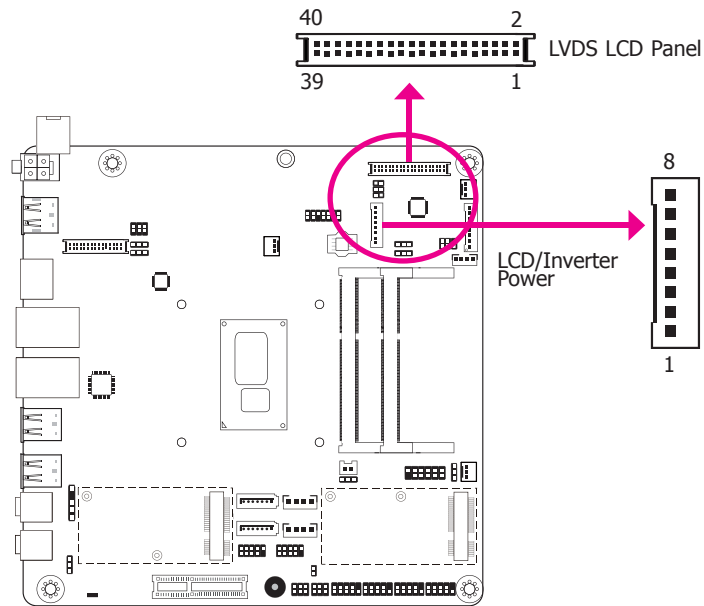

The system board allows you to connect a LCD Display Panel by means of the LVDS LCD panel connector and the LCD/Inverter power connector. These connectors transmit video signals and power from the system board to the LCD Display Panel.

Refer to the right side for the pin functions of these connectors.

Jumper Settings

Refer to the "Jumper Settings" section in this chapter for settings relevant to the LCD panel.

BIOS Setting

Configure the LCD panel in the Advanced menu ("Video Configuration" sub-menu) of the BIOS. Refer to chapter 3 for more information.

LVDS LCD Panel Connector

Pins	Function	Pins	Function
1	GND	2	GND
3	LVDS_Out3+ (Odd_3+)	4	LVDS_Out7+ (Even_3+)
5	LVDS_Out3- (Odd_3-)	6	LVDS_Out7- (Even_3-)
7	GND	8	GND
9	LVDS_Out2+ (Odd_2+)	10	LVDS_Out6+ (Even_2+)
11	LVDS_Out2- (Odd_2-)	12	LVDS_Out6- (Even_2-)
13	GND	14	GND
15	LVDS_Out1+ (Odd_1+)	16	LVDS_Out5+ (Even_1+)
17	LVDS_Out1- (Odd_1-)	18	LVDS_Out5- (Even_1-)
19	GND	20	GND
21	LVDS_Out0+ (Odd_0+)	22	LVDS_Out4+ (Even_0+)
23	LVDS_Out0- (Odd_0-)	24	LVDS_Out4- (Even_0-)
25	GND	26	GND
27	LVDS_CLK1+ (Odd_CLK+)	28	LVDS_CLK2+ (Even_CLK+)
29	LVDS_CLK1- (Odd_CLK-)	30	LVDS_CLK2- (Even_CLK-)
31	GND	32	GND
33	LVDS_DDCCLK	34	N.C.
35	LVDS_DDCDATA	36	+3.3V
37	Panel Power	38	Panel Power
39	Panel Power	40	Panel Power

LCD/Inverter Power Connector


Pins	Function
1	GND
2	GND
3	Panel Inverter Brightness Voltage Control
4	Panel Power
5	+3.3V
6	Panel Backlight On/Off Control
7	+12V (default) /+5V
8	+12V (default) /+5V



Note:


DFI board's LVDS connector: Hirose DF13-40DP-1.25V(91)/40P/1.25mm; cable side connector: Hirose DF13-40DS-1.25C.

S/PDIF Connector

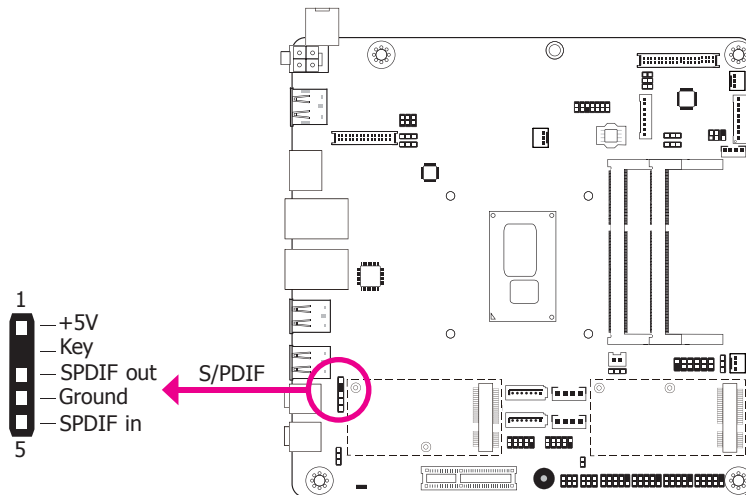


The S/PDIF connector is used to connect an external S/PDIF port. Your S/PDIF port may be mounted on a card-edge bracket. Install the card-edge bracket to an available slot at the rear of the system chassis then connect the audio cable to the S/PDIF connector. Make sure pin 1 of the audio cable is aligned with pin 1 of the S/PDIF connector.

SMBus Connector

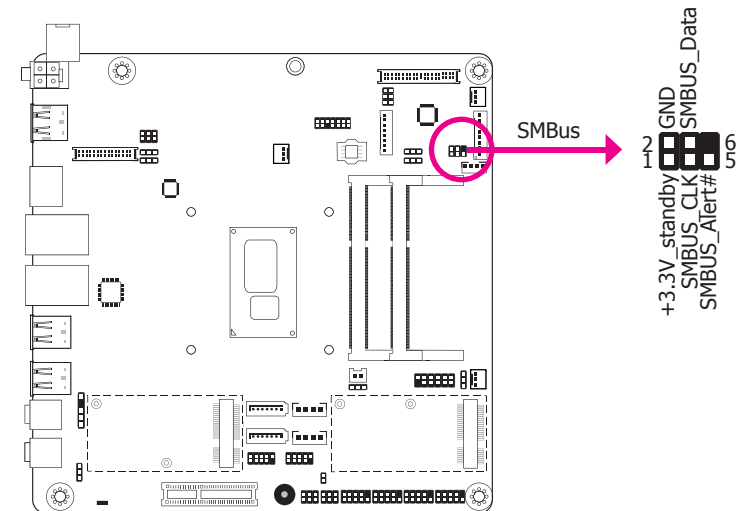

The SMBus (System Management Bus) connector is used to connect SMBus devices. It is a multiple device bus that allows multiple chips to connect to the same bus and enable each one to act as a master by initiating data transfer.

Expansion Slots

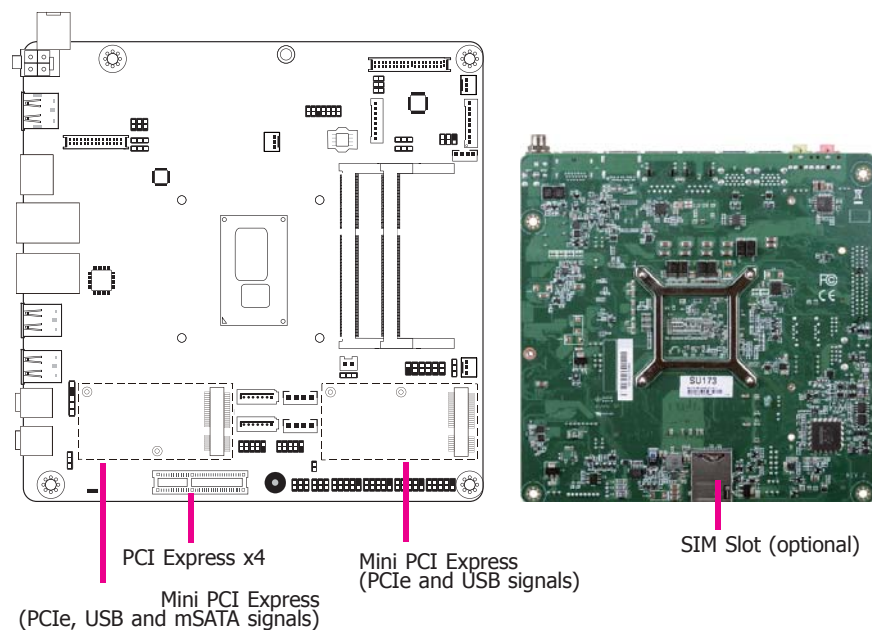

Mini PCI Express Slots

The Mini PCIe sockets are used to install a Mini PCIe card. Mini PCIe card is a small form factor PCI card with the same signal protocol, electrical definitions, and configuration definitions as the conventional PCI.


PCI Express x4 Slot

Install PCI Express cards such as network cards or other cards that comply to the PCI Express specifications into the PCI Express x4 slot.

SIM Slot (optional)

The SIM slot on the system board is used to insert a SIM card.

Chassis Intrusion Connector

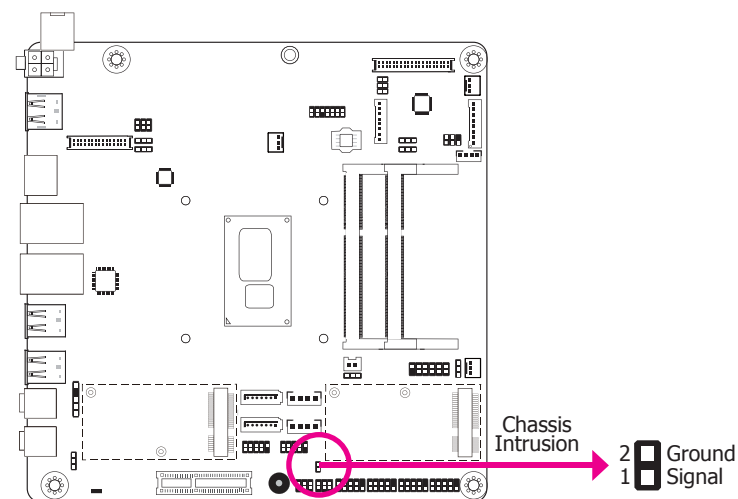


The board supports the chassis intrusion detection function. Connect the chassis intrusion sensor cable from the chassis to this connector. When the system's power is on and a chassis intrusion occurred, an alarm will sound. When the system's power is off and a chassis intrusion occurred, the alarm will sound only when the system restarts.

BIOS Setting

Configure the chassis intrusion detection function in the Advanced menu ("SIO NUVO-TON6106D" submenu) of the BIOS. Refer to the chapter 3 for more information.

eDP Connector (Optional)

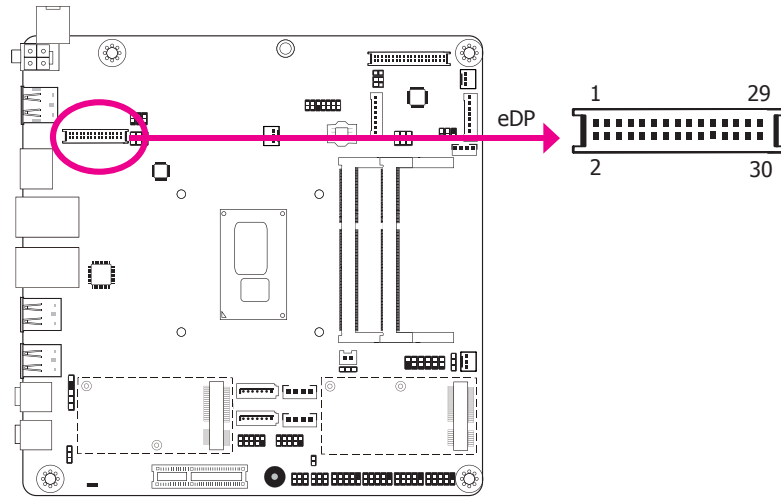


The eDP connector is an embedded displayport which has advanced power-saving features to connect a display device to transmit digital communication of audio and video signals. The table below indicates the pin functions of the eDP connector.

Jumper Settings

Refer to the "Jumper Settings" section in this chapter for settings relevant to the eDP panel.

Pins	Pin Assignment	Pins	Pin Assignment
1	GND	2	GND
3	eDP_Lane 0-	4	eDP_Lane 3-
5	eDP_Lane 0+	6	eDP_Lane 3+
7	GND	8	NC
9	eDP_Lane 1-	10	GND
11	eDP_Lane 1+	12	AUX-
13	GND	14	AUX+
15	eDP_Lane 2-	16	GND
17	eDP_Lane 2+	18	Hot Plug
19	+V_LCD	20	+V_LCD
21	GND	22	GND
23	Panel Backlight On/Off Control	24	Panel Inverter Brightness Voltage Control
25	Inverter GND	26	Inverter GND
27	3V3	28	Inverter PWR
29	Inverter PWR	30	Inverter PWR

LPC Connector

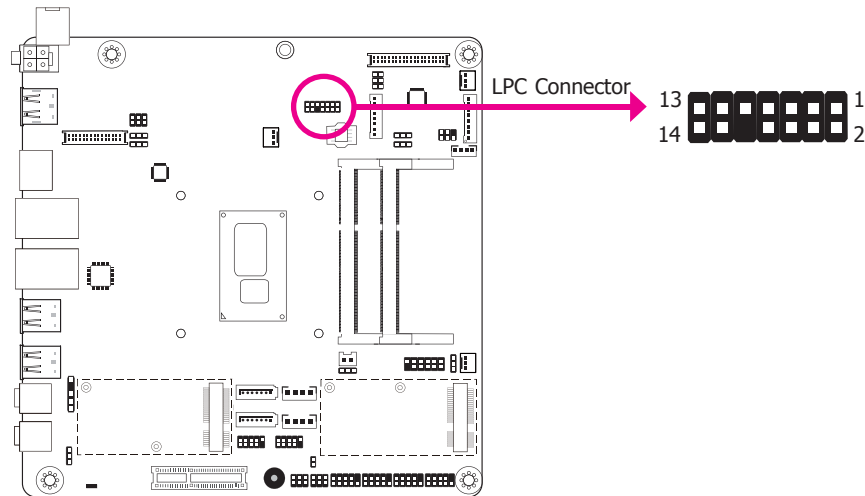

The Low Pin Count Interface was defined by Intel® Corporation to facilitate the industry's transition towards legacy free systems. It allows the integration of low-bandwidth legacy I/O components within the system, which are typically provided by a Super I/O controller. Furthermore, it can be used to interface firmware hubs, Trusted Platform Module (TPM) devices and embedded controller solutions. Data transfer on the LPC bus is implemented over a 4 bit serialized data interface, which uses a 24MHz LPC bus clock. For more information about LPC bus refer to the Intel® Low Pin Count Interface Specification Revision 1.1'. The table below indicates the pin functions of the LPC connector.

Pins	Pin Assignment	Pins	Pin Assignment
1	CLK_24M	2	LAD1
3	RST#	4	LAD0
5	FRAME#	6	VCC3
7	LAD3	8	GND
9	LAD2	10	-
11	SERIRQ	12	GND
13	5VSB	14	5V



Connecting the EXT-RS232/RS485 Card to the Motherboard

With DFI's proprietary technology, SU171/SU173 supports two extension modules for additional four COM ports. The EXT-RS232/RS485 card is connected to SU171/SU173 via the LPC connector. The illustrations below guide you how to connect the extension module to the motherboard.




Note:

The motherboard used in the following illustrations does not resemble the actual one. These illustrations are for reference only.

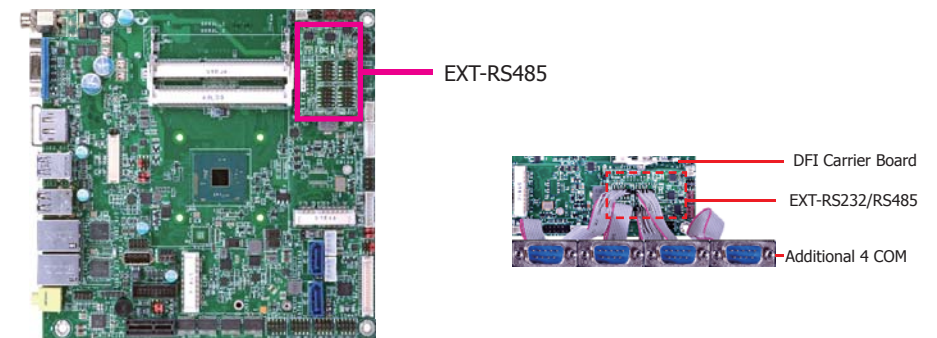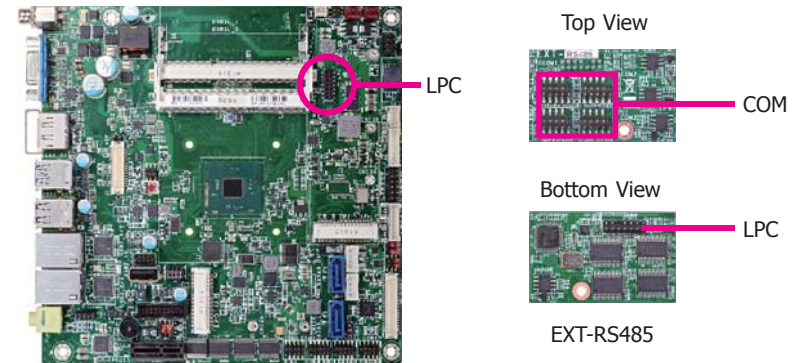


Standby Power LED

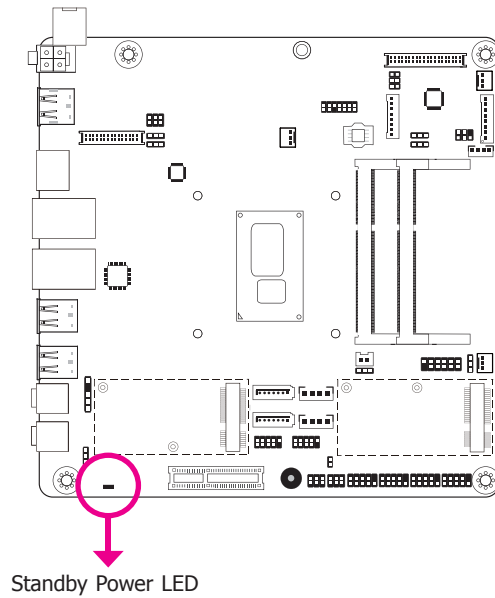

This LED will lit red when the system is in the standby mode. It indicates that there is power on the system board. Power-off the PC and then unplug the power cord prior to installing any devices. Failure to do so will cause severe damage to the motherboard and components.

Battery

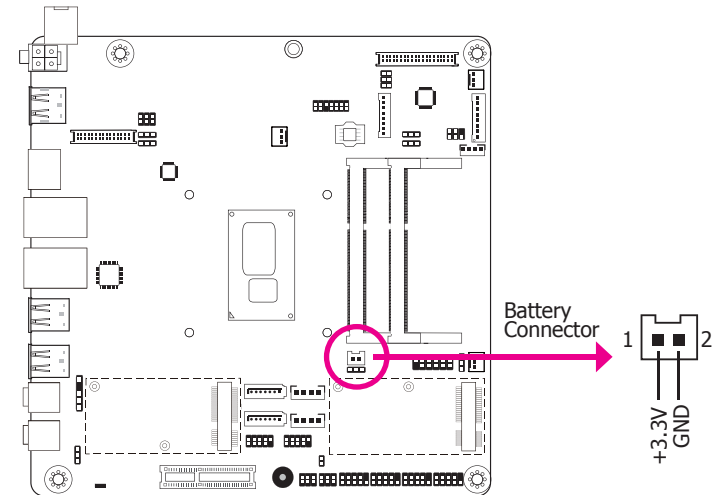

Connect to the battery connector

The lithium ion battery powers the real-time clock and CMOS memory. It is an auxiliary source of power when the main power is shut off.

Safety Measures

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to local ordinance.

Chapter 3 - BIOS Setup

Overview

The BIOS is a program that takes care of the basic level of communication between the CPU and peripherals. It contains codes for various advanced features found in this system board. The BIOS allows you to configure the system and save the configuration in a battery-backed CMOS so that the data retains even when the power is off. In general, the information stored in the CMOS RAM of the EEPROM will stay unchanged unless a configuration change has been made such as a hard drive replaced or a device added.

It is possible that the CMOS battery will fail causing CMOS data loss. If this happens, you need to install a new CMOS battery and reconfigure the BIOS settings.



Note:

The BIOS is constantly updated to improve the performance of the system board; therefore the BIOS screens in this chapter may not appear the same as the actual one. These screens are for reference purpose only.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering the BIOS Setup Utility

The BIOS Setup Utility can only be operated from the keyboard and all commands are key-board commands. The commands are available at the right side of each setup screen.

The BIOS Setup Utility does not require an operating system to run. After you power up the system, the BIOS message appears on the screen and the memory count begins. After the memory test, the message "Press DEL to run setup" will appear on the screen. If the message disappears before you respond, restart the system or press the "Reset" button. You may also restart the system by pressing the <Ctrl> <Alt> and keys simultaneously.

Legends

Keys	Function
Right and Left arrows	Moves the highlight left or right to select a menu.
Up and Down arrows	Moves the highlight up or down between submenu or fields.
<Esc>	Exit to the BIOS Setup Utility.
+/<F5> (plus key)	Scrolls forward through the values or options of the highlighted field.
-/<F6> (minus key)	Scrolls backward through the values or options of the highlighted field.
Tab	Select a field.
<F1>	Displays general help
<F9>	Optimized defaults
<F10>	Saves and resets the setup program.
<Enter>	Press <Enter> to enter the highlighted submenu.

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu

When "►" appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press <Enter>.

Insyde BIOS Setup Utility

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

InsydeH20 Setup Utility				Rev. 5.0
Main	Advanced	Security	Boot	Exit
Project Name		SU17x		This is the help for the hour, minute, second field. Valid range is from 0 to 23, 0 to 59, 0 to 59. INCREASE/REDUCE: +/-.
BIOS Version		61.13A		
Processor Type		Intel(R) Core(TM) i5-6300U CPU @ 2.40GHz		
CPUID:		0x406E3 (SKYLAKE ULX)		
CPU Speed:		2500 MHz		
CPU Stepping:		03 (D0/K0 Stepping)		
L1 Data Cache:		32 KB		
L1 Instruction Cache:		32 KB		
L2 Cache:		256 KB		
L3 Cache:		3072 KB		
Number of Processors:		2 Core(s) / 4 Thread(s)		
Microcode Rev:		00000057		
Total Memory		4096 MB		
System Memory Speed		1600 MHz		
SODIMM 0		[Not Installed]		
SODIMM 1		4096 MB		
PCH Rev / SKU		21 (C1 Stepping) / SKL PCH-LP (U) Premium SKU		
Intel ME Version / SKU		11.0.0. 1180 / CORPORATE		
System Time		[13:13:03]		
System Date		[01/27/2016]		
F1 Help	↑/↓ Select Item	F5/F6 Change Values	F9 Setup Defaults	
Esc Exit	←/→ Select Item	Enter Select ► SubMenu	F10 Save and Exit	

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

System Date

The date format is <month>, <date>, <year>. Month displays the month, from 01 to 12. Date displays the date, from 01 to 31. Year displays the year, from 2000 to 2099.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.




Important:

Setting incorrect field values may cause the system to malfunction.

InsydeH20 Setup Utility				Rev. 5.0
Main	Advanced	Security	Boot	Exit
▶ACPI Configuration ▶CPU Configuration ▶Video Configuration ▶Audio Configuration ▶SATA Configuration ▶USB Configuration ▶PCI Express Configuration ▶ME Configuration ▶MEBX Configuration ▶Active Management Technology Support ▶SIO NUVOTON6106D		ACPI Configuration Setting		
F1 Help	↑/↓ Select Item	F5/F6 Change Values	F9 Setup Defaults	
Esc Exit	←/→ Select Item	Enter Select ► SubMenu	F10 Save and Exit	

ACPI Configuration

This section is used to configure the system ACPI parameters.

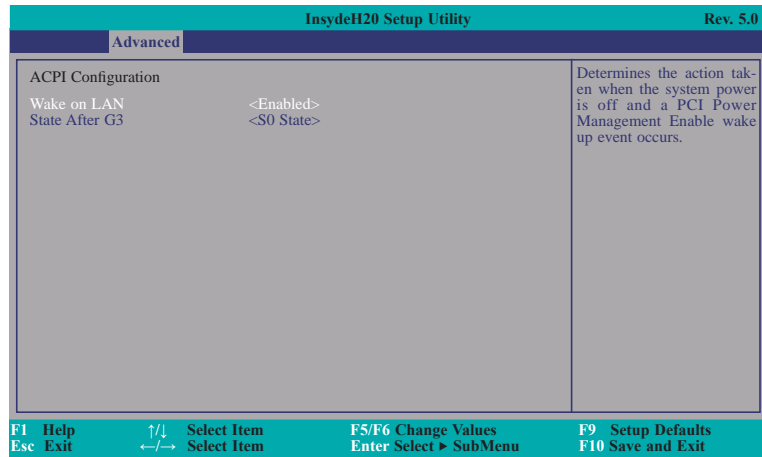

Wake on LAN

This field use to enable or disable the LAN signal to wake up the system.

State After G3


This field is to specify what state to go when power is re-applied after a power failure (G3 state).

S0 State The system working state.

S5 State Off, except for trickle current to devices such as the power button.

CPU Configuration

This section is used to configure the CPU.

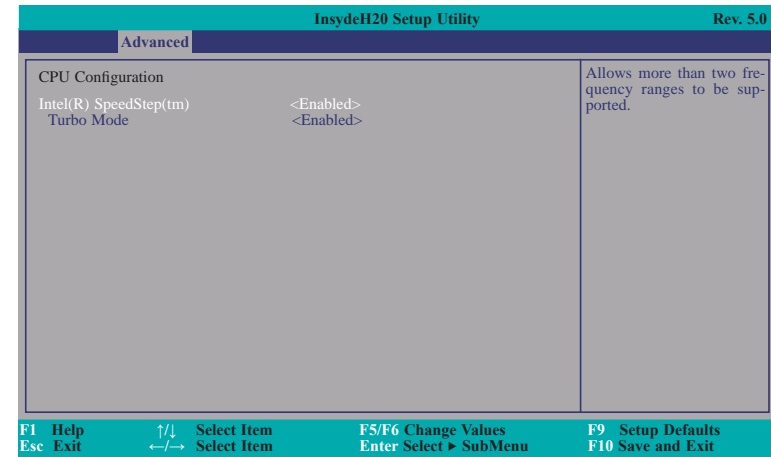

Intel(R) SpeedStep(tm)


This field is used to enable or disable the Intel Enhanced SpeedStep Technology.

Turbo Mode

Enable or disable the turbo mode.


Video Configuration

This section configures the video settings.

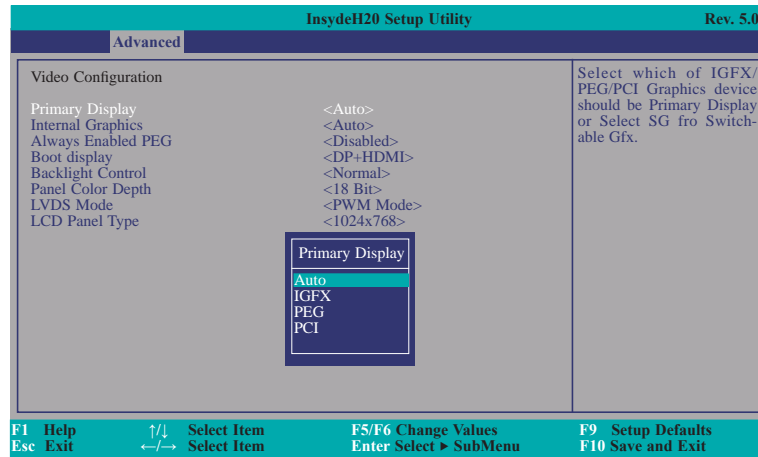

Primary Display

Set the initial priority.

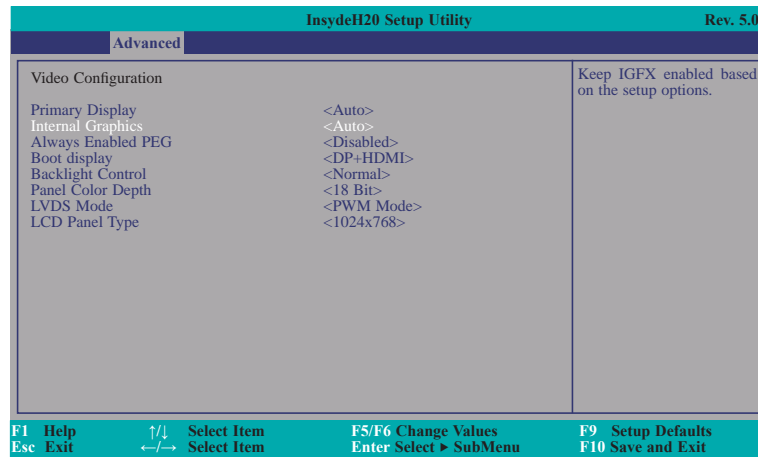


Internal Graphics

Keep IGFX enabled or disabled based on the setup options.

Always Enabled PEG

Enable or disable the PEG function.

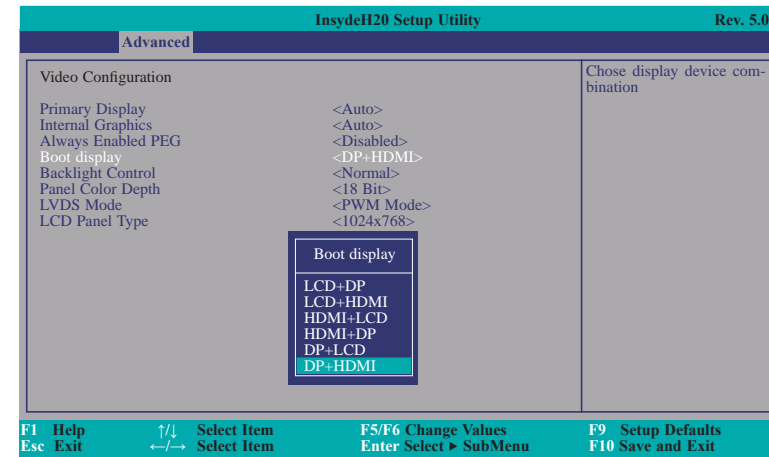

Boot display

Set the display device combination.

Backlight Control

Select the Normal/Inverted.

Panel Color Depth

Select the LFP panel color depth: 18 bit, 24 bit, 36 bit or 48 bit.

LVDS Mode

Select the PWM/DC Mode



Note:

In order to control "Primary Display" & "Boot Display", you need to go to Boot tab and select different "Boot Type" (Boot Section, Page 42)


Boot Type : Legacy Boot Type -> Hide Primary Display & Show Boot Display

Boot Type : UEFI Boot Type -> Show Primary Display & Hide Boot Display

Boot Type : Dual Boot Type -> Show Primary Display & Show Boot Display


Audio Configuration

This section is used to configure the audio settings.

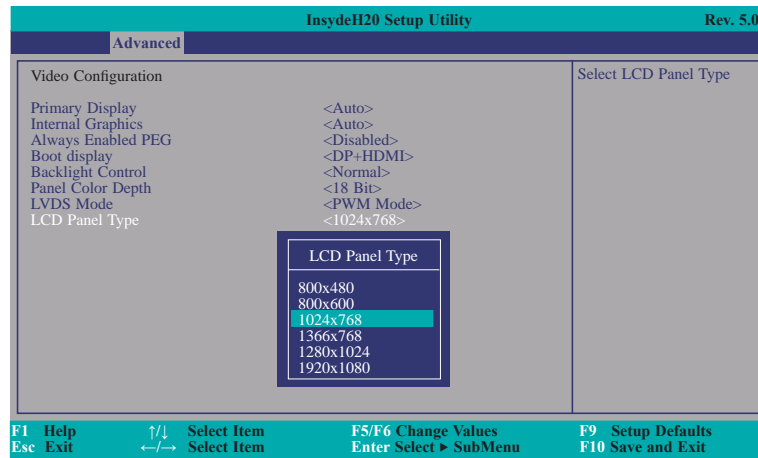

LCD Panel Type

Select the LCD panel type.

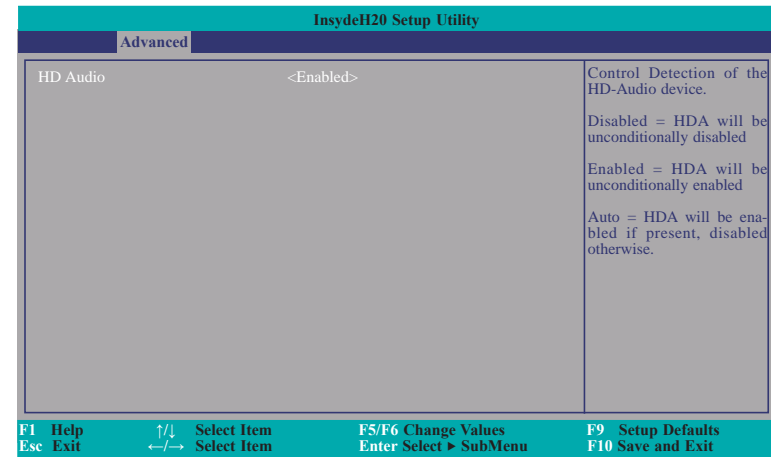

HD Audio

Control the detection of the HD-Audio device.

Disabled

HDA will be unconditionally disabled.

Enabled


HDA will be unconditionally enabled.

Auto

HDA will be enabled if present, disabled otherwise.

SATA Configuration

This section is designed to select the SATA controller and the type of hard disk drive which are installed in your system unit.

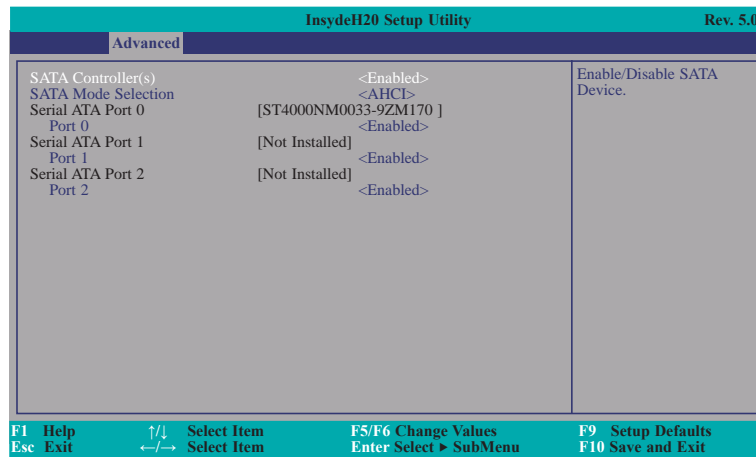

SATA Controller(s)

This field is used to enable or disable Serial ATA devices.

SATA Mode Selection

The mode selection determines how the SATA controller(s) operates.

AHCI Mode

This option allows the Serial ATA devices to use AHCI (Advanced Host Controller Interface).

RAID Mode


This option allows you to create RAID or Intel Matrix Storage configuration on Serial ATA devices.

Serial ATA Port 0,1 and 2

This field is used to enable or disable the serial ATA port.

USB Configuration

This section is used to configure the parameters of the USB device.

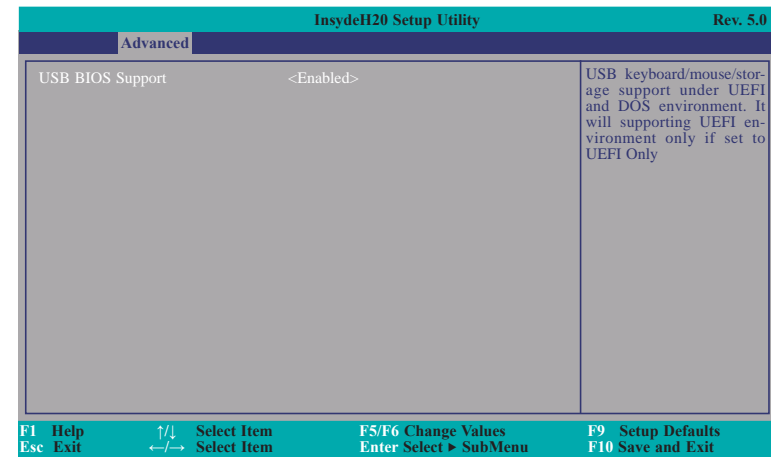

USB BIOS Support

Disabled

Disable USB keyboard/mouse/storage support under UEFI and DOS environment.

Enabled




Enable USB keyboard/mouse/storage support under UEFI and DOS environment.

UEFI Only

Enable USB keyboard/mouse/storage support under UEFI environment.

PCI Express Configuration

This section configures settings relevant to PCI Express root ports.

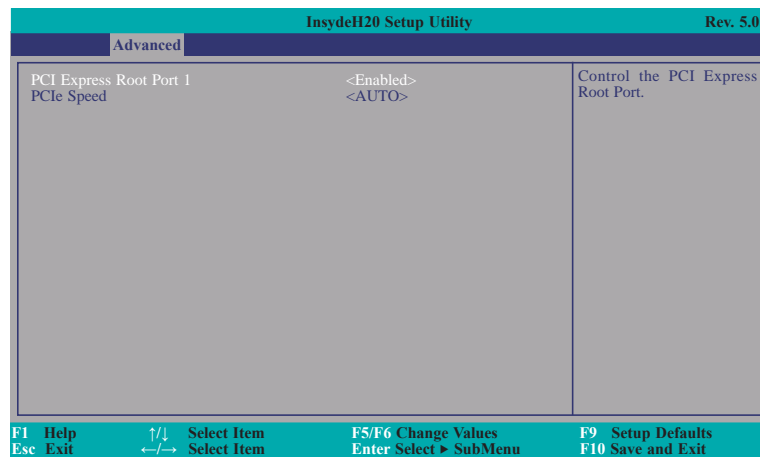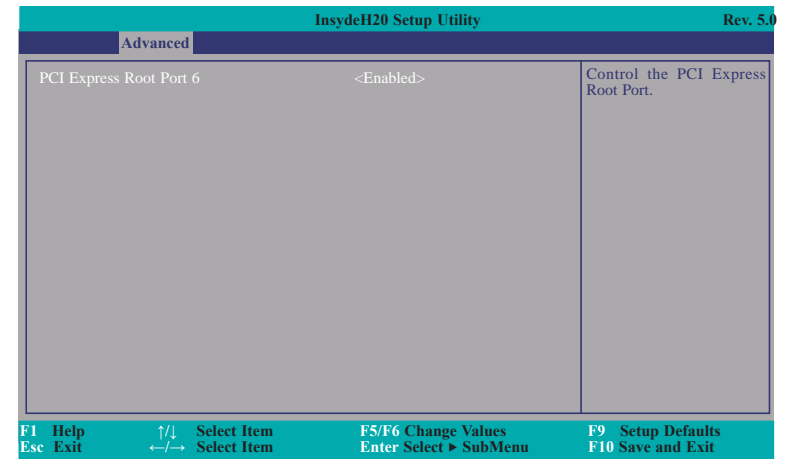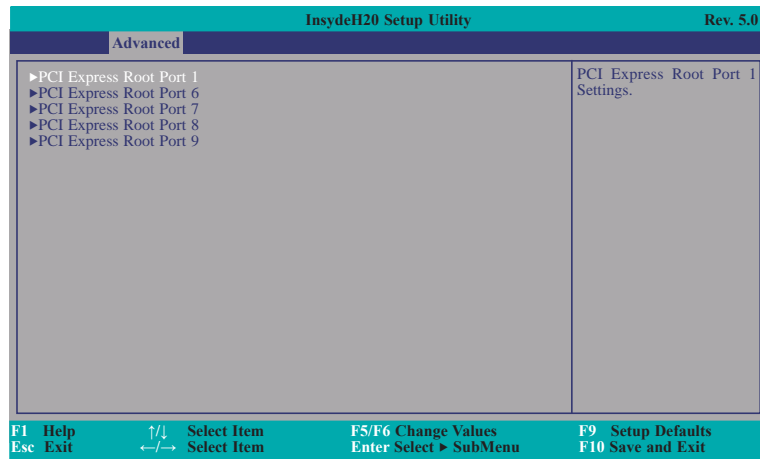

PCI Express Root Port


This field is used to enable or disable the PCI Express Root Port.

PCIe Speed

Select the speed of the PCI Express Root Port: Auto, Gen1, Gen2 or Gen3.

ME Configuration

This section configures settings relevant to flash ME region.

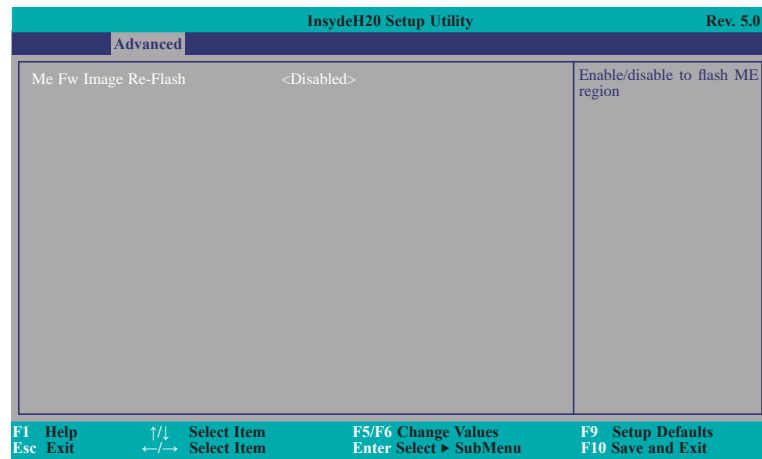

Me Fw Image Re-Flash


This field is used to enable or disable the flash ME region.

MEBX Configuration

This section configures MEBX setting. Please refer to **Chapter 6** for more information.

Active Management Technology Support

The section allows users to enable or disable the Intel® Active Management Technology (Intel® AMT) BIOS extension. Refer to chapter 6 for more information.

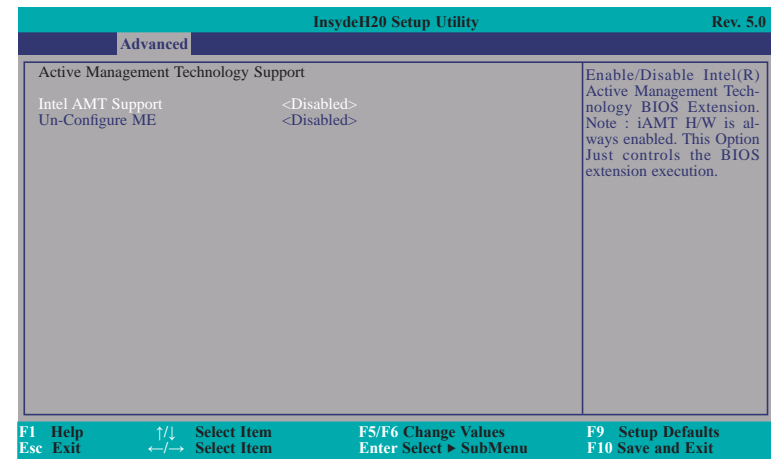

SIO NUVOTON6106D

This section configures the system super I/O chip parameters.

InsydeH20 Setup Utility			Rev. 5.0
Advanced			
SYS Smart Fan Control	<Enable>	Enable/Disable Smart Fan	
Boundary 1	[30]		
Boundary 2	[40]		
Boundary 3	[50]		
Boundary 4	[60]		
Fan Speed Count 1	[30]		
Fan Speed Count 2	[40]		
Fan Speed Count 3	[50]		
Fan Speed Count 4	[75]		
CPU Smart Fan Control	<Enable>		
Boundary 1	[30]		
Boundary 2	[40]		
Boundary 3	[50]		
Boundary 4	[60]		
Fan Speed Count 1	[30]		
Fan Speed Count 2	[40]		
Fan Speed Count 3	[50]		
Fan Speed Count 4	[75]		
SYS Smart Fan 2 Control	<Enable>		
Boundary 1	[30]		
Boundary 2	[40]		
Boundary 3	[50]		
Boundary 4	[60]		

F1 Help ↑/↓ Select Item F5/F6 Change Values F9 Setup Defaults
Esc Exit ←/→ Select Item Enter Select ► SubMenu F10 Save and Exit

InsydeH20 Setup Utility			Rev. 5.0
Advanced			
SYS Smart Fan Control	<Disable>	Enable/Disable Smart Fan	
Fix Fan Speed Count	[50]		
CPU Smart Fan Control	<Disable>		
Fix Fan Speed Count	[50]		
SYS Smart Fan 2 Control	<Disable>		
Fix Fan Speed Count	[50]		
COM Port 1	<Enable>		
Base I/O Address	<3F8>		
Interrupt	<IRQ4>		
Type	<RS232>		
COM Port 2	<Enable>		
Base I/O Address	<2F8>		
Interrupt	<IRQ3>		
Type	<RS232>		
COM Port 3	<Enable>		
Base I/O Address	<3E8>		
Interrupt	<IRQ4>		
COM Port 4	<Enable>		
Base I/O Address	<2E8>		
Interrupt	<IRQ3>		
WDT	<Disable>		
Case Open	<Disable>		
AC Power Loss	<Always off>		
►PC Health Status			

F1 Help ↑/↓ Select Item F5/F6 Change Values F9 Setup Defaults
Esc Exit ←/→ Select Item Enter Select ► SubMenu F10 Save and Exit

**Note:**

SYS Smart Fan, Fan2 and CPU Smart Fan Control can be switched to <Disable>. When they are disabled, it will enable "Fix Fan Speed Count".

SYS/CPU Smart Fan/Fan 2 Control


Enable or disable the system/CPU smart fan/fan 2.

Boundary 1 to Boundary 4

Set the boundary temperature. The range is from 0-127°C.

Fan Speed Count 1 to Fan Speed Count 4

Set the fan speed. The range is from 1-100%.

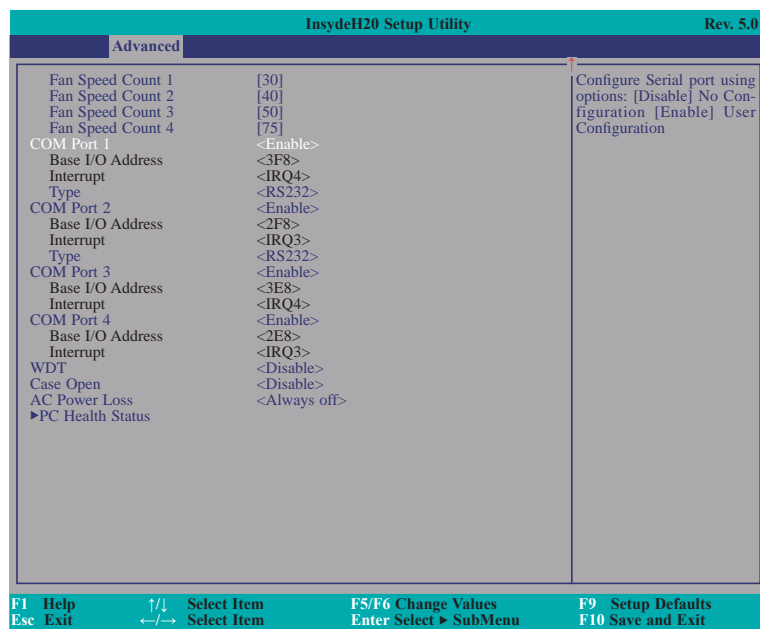

COM Port 1 to COM Port 4


Configure the settings to use the serial port.

Disable No configuration

Enable User configuration

Type

Choose RS232/RS485/RS422 (Peer-to-Peer) for the serial port type for COM port 1 and COM port 2.

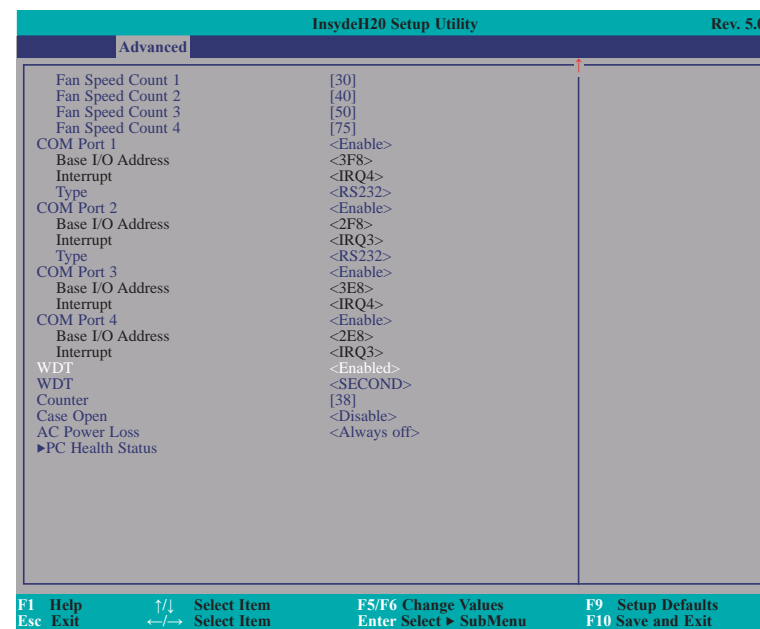

WDT

Enable or disable the watchdog function. A counter will appear if you select to enable WDT. Input any value between 1 to 255.

Case Open

Enable or disable the case open detection function.

AC Power Loss

Set the AC power loss always off/on.

PC Health Status

This section only displays the PC health status.

InsydeH20 Setup Utility			Rev. 5.0
Advanced			
PC Health Status			
Voltage			
VCORE	0.848 V		
5V	5.056 V		
+12V	11.880 V		
VDDQ	1.376 V		
VBAT	3.072 V		
3VSB	3.328 V		
Temperature			
System (°C/°F)	28.0 C/ 82.4 F		
CPU (°C/°F)	66.5 C/ 151.7 F		
Fan Speed			
SYS FAN	0 RPM		
CPU FAN	2054 RPM		
SYS FAN2	0 RPM		
F1 Help ↑/↓ Select Item F5/F6 Change Values F9 Setup Defaults Esc Exit ←/→ Select Item Enter Select ► SubMenu F10 Save and Exit			

Security

InsydeH20 Setup Utility			Rev. 5.0
Main	Advanced	Security	Boot Exit
Current TPM Device		<TPM 2.0 (DTPM)>	When Hidden, don't ex- poses TPM to 0
TPM State		Enabled, Owned	
TPM Availability		<Available>	
TPM Operation		<No Operation>	
Clear TPM		[]	
Supervisor Password		Not installed	
Set Supervisor Password			
Set All Hdd Password			
Set All Master Hdd Password			
►Storage Password Setup Page			
		TPM Availability Available Hidden	
F1 Help ↑/↓ Select Item F5/F6 Change Values F9 Setup Defaults Esc Exit ←/→ Select Item Enter Select ► SubMenu F10 Save and Exit			

TPM Availability

Set the TPM availability.

TPM Operation

Enable or disable the storage and endorsement hierarchy. This option will automatically return to No-Operation.

Clear TPM

Remove all TPM context associated with a specific owner.

Set Supervisor Password

Set the supervisor's password and the length of the password must be greater than one character.

Set All Hdd Password

Set all HDD password and suggest the length of password greater than one character. This item can be displayed when any security mode of HDD is not Lock.

Set All Master Hdd Password

Set all master HDD password and suggest the length of password greater than one character. This item can be displayed when any security mode of HDD is not Lock.

Storage Password Setup Page

InsydeH20 Setup Utility			Rev. 5.0
Main	Advanced	Security	Boot Exit
Current TPM Device <TPM 2.0 (DTPM)> TPM State Enabled, Owned TPM Availability <Available> TPM Operation <No Operation> Clear TPM [] Supervisor Password Not installed Set Supervisor Password Set All Hdd Password Set All Master Hdd Password ▶Storage Password Setup Page		Storage Password Setup Page	
F1 Help Esc Exit	↑/↓ Select Item ←/→ Select Item	F5/F6 Change Values Enter Select ▶ SubMenu	F9 Setup Defaults F10 Save and Exit

Storage Password Setup Page

This option allows you to set up storage password.

InsydeH20 Setup Utility			Rev. 5.0
Main	Advanced	Security	Boot Exit
Storage Password Setup ▶ST3160318AS ↑ and ↓ to change option. ENTER to select an option. ESC to exit.		Storage Password Setup Page	
F1 Help Esc Exit	↑/↓ Select Item ←/→ Select Item	F5/F6 Change Values Enter Select ▶ SubMenu	F9 Setup Defaults F10 Save and Exit

ST3160318AS (Device Name)

This option allows you to go to Storage Password List Help.

InsydeH20 Setup Utility			Rev. 5.0
Main	Advanced	Security	Boot Exit
Device Name: [ST3160318AS] Security Mode: No Accessed Set Storage Password Set Master Hdd Password			
F1 Help Esc Exit	↑/↓ Select Item ←/→ Select Item	F5/F6 Change Values Enter Select ▶ SubMenu	F9 Setup Defaults F10 Save and Exit

Security Mode Description

Lock: HDD security status is enable and lock.

Unlock: HDD security status is enable and lock.

Change: HDD security status is unlock and user changes to the new password.

Disable: Remove HDD password from device.

No Access: HDD Security status is not enabled when entering SCU.

Set Storage Password

Set all HDD password and suggest the length of password greater than one character.
 How to clear HDD password: only press "Enter" when set new password.

Set Master Hdd Password


Set master HDD password and suggest the length of password greater than one character.

When security mode is Lock, input master HDD password to unlock HDD.

Master HDD password is valid when HDD password is set.

Only pressing "Enter" would clear HDD password and make HDD security disable when set new master HDD password.

Boot

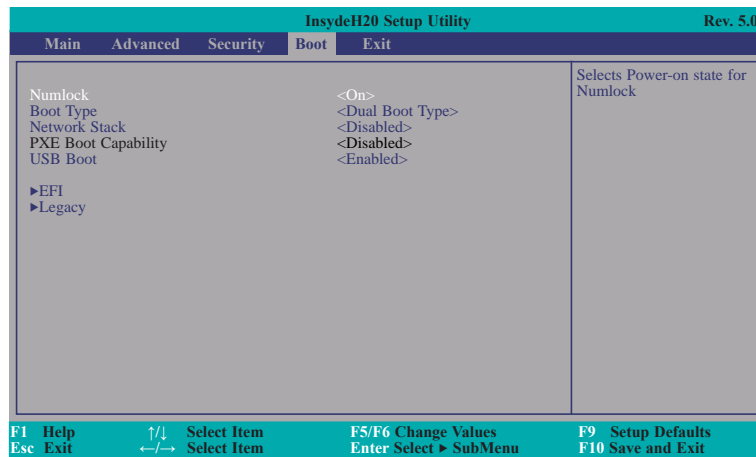

Numlock

Select the power-on state for numlock.

Boot Type

Select the boot type. The options are Dual Boot Type, Legacy Boot Type or UEFI Boot Type.

If you select "Dual Boot" or "UEFI Boot", the "Network Stack", PXE Boot capability" and "USB Boot" will show up.

If you select "Legacy Boot", "PXE Boot to LAN" and "USB Boot" will show up.

Network Stack

This field is used to enable or disable network stack.

PXE Boot capability

Disabled : Support Network Stack

UEFI PXE : IPv4/IPv6


Legacy : Legacy PXE OPROM only

PXE Boot to LAN

Disable or enable PXE boot to LAN.

USB Boot

Enable or disable the booting to USB boot devices.

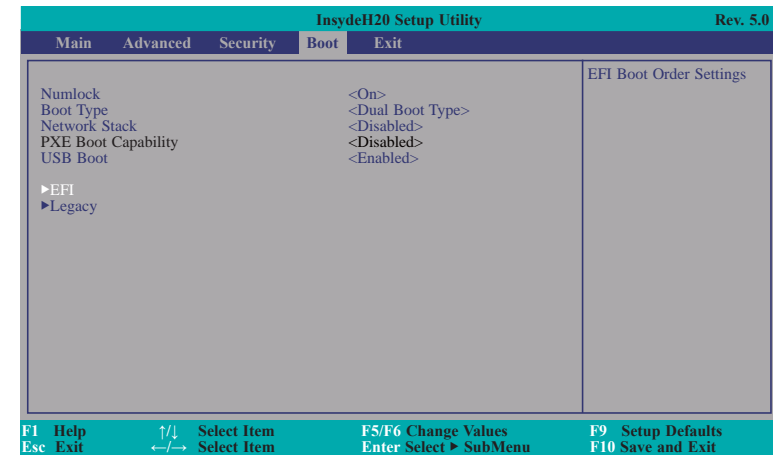


EFI

This section is used to set EFI boot order.

Legacy

This section is used to set legacy boot order.

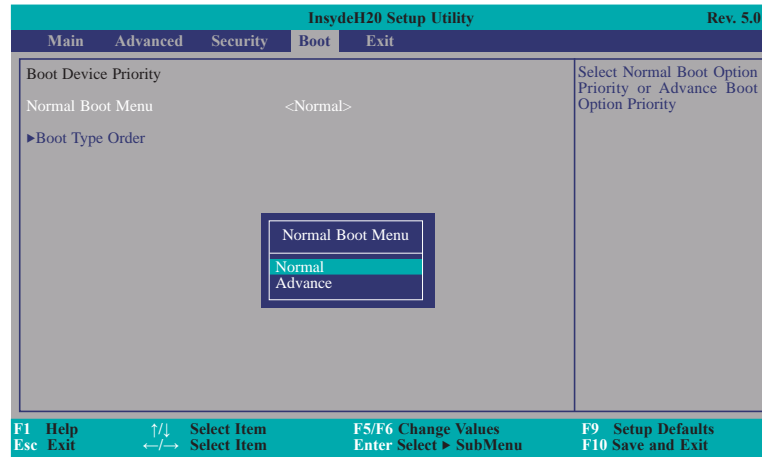


Normal Boot Menu

Normal

Based on the boot normal priority, it determines the EFI device first or the legacy device first.


Advance

All boot devices follow the user's selection sequence. Use + and - keys to arrange the priority of the listed boot devices.

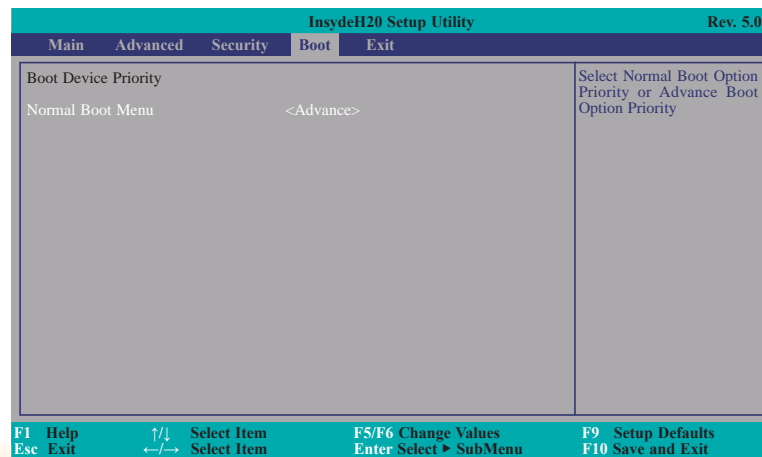


Boot Type Order

Use + and - keys to arrange the sequence of storage devices that the system's hardware checks for the operating system's boot files. The first device in the order list has the first boot priority. For example, to boot from a floppy drive instead of a hard drive, place the floppy drive ahead of the hard drive in priority.

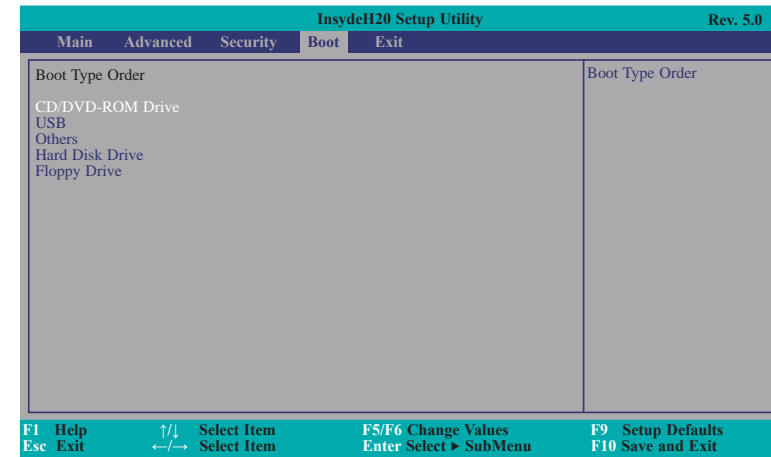

Exit

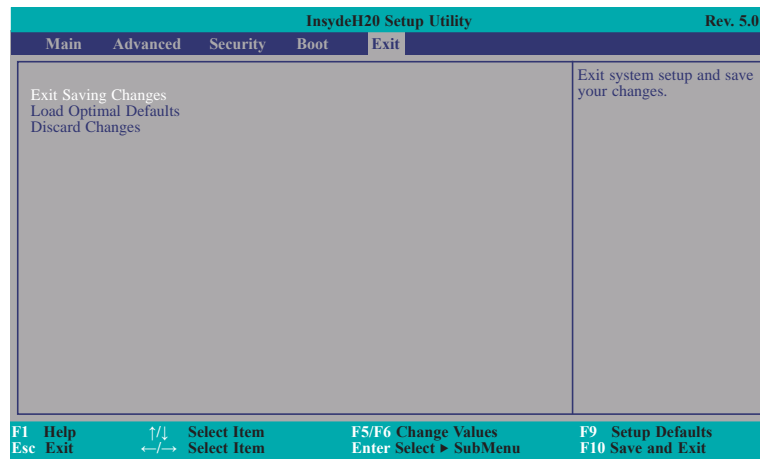

Exit Saving Changes

Select this field and then press <Enter> to exit the system setup and save your changes.

Load Optimal Defaults

Select this field and then press <Enter> to load optimal defaults.


Discard Changes

Select this field and then press <Enter> to exit the system setup without saving your changes.

Updating the BIOS

To update the BIOS, you will need the new BIOS file and a flash utility. Please contact technical support or your sales representative for the files and specific instructions about how to update BIOS with the flash utility.

When you download the given BIOS file, you may find a BIOS flash utility attached with the BIOS file. This is the utility for performing BIOS updating procedure. For your convenience, we will also provide you with an auto-execution file in the BIOS file downloaded. This RS@32 -execution file will bring you directly to the flash utility menu soon after system boots up and finishes running the boot files in your boot disk.

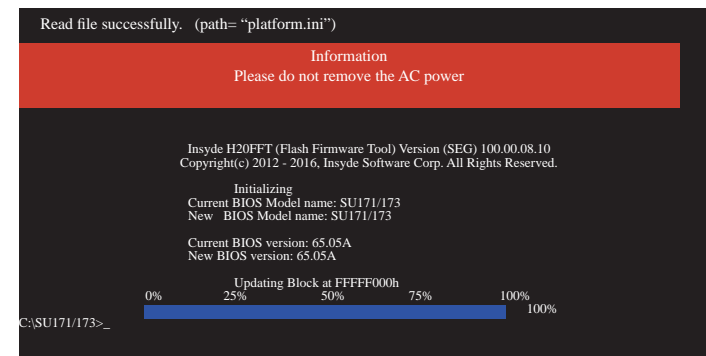

Notice: BIOS SPI ROM

1. The Intel® Management Engine has already been integrated into this system board. Due to the safety concerns, the BIOS (SPI ROM) chip cannot be removed from this system board and used on another system board of the same model.
2. The BIOS (SPI ROM) on this system board must be the original equipment from the factory and cannot be used to replace one which has been utilized on other system boards.
3. If you do not follow the methods above, the Intel® Management Engine will not be updated and will cease to be effective.

**Note:**



- a. You can take advantage of flash tools to update the default configuration of the BIOS (SPI ROM) to the latest version anytime.
- b. When the BIOS IC needs to be replaced, you have to populate it properly onto the system board after the EEPROM programmer has been burned and follow the technical person's instructions to confirm that the MAC address should be burned or not.

Chapter 4 - Supported Software



The DVD that came with the system board contains drivers, utilities and software applications required to enhance the performance of the system board.

Insert the DVD into a DVD-ROM drive. The autorun screen (Mainboard Utility DVD) will appear. If after inserting the DVD, "Autorun" did not automatically start (which is, the Mainboard Utility DVD screen did not appear), please go directly to the root directory of the DVD and double-click "Setup".



For Windows 10

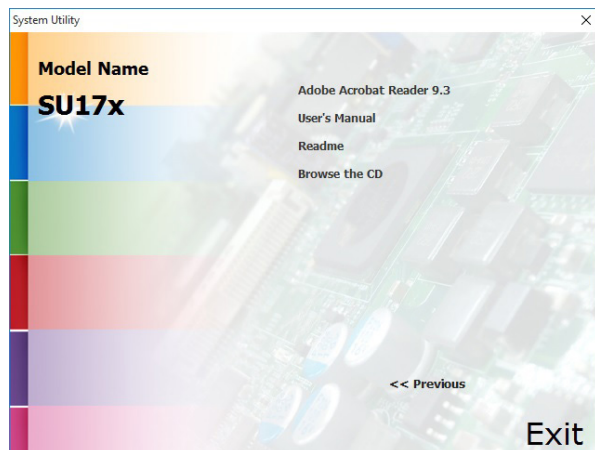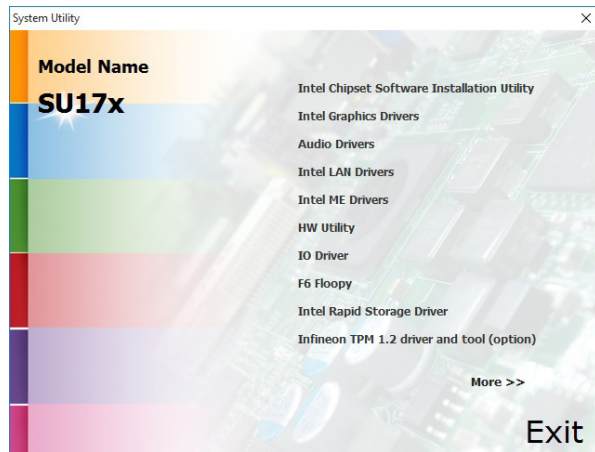

For Windows 8.1

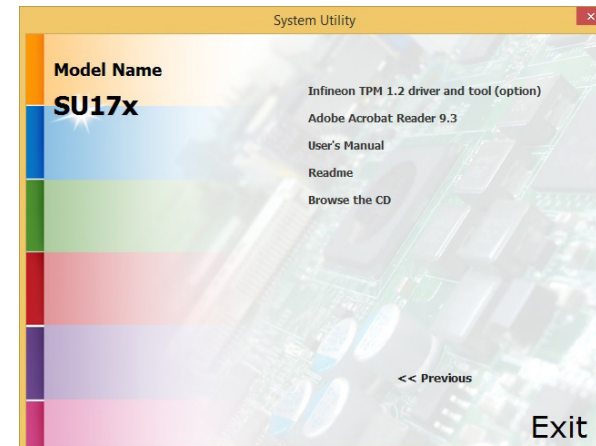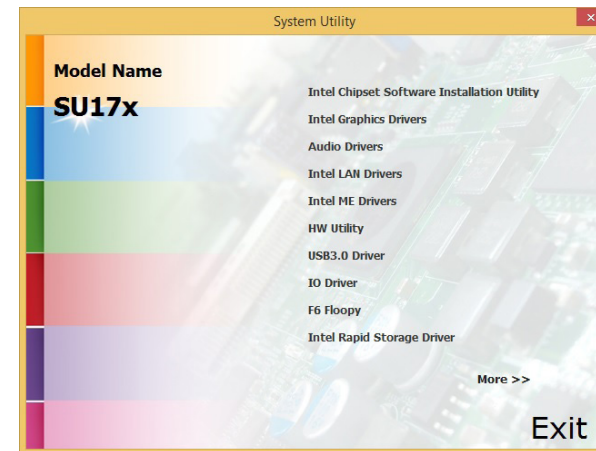

For Windows 7

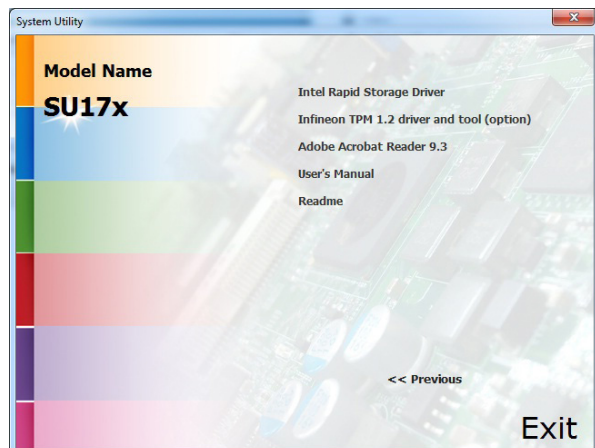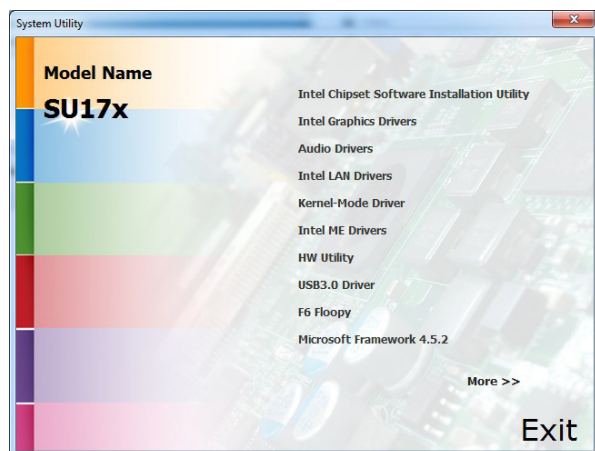

Intel Chipset Software Installation Utility

The Intel Chipset Software Installation Utility is used for updating Windows® INF files so that the Intel chipset can be recognized and configured properly in the system.

To install the utility, click "Intel Chipset Software Installation Utility" on the main menu.


1. Setup is ready to install the utility. Click Next.



2. Read the license agreement then click Yes.



- Go through the readme document for more installation tips then click Next.

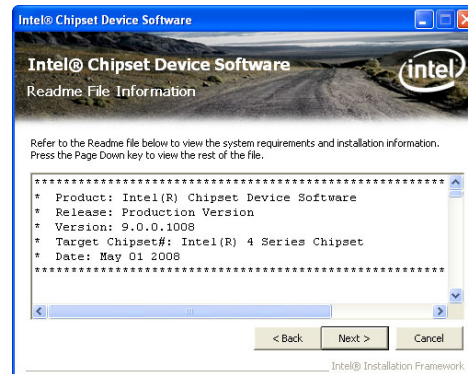

- Click Finish to exit setup.



Intel Graphics Drivers


To install the driver, click "Intel Graphics Drivers" on the main menu.

- Setup is now ready to install the graphics driver. Click Next.




By default, the "Automatically run WinSAT and enable the Windows Aero desktop theme" is enabled. With this enabled, after installing the graphics driver and the system rebooted, the screen will turn blank for 1 to 2 minutes (while WinSAT is running) before the Windows Vista desktop appears. The "blank screen" period is the time Windows is testing the graphics performance.


- Read the license agreement then click Yes.

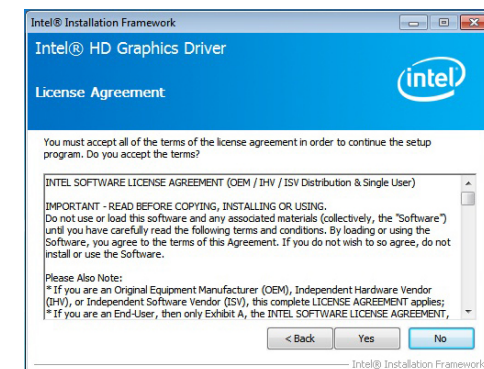

- Go through the readme document for system requirements and installation tips then click Next.

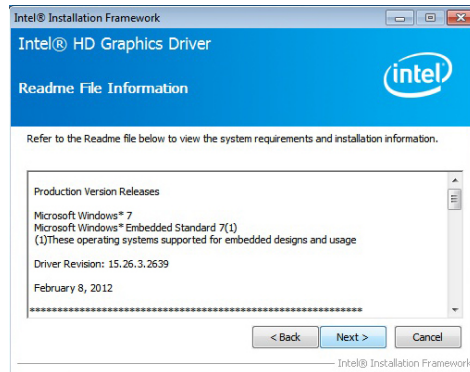


- Setup is now installing the driver. Click Next to continue.

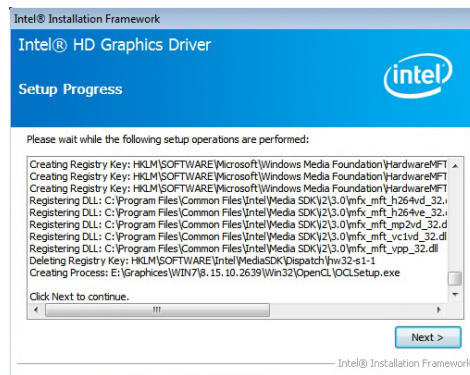

- Click "Yes, I want to restart this computer now" then click Finish.


Restarting the system will allow the new software installation to take effect.

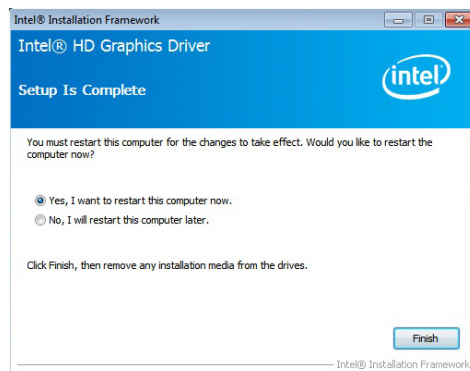

Audio Drivers


To install the driver, click "Audio Drivers" on the main menu.

- Setup is ready to install the driver. Click Next.

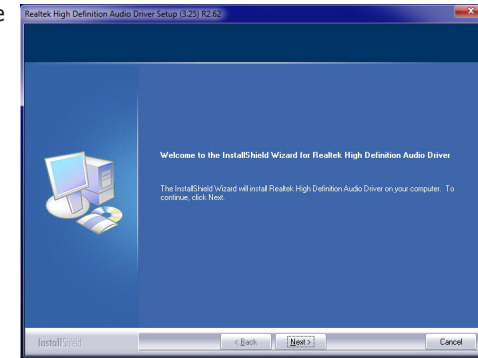

- Click "Yes, I want to restart my computer now" then click Finish.


Restarting the system will allow the new software installation to take effect.

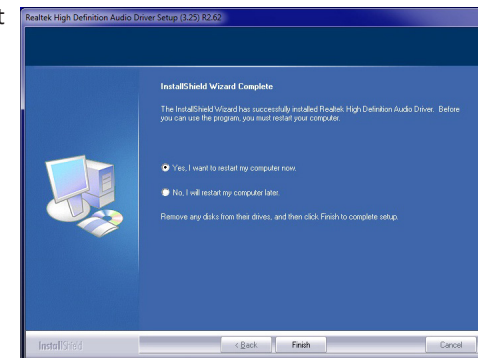


Intel LAN Drivers

To install the driver, click "Intel LAN Drivers" on the main menu.


1. Setup is ready to install the driver. Click Next.

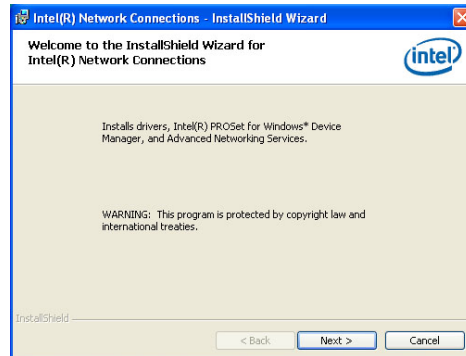


2. Click "I accept the terms in the license agreement" then click "Next".

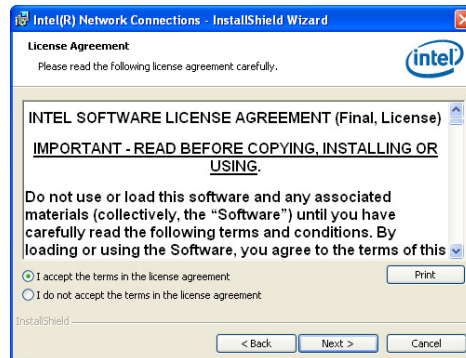


3. Select the program features you want installed then click Next.

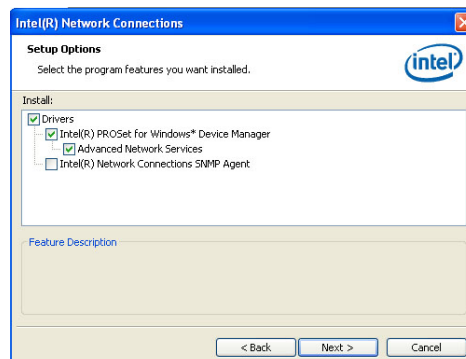

4. Click Install to begin the installation.

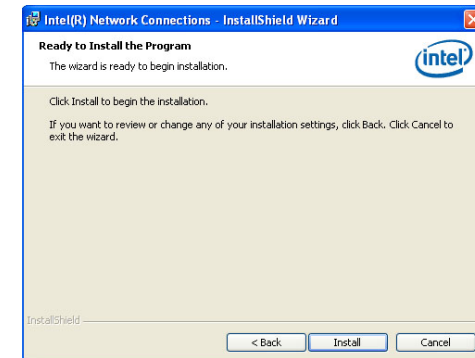


5. After completing installation, click Finish.

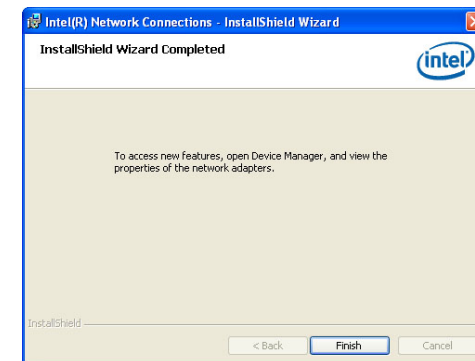


Kernel Mode Driver (For Windows 7 only)

To install the driver, click "Kernel Mode Driver Framework" on the main menu.


1. Click "Yes" to install the update.

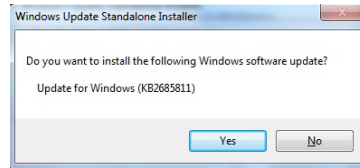

2. The update is installed now.

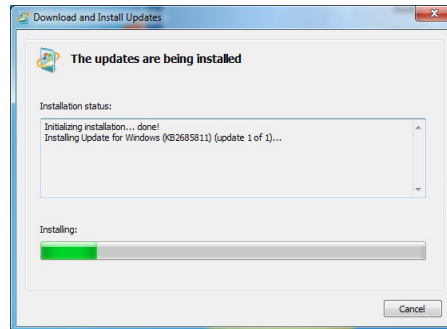


3. Click "Restart Now" to restart your computer when the installation is complete.

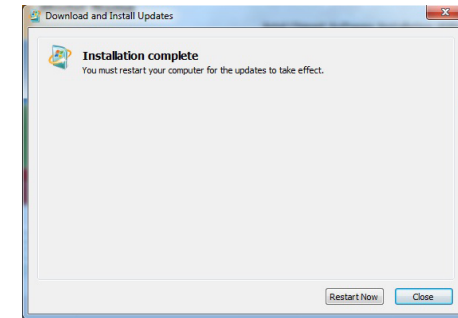


Intel Management Engine Drivers

To install the driver, click "Intel Management Engine Drivers" on the main menu.


1. Setup is ready to install the driver. Click Next.

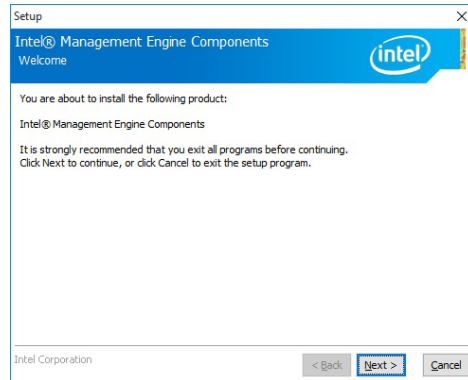


2. Read the license agreement then click Next.

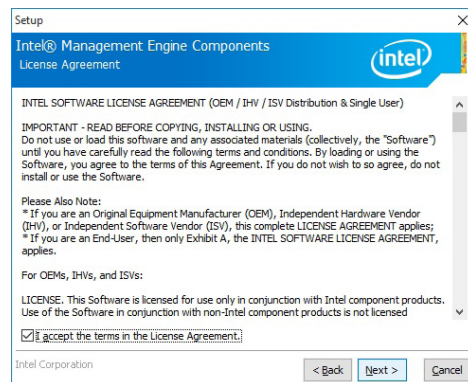


3. Setup is currently installing the driver. After installation has completed, click Next.

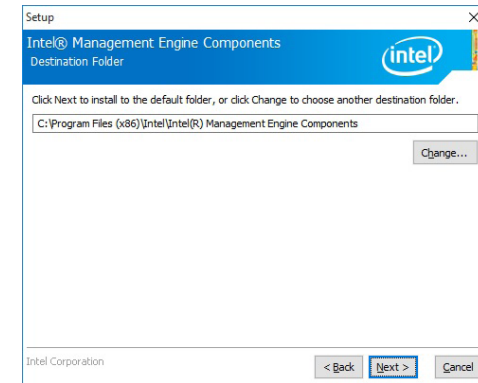

4. Please wait while the product is being installed.

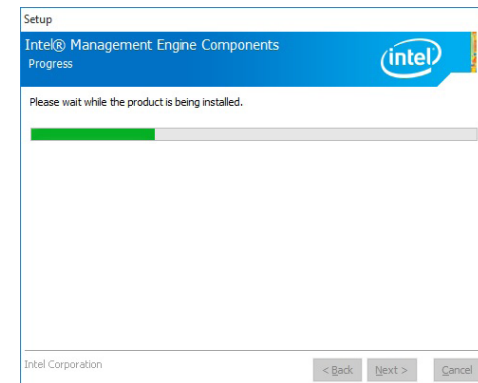

5. After completing installation, click Finish.

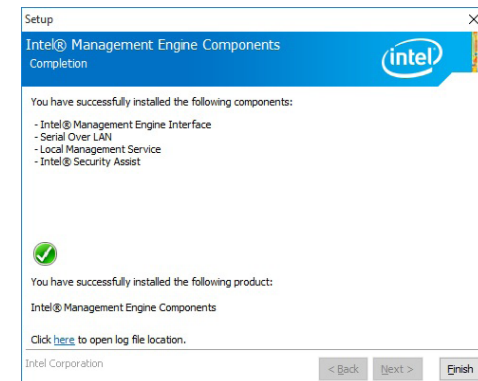

HW Utility

HW Utility provides information about the board, Watchdog, and DIO. To access the utility, click "HW Utility" on the main menu.



Note:

If you are using Windows 7 or later versions, it needs administrator privilege to be able to install/execute the utility.


1. Setup is ready to install the HW Utility driver. Click "Next".




2. Click "I accept the terms in the license agreement" then click "Next".

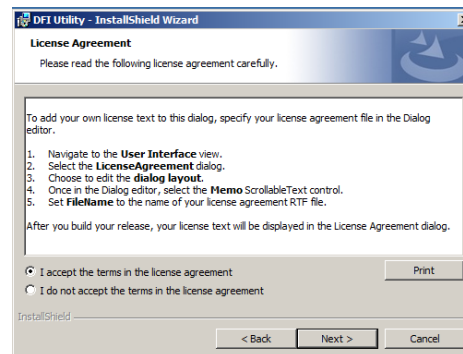

3. Click "Install" to begin the installation.

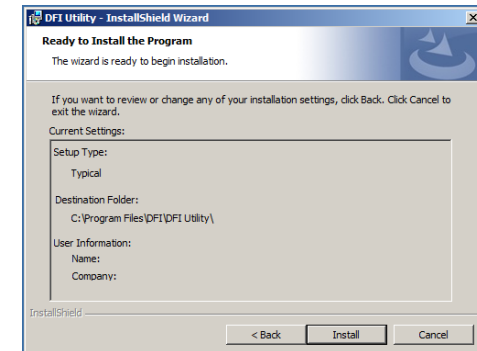

4. After completing installation, click "Finish".

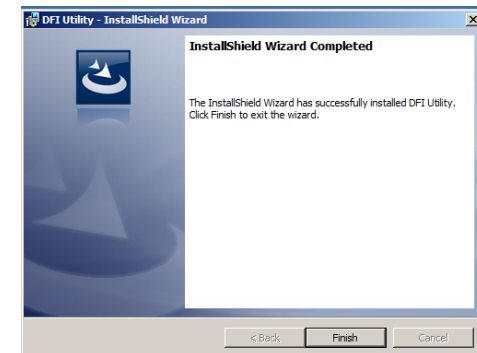

The HW Utility icon will appear on the desktop. Double-click the icon to open the utility.




Information



HW Health Set



HW Health

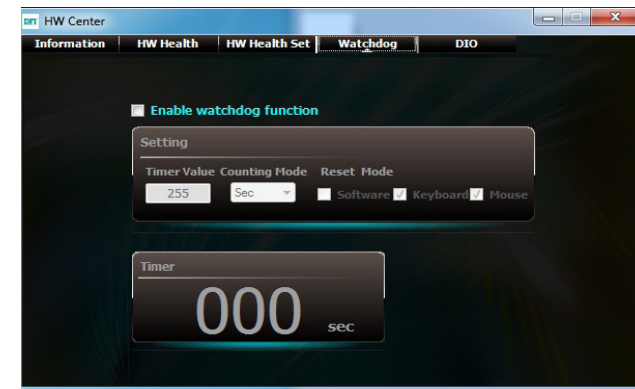


WatchDog

Intel USB 3.0 Drivers (For Windows 7 and Windows 8.1)



To install the driver, click "Intel USB 3.0 Driver" on the main menu.

1. Setup is ready to install the driver.
Click Next.

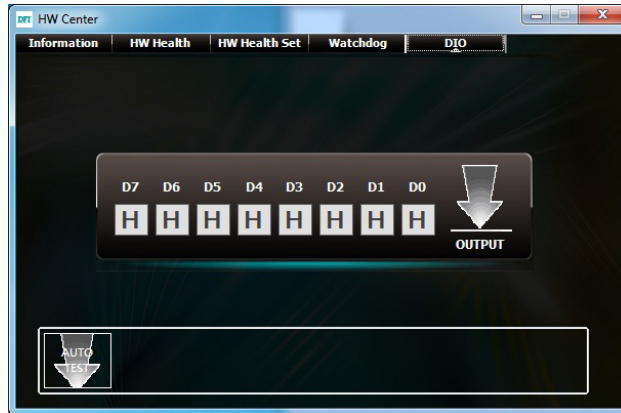


DIO


2. Read the license agreement then click Yes.

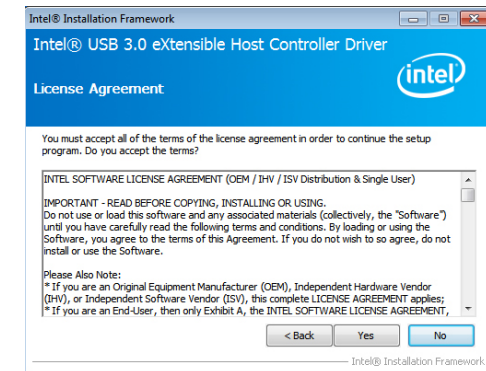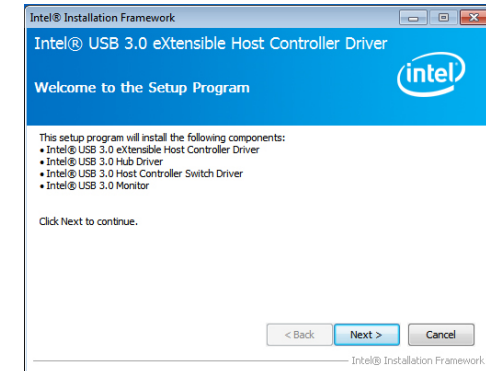

- Go through the readme document for more installation tips then click Next.

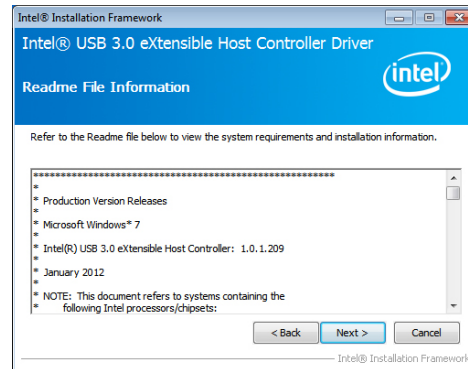

- Setup is currently installing the driver. After installation has completed, click Next.

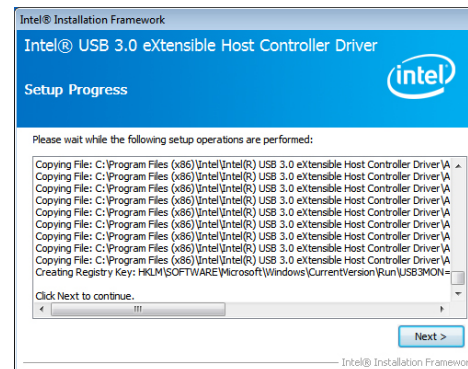


- After completing installation, click Finish.



IO Driver (Windows 7, Windows 8.1 and Windows 10)


To install the driver, click "Intel Serial IO Driver" on the main menu

- Setup is ready to install the driver. Click Next.

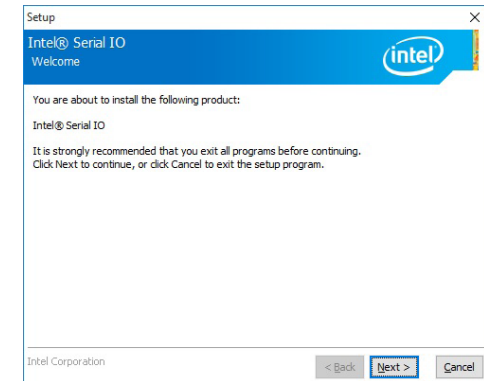


- Read the license agreement carefully.


Click "I accept the terms in the License Agreement" then click Next.

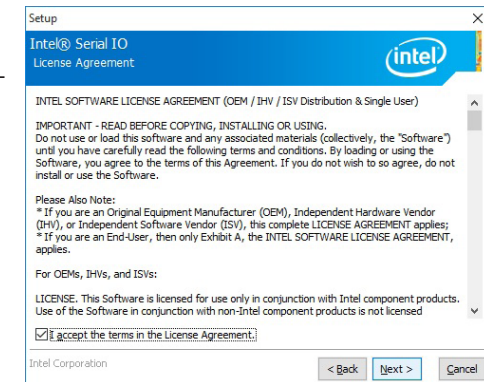


3. Read the file information then click Next.

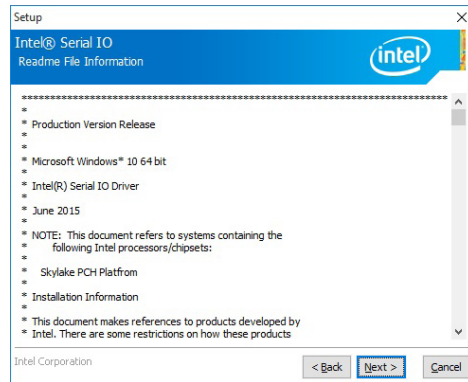


4. Setup is ready to install the driver. Click Next.

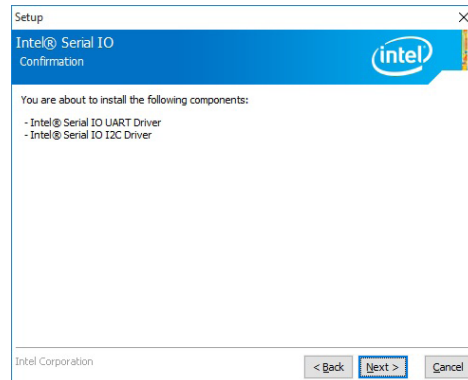

5. Setup is now installing the driver.

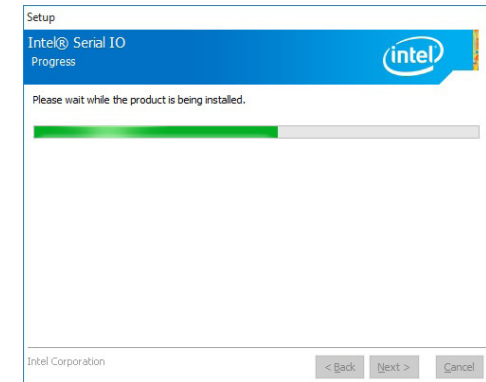

6. Click Finish.

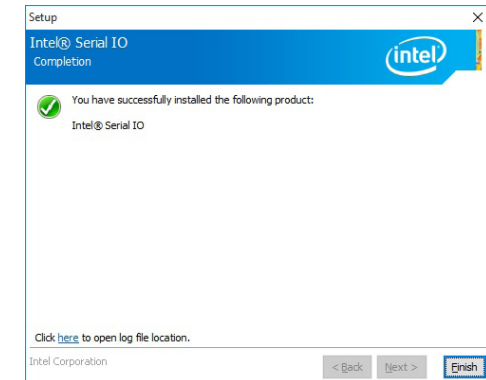


Microsoft Framework 4.5.2 (For Windows 7)


Note:

Before installing Microsoft Framework 4.5.2, make sure you have updated your Windows 7 operating system to Service Pack 3.


To install the driver, click "Microsoft Framework 4.5.2" on the main menu.

1. Setup is now extracting files.

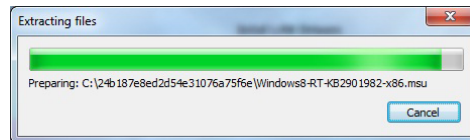


2. Read the license agreement carefully.


Click "I have read and accept the terms of the License Agreement" then click Install.

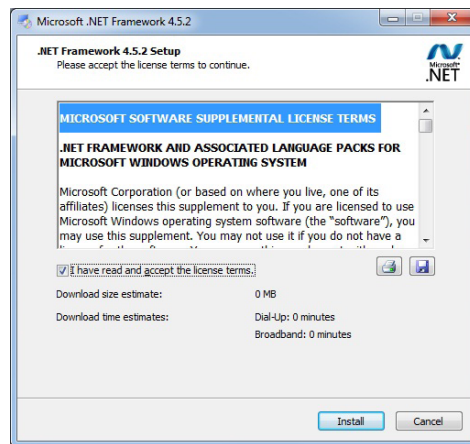

3. Setup is now installing the driver.

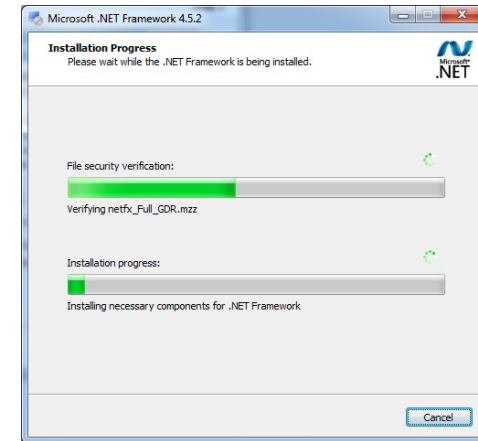

4. Click Finish.

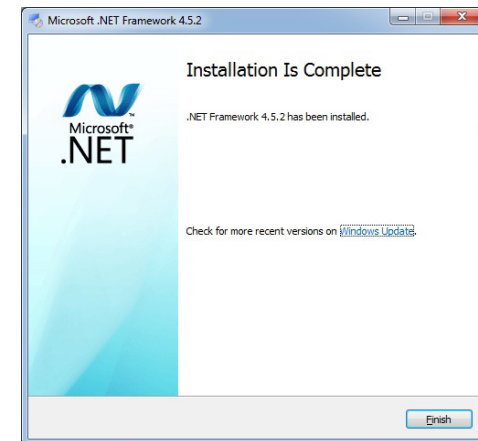

Intel Rapid Storage Technology


The Intel Rapid Storage Technology is a utility that allows you to monitor the current status of the SATA drives. It enables enhanced performance and power management for the storage subsystem.

To install the driver, click “Intel Rapid Storage Technology” on the main menu. Please refer to **Chapter 5** for more information.


Infineon TPM 1.2 Driver and Tool (optional)

To install the driver, click “Infineon TPM driver and tool (option)” on the main menu.


1. The setup program is preparing to install the driver.

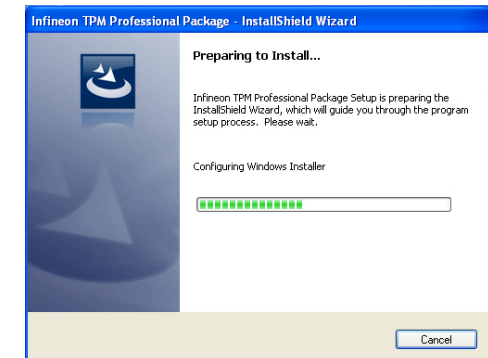


2. The setup program is now ready to install the utility. Click Next.

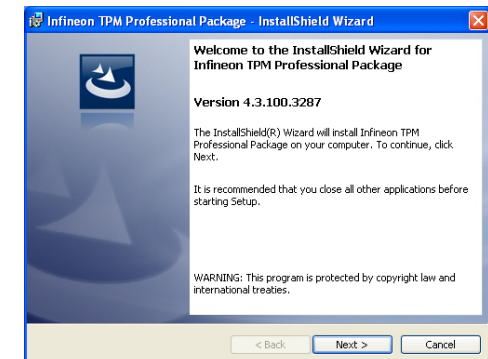


3. Click “I accept the terms in the license agreement” and then click “Next”.

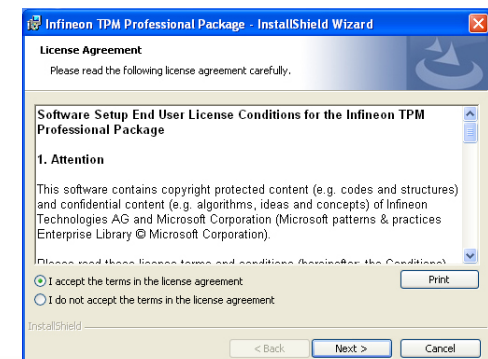


4. Enter the necessary information and then click Next.

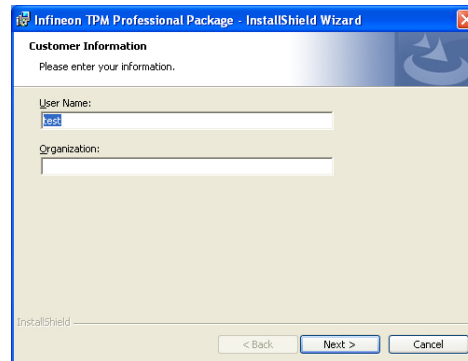


5. Select a setup type and then click Next.

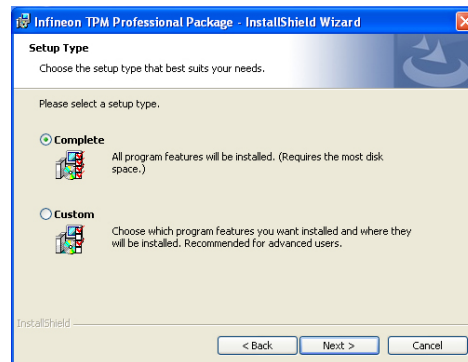


6. Click Install.

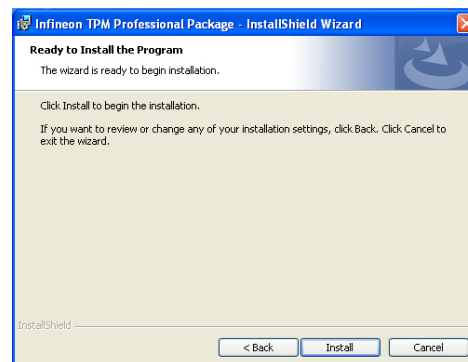

7. TPM requires installing the Microsoft Visual C++ package prior to installing the utility. Click Install.

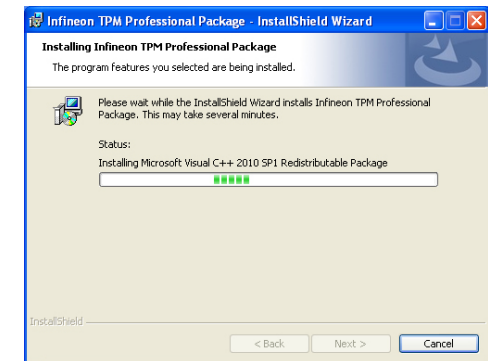


8. The setup program is currently installing the Microsoft Visual C++ package.

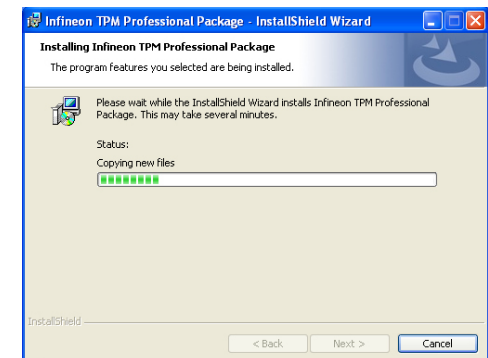

9. Click Finish.




10. Click "Yes" to restart your system.

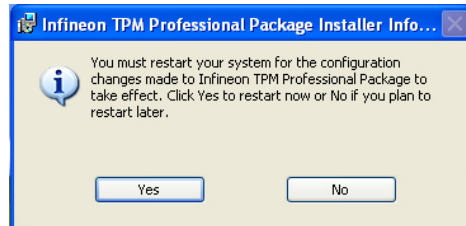


Adobe Acrobat Reader 9.3

To install the reader, click "Adobe Acrobat Reader 9.3" on the main menu.


1. Click Next to install or click Change Destination Folder to select another folder.

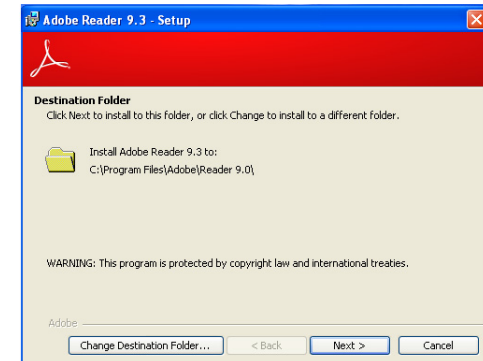

2. Click Install to begin installation.

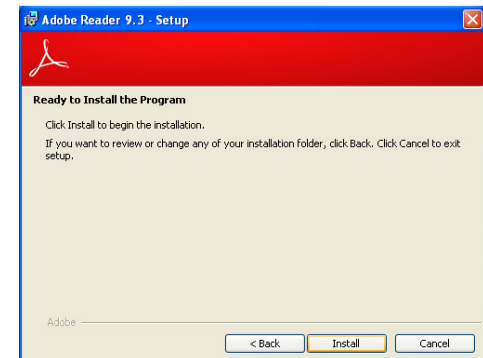

3. Click Finish to exit installation.

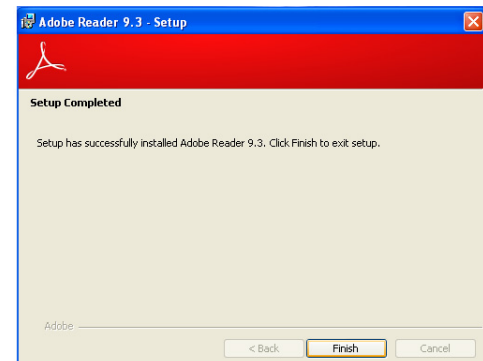

Chapter 5 - RAID

The system board allows configuring RAID on Serial ATA drives. It supports RAID 0, RAID 1, and RAID 5.

RAID Levels

RAID 0 (Striped Disk Array without Fault Tolerance)

RAID 0 uses two new identical hard disk drives to read and write data in parallel, interleaved stacks. Data is divided into stripes and each stripe is written alternately between two disk drives. This improves the I/O performance of the drives at different channel; however it is not fault tolerant. A failed disk will result in data loss in the disk array.

RAID 1 (Mirroring Disk Array with Fault Tolerance)

RAID 1 copies and maintains an identical image of the data from one drive to the other drive. If a drive fails to function, the disk array management software directs all applications to the other drive since it contains a complete copy of the drive's data. This enhances data protection and increases fault tolerance to the entire system. Use two new drives or an existing drive and a new drive but the size of the new drive must be the same or larger than the existing drive.

RAID 5

RAID 5 stripes data and parity information across hard drives. It is fault tolerant and provides better hard drive performance and more storage capacity.

Settings

To enable the RAID function, the following settings are required.

1. Connect the Serial ATA drives.
2. Enable RAID in the Insyde BIOS.
3. Create a RAID volume.
4. Install the Intel Rapid Storage Technology Utility.

Step 1: Connect the Serial ATA Drives

Refer to chapter 2 for details on connecting the Serial ATA drives.



Important:

1. Make sure you have installed the Serial ATA drives and connected the data cables otherwise you won't be able to enter the RAID BIOS utility.
2. Treat the cables with extreme caution especially while creating RAID. A damaged cable will ruin the entire installation process and operating system. The system will not boot and you will lost all data in the hard drives. Please give special attention to this warning because there is no way of recovering back the data.

Step 2: Enable RAID in the Insyde BIOS

1. Power-on the system then press to enter the main menu of the Insyde BIOS.
2. Go to "Advanced" menu, and select the "SATA Configuration" menu.
3. Change the "SATA Mode Selection" to "RAID" mode.
4. Save the changes in the "Save & Exit" menu.
5. Reboot the system.

Step 3: Create a RAID Volume

1. When the Intel® RST option ROM status screen displays during POST, press <Ctrl> and <I> simultaneously to enter the option ROM user interface.
2. Select 1: Create RAID Volume and press <Enter>.
3. Use the up or down arrow keys to select the RAID level and press <Enter>.
4. Use the up or down arrow keys to select the strip size and press <Enter>.
5. Press <Enter> to select the physical disks.
6. Use the up or down arrow keys to scroll through the list of hard drives and press <Space> to select the drive.
7. Press <Enter>.
8. Select the volume size and press <Enter>. You must select less than one hundred percent of the available volume space to leave space for the second volume.
9. Press <Enter> to create the volume.
10. At the prompt, press <Y> to confirm volume creation.
11. Select 4: Exit and press <Enter>.
12. Press <Y> to confirm exit.




Note:

These steps are cited from the Intel® Support site, “Set Up a System with Intel® Matrix RAID Technology” (Article ID: 000005789).
<http://www.intel.com/content/www/us/en/support/boards-and-kits/000005789.htm>

Step 4: Install the Intel Rapid Storage Technology Utility

The Intel Rapid Storage Technology Utility can be installed from within Windows. It allows RAID volume management (create, delete, migrate) from within the operating system. It will also display useful SATA device and RAID volume information. The user interface, tray icon service and monitor service allow you to monitor the current status of the RAID volume and/or SATA drives. It enables enhanced performance and power management for the storage subsystem.


1. Insert the provided DVD into an optical drive.
2. Click “Intel Rapid Storage Technology Utility” on the main menu.
3. Setup is ready to install the utility. Click Next.

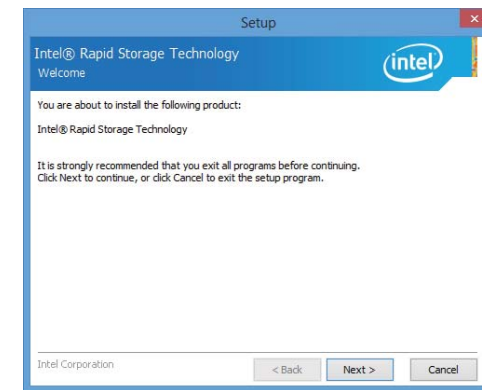


4. Read the license agreement and click “I accept the terms in the License Agreement.” Then, click Next.




5. Go through the readme document to view system requirements and installation information then click Next.

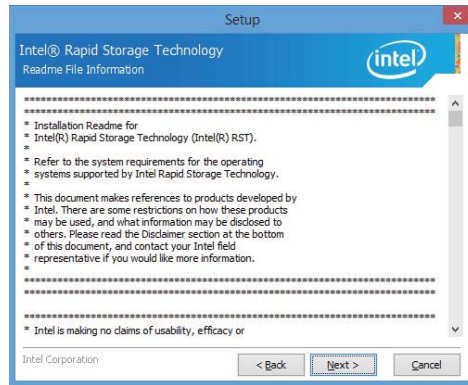


6. Click Next to install to the default folder or click change to choose another destination folder.

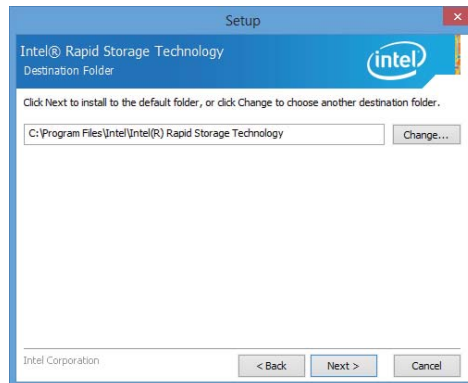

7. Confirm the installation and click Next.

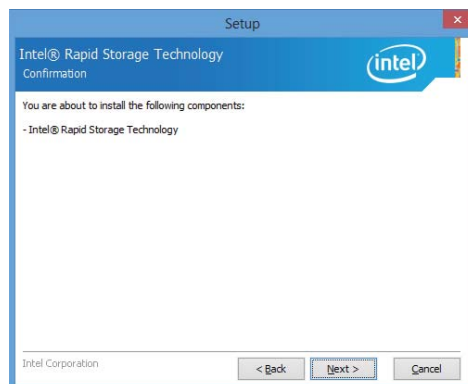

8. Click "Yes, I want to restart this computer now" to complete the installation and then click Finish.

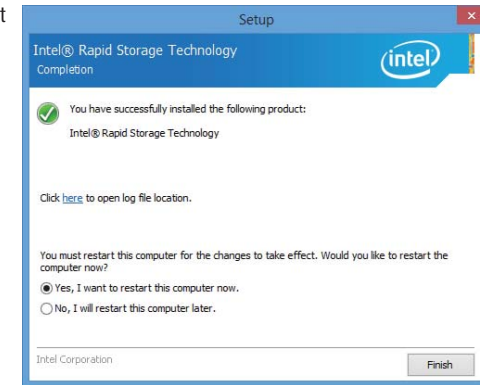

Chapter 6 - Intel AMT Settings

Overview

Intel Active Management Technology (Intel® AMT) combines hardware and software solution to provide maximum system defense and protection to networked systems.

The hardware and software information are stored in non-volatile memory. With its built-in manageability and latest security applications, Intel® AMT provides the following functions.

- **Discover**

Allows remote access and management of networked systems even while PCs are powered off; significantly reducing desk-side visits.

- **Repair**


Remotely repair systems after OS failures. Alerting and event logging help detect problems quickly to reduce downtime.

- **Protect**


Intel AMT's System Defense capability remotely updates all systems with the latest security software. It protects the network from threats at the source by proactively blocking incoming threats, reactively containing infected clients before they impact the network, and proactively alerting when critical software agents are removed.

Enable Intel® AMT in the Insyde BIOS


1. Power-on the system then press to enter the main menu of the Insyde BIOS.
2. In the **Advanced** menu, select **Active Management Technology Support**.

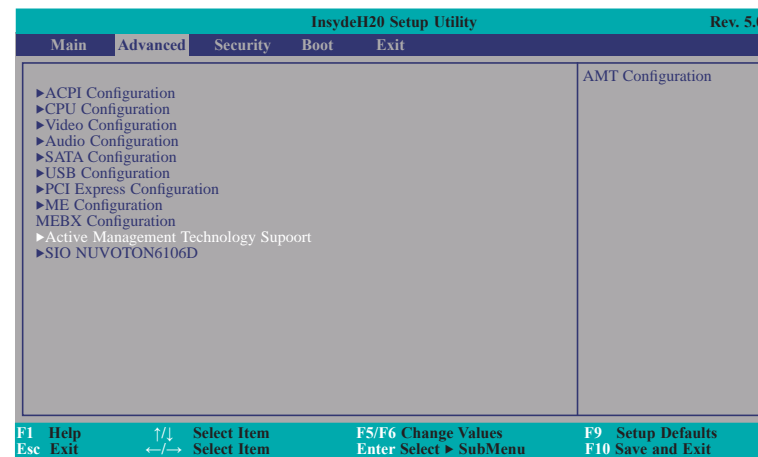

3. In the **Intel AMT Support** field, select **Enabled**.

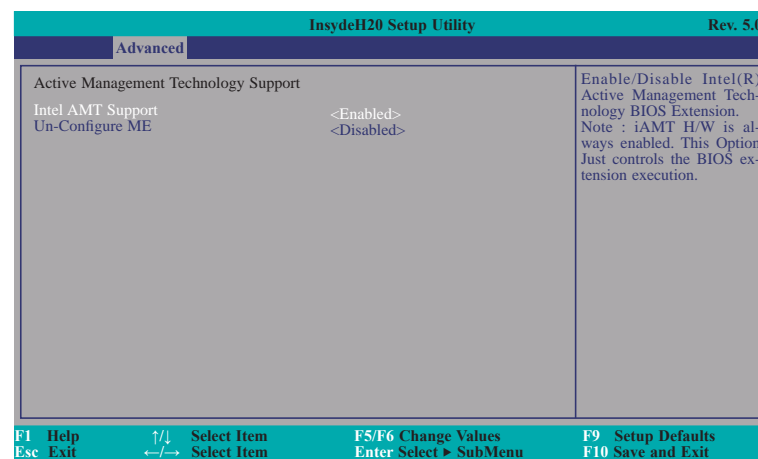


4. In the **Exit** menu, select **Exit Saving Changes** then select **Yes** and press Enter.

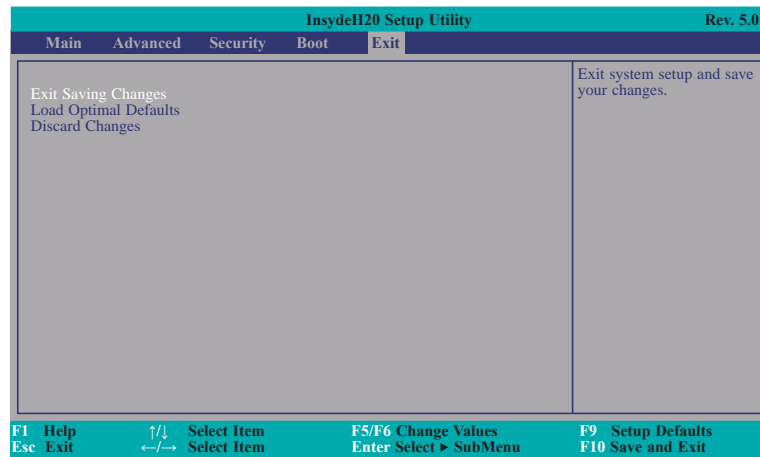


Enable Intel® AMT in the Intel® Management Engine BIOS Extension (MEBX) Screen

1. When the system reboots, you will be prompted for a password. The default password is **"admin"**. Enter the default password in the space provided under Intel(R) ME Password then press Enter.

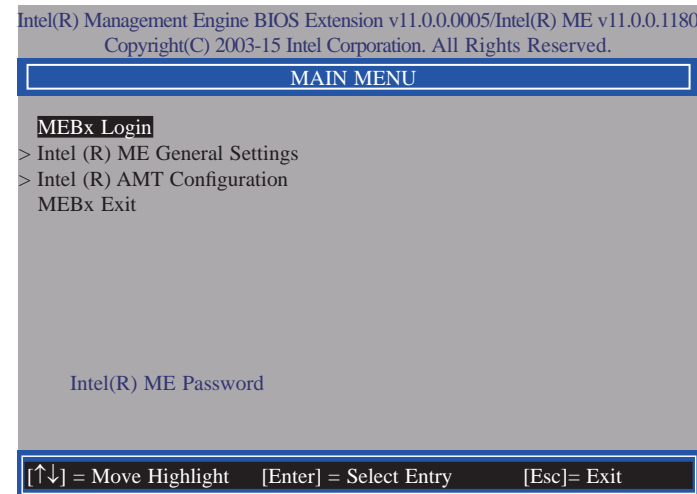


2. Enter a password in the space provided under Intel(R) ME Password then press Enter. The password must include:


- 8-32 characters
- Strong 7-bit ASCII characters excluding : , and " characters
- At least one digit character (0, 1, ...9)
- At least one 7-bit ASCII non alpha-numeric character, above 0x20, (e.g. !, \$, ;)
- Both lower case and upper case characters

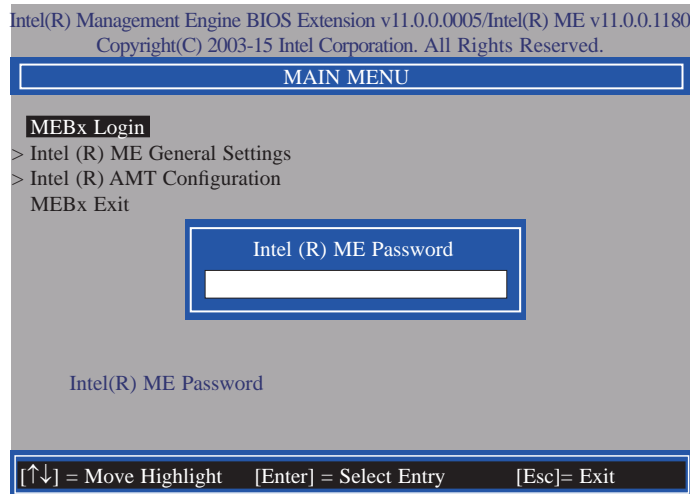

3. You will be asked to verify the password. Enter the same new password in the space provided under Verify Password then press Enter.

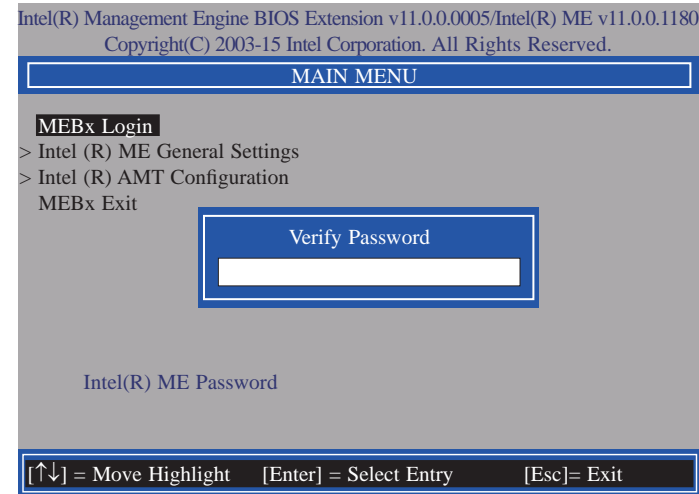


4. Select **Intel(R) ME General Settings** then press Enter.

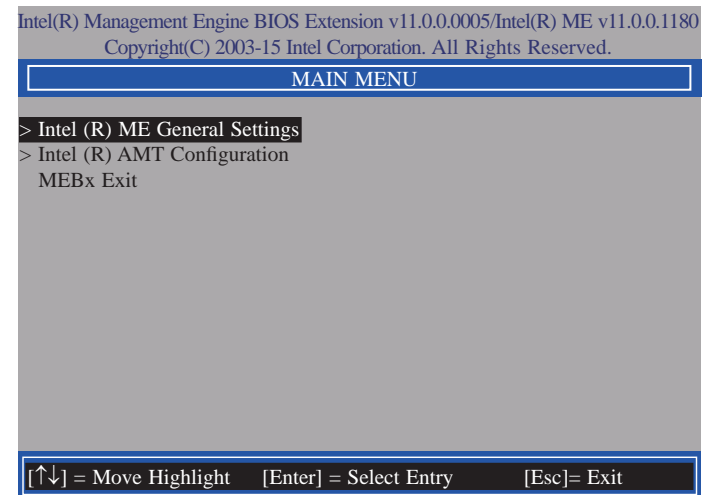


5. Select **Change Intel(R) ME Password** then press Enter.

You will be prompted for a password. The default password is "**admin**". Enter the default password in the space provided under Intel(R) ME New Password then press Enter.


- 8-32 characters
- Strong 7-bit ASCII characters excluding : , and " characters
- At least one digit character (0, 1, ...9)
- At least one 7-bit ASCII non alpha-numeric character, above 0x20, (e.g. !, \$, ;)
- Both lower case and upper case characters

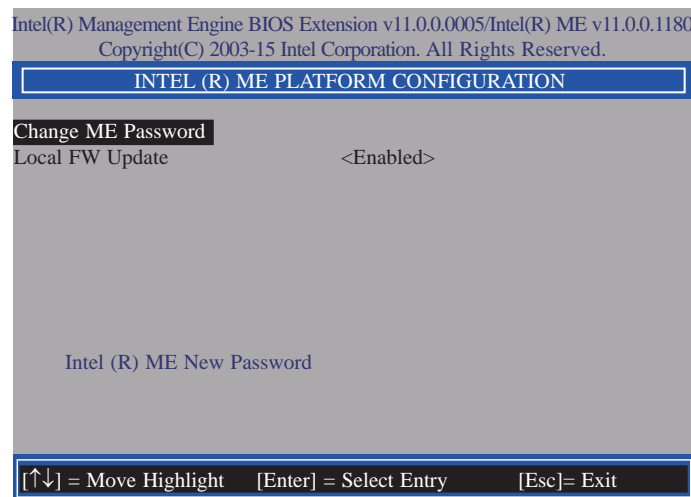


6. Select **Local FW Update** then press Enter. Select **Enabled** or **Disabled** or **password Protected** then press Enter.

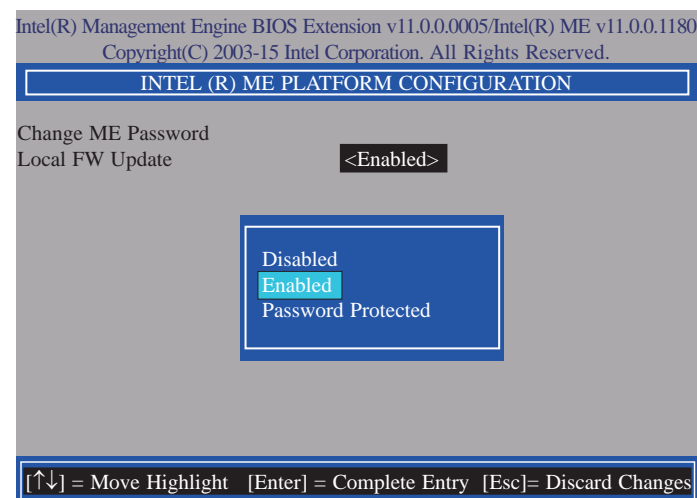


7. Select Previous Menu until you return to the **Main Menu**. Select **Intel(R) AMT Configuration** then press Enter.

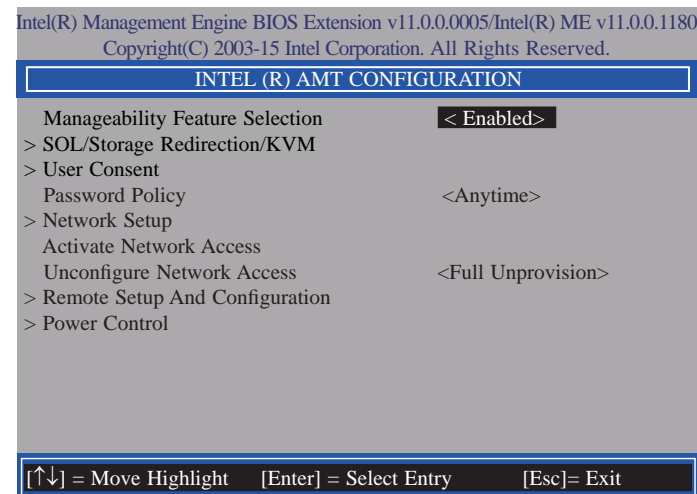


8. In the **Intel(R) AMT Configuration** menu, select **Manageability Feature Selection** then press Enter. Select **Enabled** or **Disabled** then press Enter.

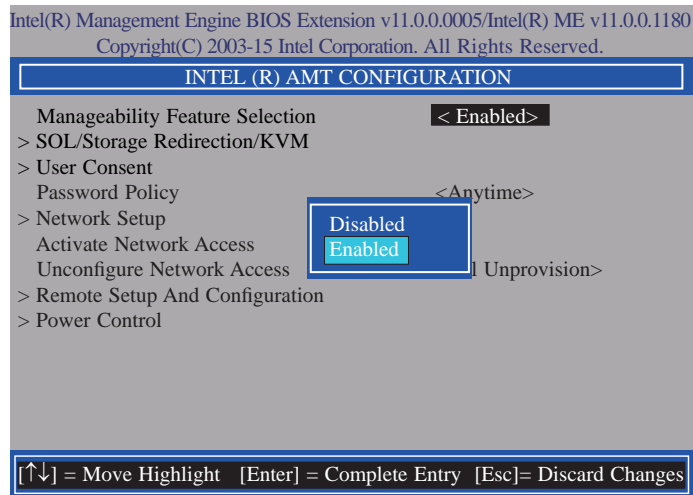


9. In the **Intel(R) AMT Configuration** menu, select **SOL/Storage Redirection/KVM** then press Enter.

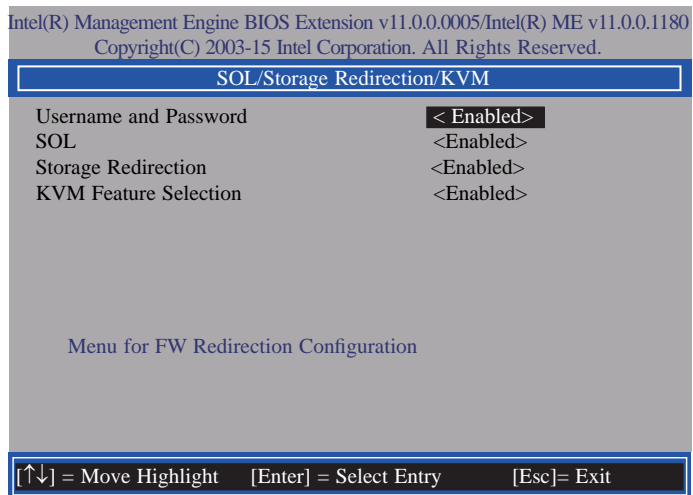


10. In the **SOL/Storage Redirection/KVM** menu, select **Username and Password** then press Enter. Select **Enabled** or **Disabled** then press Enter.

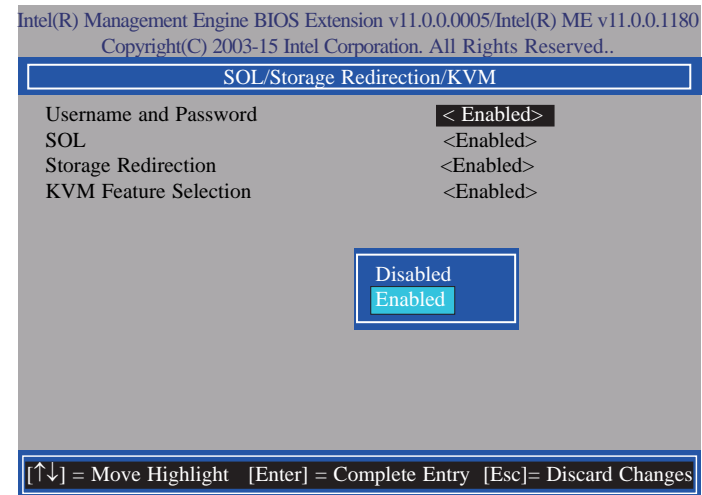


11. In the **SOL/Storage Redirection/KVM** menu, select **SOL** then press Enter. Select **Enabled** or **Disabled** then press Enter.

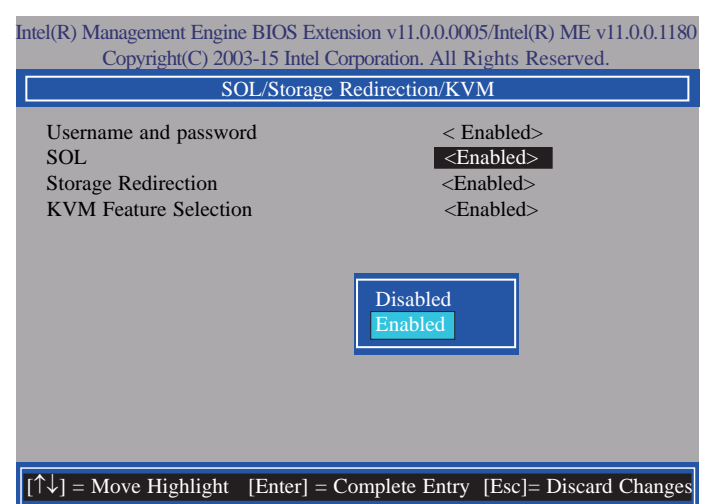


12. In the **SOL/Storage Redirection/KVM** menu, select **Storage Redirection** then press Enter. Select **Enabled** or **Disabled** then press Enter.

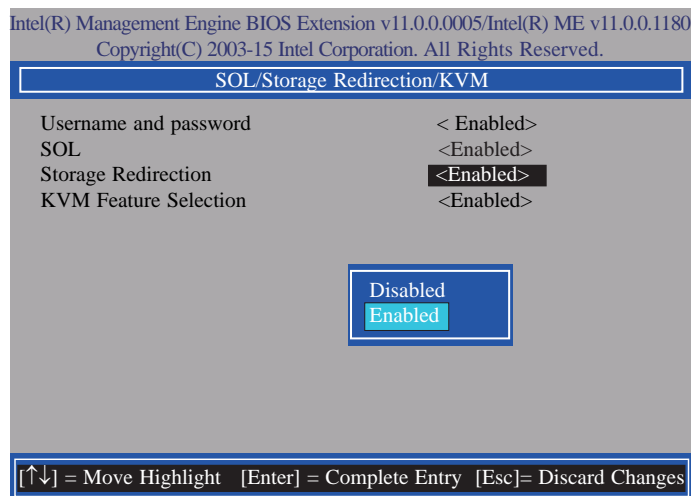


13. In the **SOL/IDER/KVM** menu, select **KVM Feature Selection** then press Enter. Select **Enabled** or **Disabled** then press Enter.

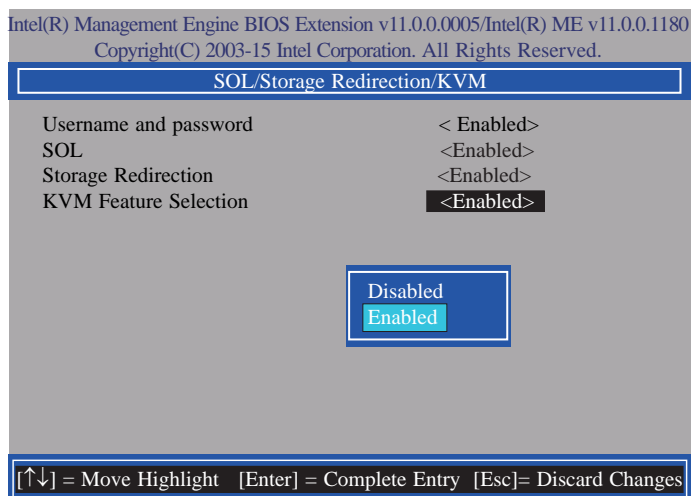


14. Select Previous Menu until you return to the **Intel(R) AMT Configuration** menu. Select **User Consent** then press Enter.

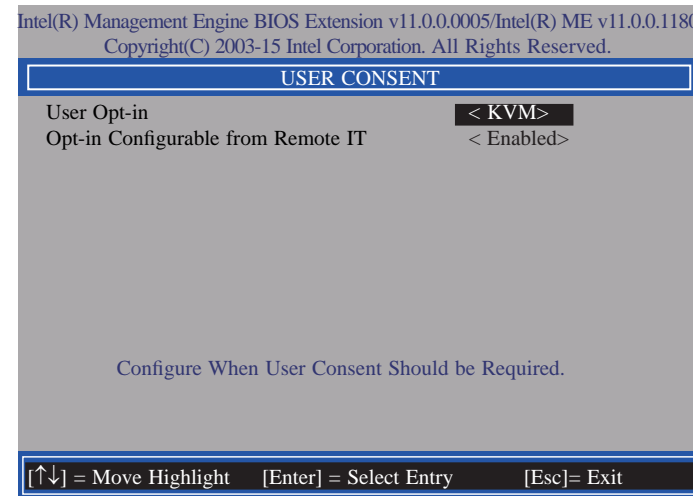

15. In the **User Consent** menu, select **User Opt-in** then press Enter. Select **None** or **KVM** or **ALL** then press Enter.

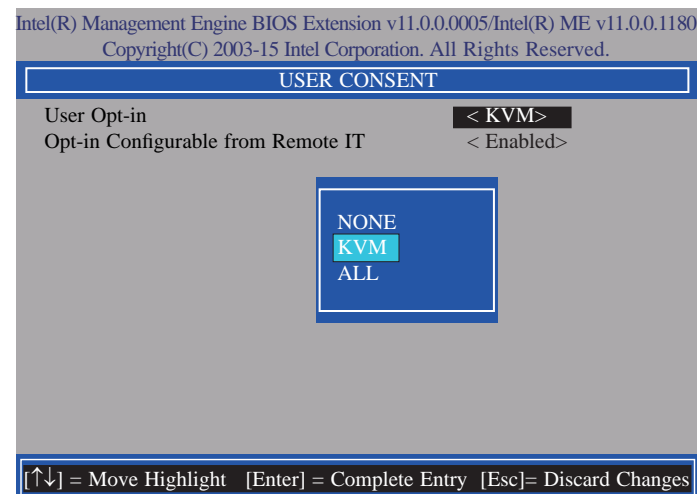


16. In the **User Consent** menu, select **Opt-in Configurable from Remote IT** then press Enter. Select **Enabled** or **Disable Remote Control of KVM Opt-in Policy** then press Enter.

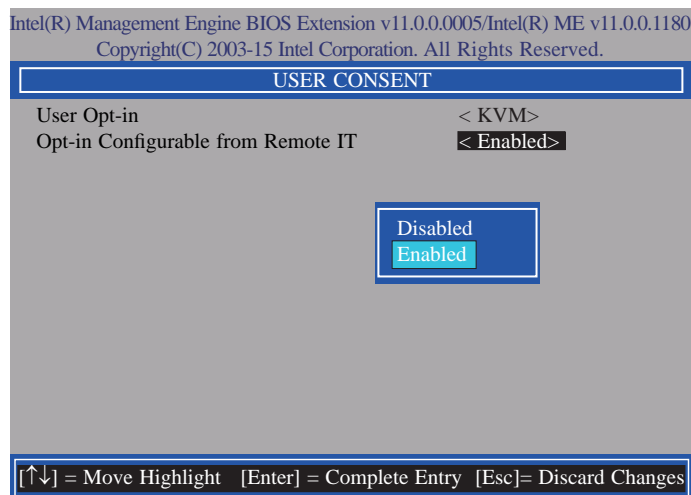


17. Select Previous Menu until you return to the **Intel(R) AMT Configuration** menu. Select **Password Policy** then press Enter.


You may choose to use a password only during setup and configuration or to use a password anytime the system is being accessed.

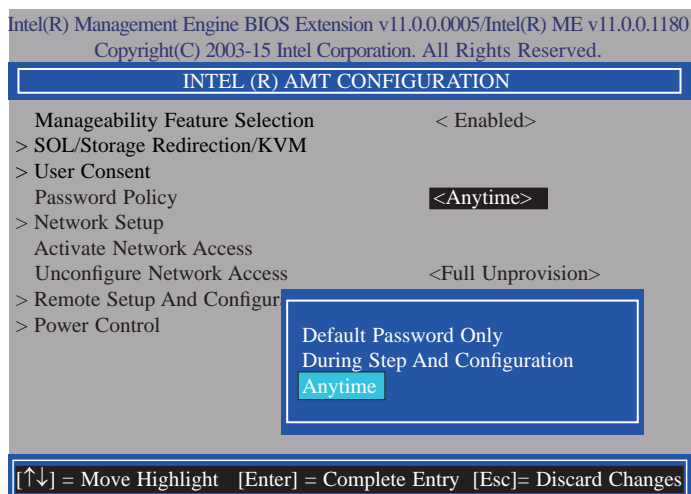

18. In the **Intel(R) AMT Configuration** menu, select **Network Setup** then press Enter.

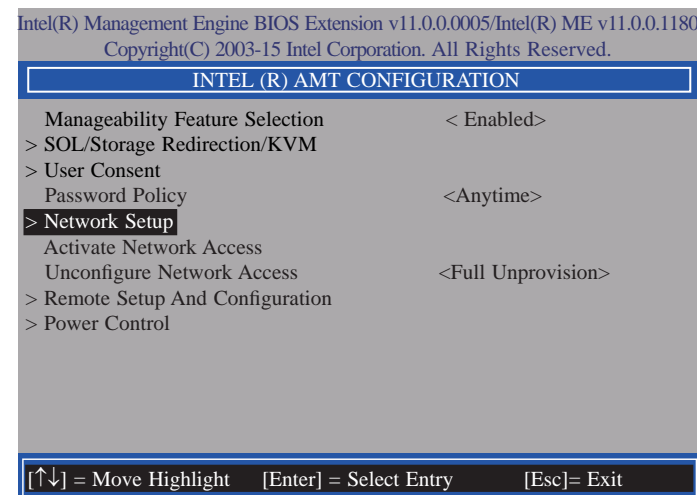

19. In the **Intel(R) ME Network Setup** menu, select **Intel(R) ME Network Name Settings** then press Enter.

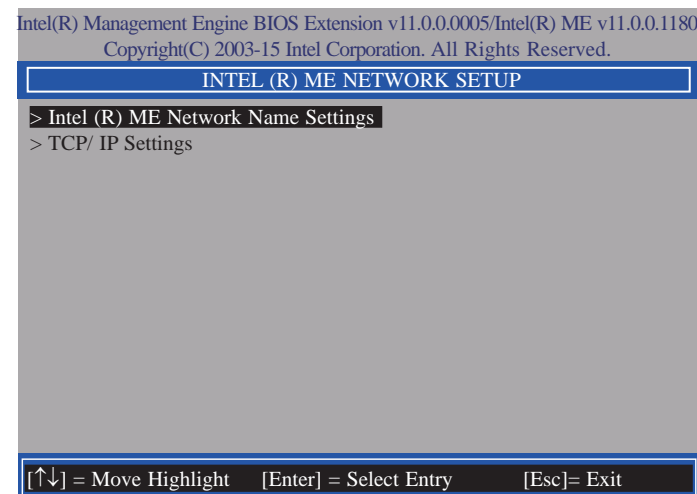

20. In the **Intel(R) ME Network Name Settings** menu, select **Host Name** then press Enter. Enter the computer's host name then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0005/Intel(R) ME v11.0.0.1180
Copyright(C) 2003-15 Intel Corporation. All Rights Reserved.

INTEL (R) ME NETWORK NAME SETTINGS

Host Name

Domain Name

Shared/ Dedicated FQDN <Shared>

Dynamic DNS Update <Disabled>

Computer Host Name

[Enter] = Complete Entry [Esc]= Discard Changes

22. Select **Shared/Dedicated FQDN** then press Enter. Select **Shared** or **Dedicated** then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0005/Intel(R) ME v11.0.0.1180
Copyright(C) 2003-15 Intel Corporation. All Rights Reserved.

INTEL (R) ME NETWORK NAME SETTINGS

Host Name

Domain Name

Shared/ Dedicated FQDN <Shared>

Dynamic DNS Update <Disabled>

Dedicated
Shared

[↑↓] = Move Highlight [Enter] = Complete Entry [Esc]= Discard Changes

21. Select **Domain Name** then press Enter. Enter the computer's domain name then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0005/Intel(R) ME v11.0.0.1180
Copyright(C) 2003-15 Intel Corporation. All Rights Reserved.

INTEL (R) ME NETWORK NAME SETTINGS

Host Name

Domain Name

Shared/ Dedicated FQDN <Shared>

Dynamic DNS Update <Disabled>

Computer Domain Name

[Enter] = Complete Entry [Esc]= Discard Changes

23. Select **Dynamic DNS Update** then press Enter. Select **Enabled** or **Disabled** then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0005/Intel(R) ME v11.0.0.1180
Copyright(C) 2003-15 Intel Corporation. All Rights Reserved.

INTEL (R) ME NETWORK NAME SETTINGS

Host Name

Domain Name


Shared/ Dedicated FQDN <Shared>

Dynamic DNS Update <Disabled>

Disabled
Enabled

[↑↓] = Move Highlight [Enter] = Complete Entry [Esc]= Discard Changes


24. Select Previous Menu until you return to the **Intel(R) ME Network Setup** menu. Select **TCP/IP Settings** then press Enter.

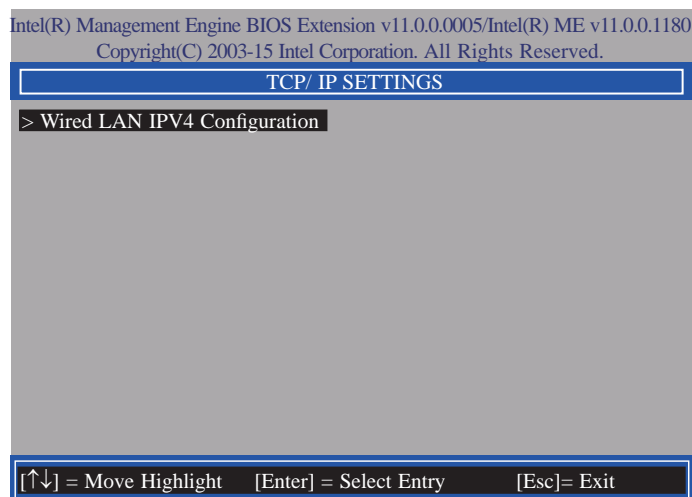


25. In the **TCP/IP Settings** menu, select **Wired LAN IPV4 Configuration** then press Enter.




26. In the **Intel(R) AMT Configuration** menu, select **Activate Network Access** then press Enter.

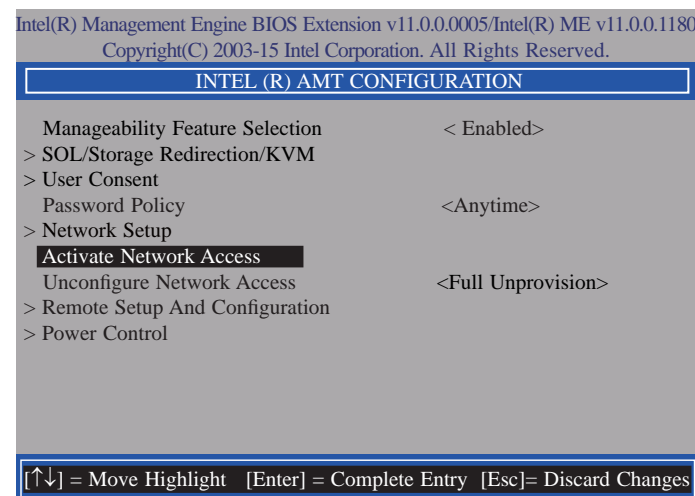


27. In the **Intel(R) AMT Configuration** menu, select **Unconfigure Network Access** then press Enter.

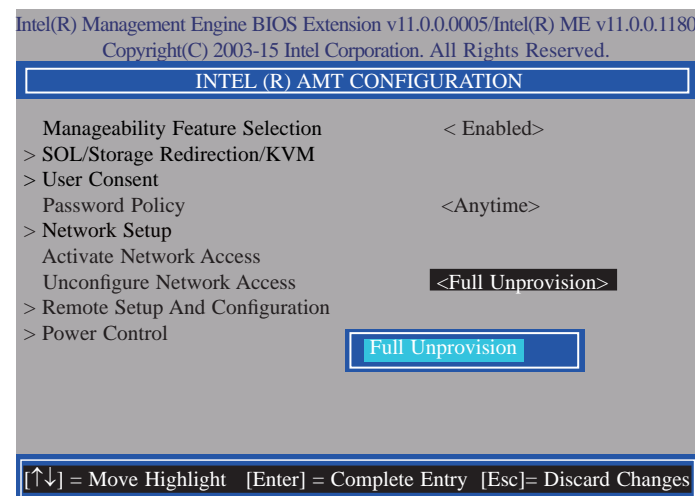


28. In the **Intel(R) AMT Configuration** menu, select **Remote Setup And Configuration** then press Enter.

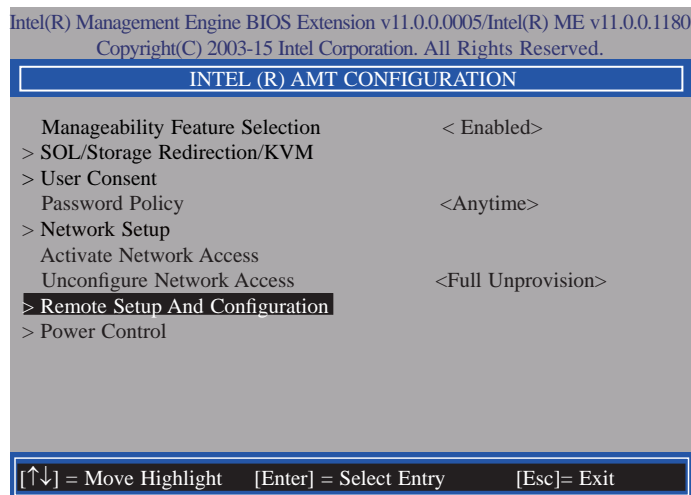


29. In the **Intel(R) Remote Setup And Configuration** menu, select **Current Provisioning Mode** then press Enter.

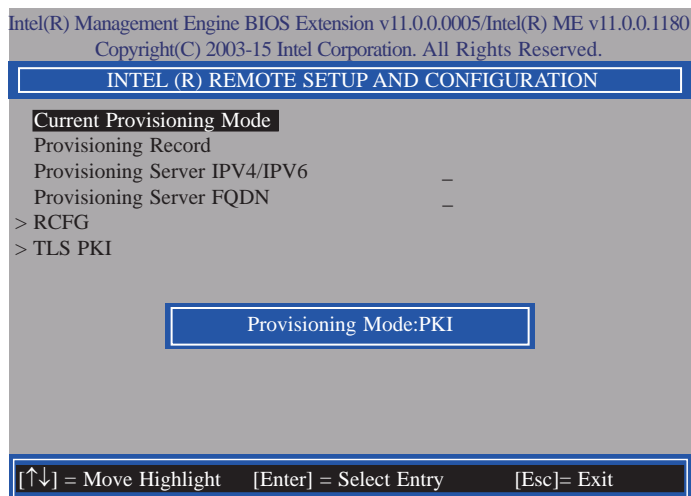


30. In the **Intel(R) Remote Setup And Configuration** menu, select **Provisioning Record** then press Enter.

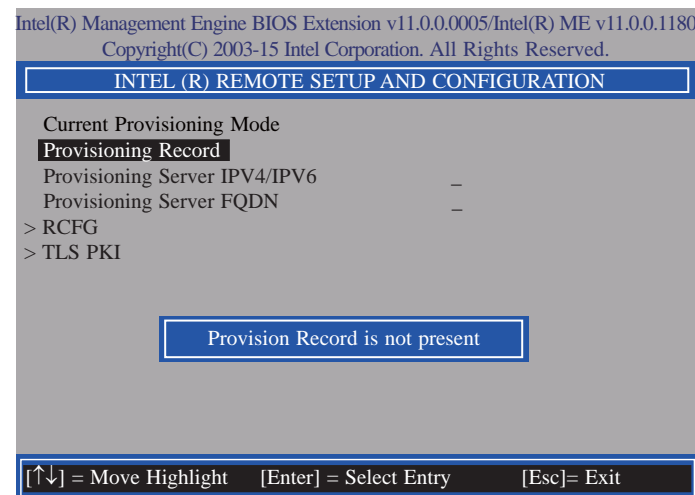


31. In the **Intel(R) Remote Setup And Configuration** menu, select **Provisioning server IPV4/IPV6**, enter the Provisioning server address then press Enter.

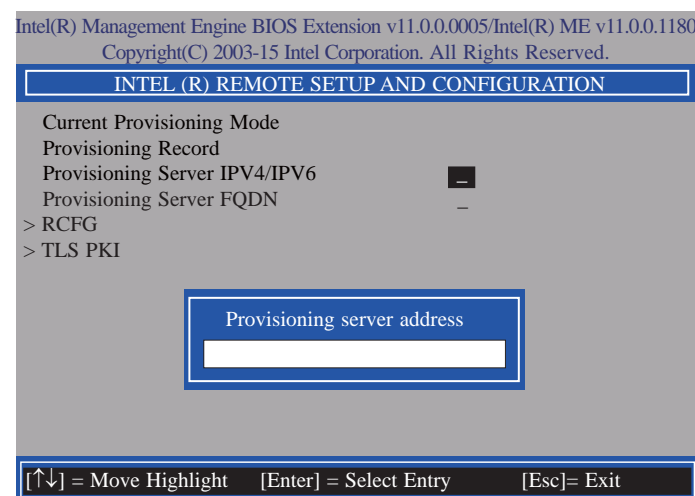


32. In the **Intel(R) Remote Setup And Configuration** menu, select **Provisioning server FQDN**, enter the FQDN of Provisioning server then press Enter.

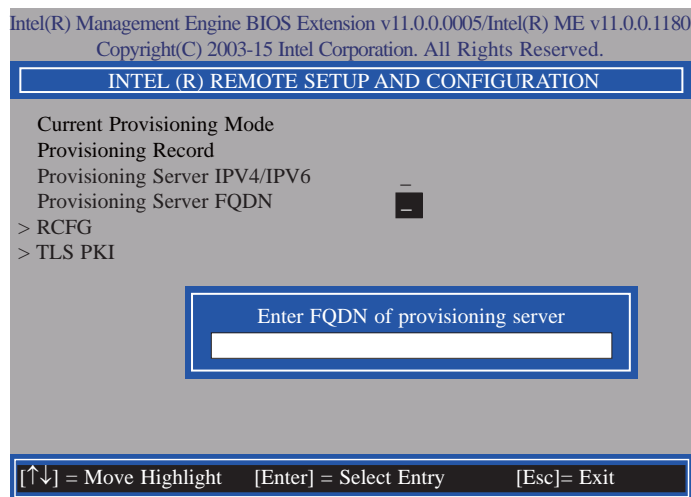


34. In the **Intel(R) Remote Setup And Configuration** menu, select **TLS PKI** then press Enter.

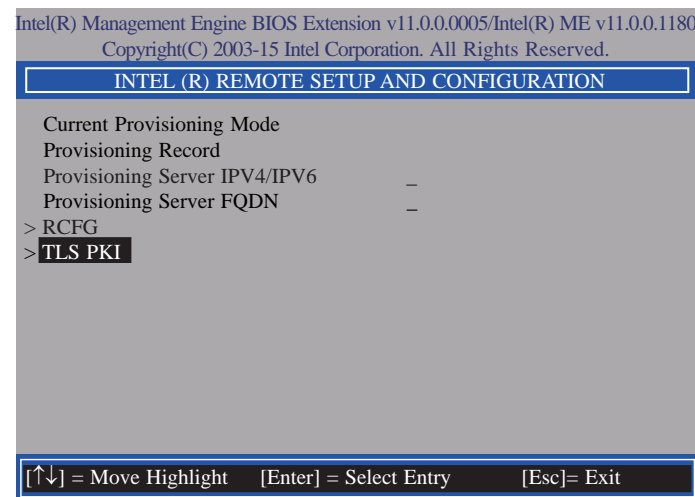


33. In the **Intel(R) Remote Setup And Configuration** menu, select **RCFG** then press Enter, and select **Start Configuration** then press enter.

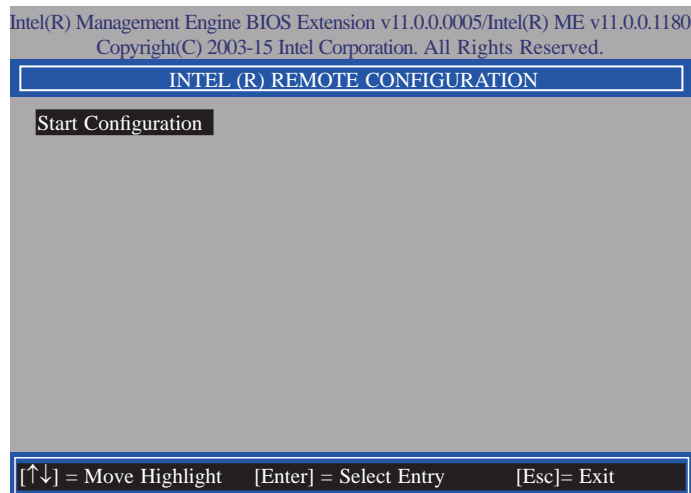


35. In the **Intel(R) Remote Configuration** menu, select **Remote Configuration**** then press Enter, select **Enabled** or **Disabled** then press Enter.

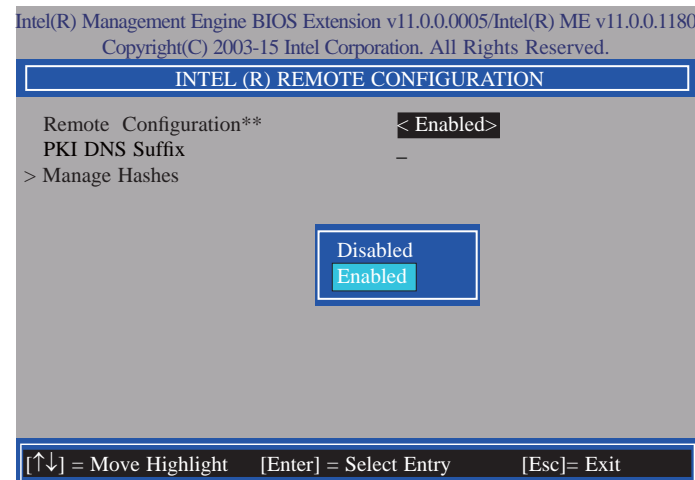


36. Select **PKI DNS Suffix**, Enter the PKI DNS Suffix then press Enter.

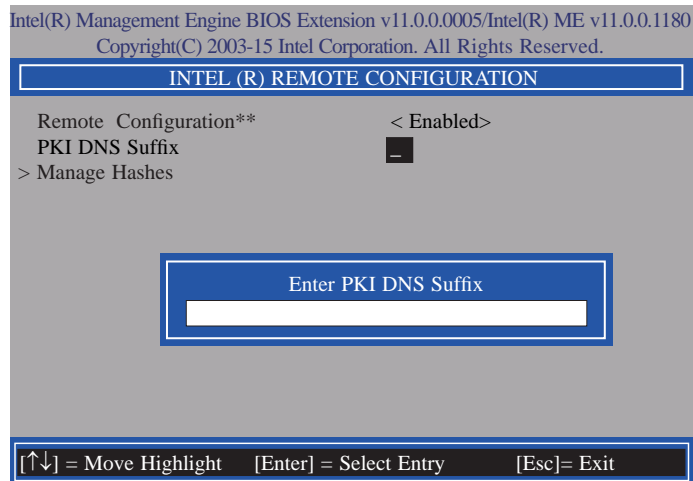


37. Select **Manage Hashes** then press Enter, and select one of hash name.

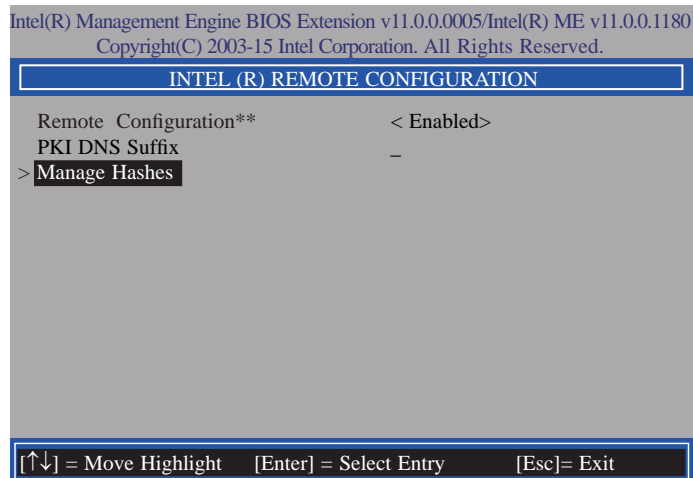

38. In the **Intel(R) AMT Configuration** menu, select **Power Control** then press Enter.

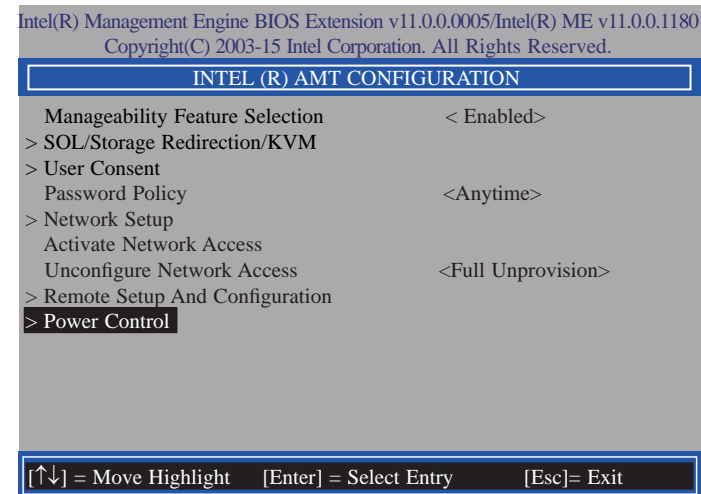

39. In the **Intel(R) AMT Power Control** menu, select **Intel(R) AMT ON in Host Sleep States** then press Enter. Select an option then press Enter.

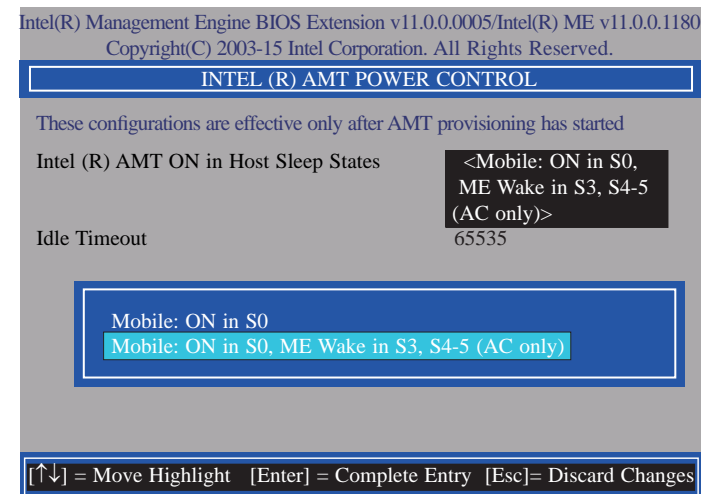

40. In the **Intel(R) AMT Power Control** menu, select **Idle Timeout** then press Enter. Enter the timeout value (1-65535).

Intel(R) Management Engine BIOS Extension v11.0.0.0005/Intel(R) ME v11.0.0.1180
Copyright(C) 2003-15 Intel Corporation. All Rights Reserved.

INTEL (R) AMT POWER CONTROL

This configurations are effective only after AMT provisioning has started

Intel (R) ME ON in Host Sleep States <Mobile: ON in S0,
ME Wake in S3, S4-5
(AC only)>

Idle Timeout **65535**

Timeout Value (1-65535)
65535

<ENTER> = Complete Entry [ESC]= Discard Changes

41. Select Previous Menu until you return to the **Main Menu**. Select **Exit** then press Enter. Type **Y** then press Enter.

Intel(R) Management Engine BIOS Extension v11.0.0.0005/Intel(R) ME v11.0.0.1180
Copyright(C) 2003-15 Intel Corporation. All Rights Reserved.

MAIN MENU

> Intel (R) ME General Settings
> Intel (R) AMT Configuration
MEBx Exit

Exit

[↑↓] = Move Highlight [Enter] = Select Entry [Esc]= Exit

Appendix A - Troubleshooting Checklist

Troubleshooting Checklist

This chapter of the manual is designed to help you with problems that you may encounter with your personal computer. To efficiently troubleshoot your system, treat each problem individually. This is to ensure an accurate diagnosis of the problem in case a problem has multiple causes.

Some of the most common things to check when you encounter problems while using your system are listed below.

1. The power switch of each peripheral device is turned on.
2. All cables and power cords are tightly connected.
3. The electrical outlet to which your peripheral devices connected is working. Test the outlet by plugging in a lamp or other electrical device.
4. The monitor is turned on.
5. The display's brightness and contrast controls are adjusted properly.
6. All add-in boards in the expansion slots are seated securely.
7. Any add-in board you have installed is designed for your system and is set up correctly.

Monitor/Display

If the display screen remains dark after the system is turned on:

1. Make sure that the monitor's power switch is on.
2. Check that one end of the monitor's power cord is properly attached to the monitor and the other end is plugged into a working AC outlet. If necessary, try another outlet.
3. Check that the video input cable is properly attached to the monitor and the system's display adapter.
4. Adjust the brightness of the display by turning the monitor's brightness control knob.

The picture seems to be constantly moving.

1. The monitor has lost its vertical sync. Adjust the monitor's vertical sync.
2. Move away any objects, such as another monitor or fan, that may be creating a magnetic field around the display.
3. Make sure your video card's output frequencies are supported by this monitor.

The screen seems to be constantly wavering.

1. If the monitor is close to another monitor, the adjacent monitor may need to be turned off. Fluorescent lights adjacent to the monitor may also cause screen wavering.

Power Supply

When the computer is turned on, nothing happens.

1. Check that one end of the AC power cord is plugged into a live outlet and the other end properly plugged into the back of the system.
2. Make sure that the voltage selection switch on the back panel is set for the correct type of voltage you are using.
3. The power cord may have a "short" or "open". Inspect the cord and install a new one if necessary.

Floppy Drive

The computer cannot access the floppy drive.

1. The floppy diskette may not be formatted. Format the diskette and try again.
2. The diskette may be write-protected. Use a diskette that is not write-protected.
3. You may be writing to the wrong drive. Check the path statement to make sure you are writing to the targeted drive.
4. There is not enough space left on the diskette. Use another diskette with adequate storage space.

Hard Drive

Hard disk failure.

1. Make sure the correct drive type for the hard disk drive has been entered in the BIOS.
2. If the system is configured with two hard drives, make sure the bootable (first) hard drive is configured as Master and the second hard drive is configured as Slave. The master hard drive must have an active/bootable partition.

Excessively long formatting period.

If your hard drive takes an excessively long period of time to format, it is likely a cable connection problem. However, if your hard drive has a large capacity, it will take a longer time to format.

Serial Port

The serial device (modem, printer) doesn't output anything or is outputting garbled characters.

1. Make sure that the serial device's power is turned on and that the device is on-line.
2. Verify that the device is plugged into the correct serial port on the rear of the computer.
3. Verify that the attached serial device works by attaching it to a serial port that is working and configured correctly. If the serial device does not work, either the cable or the serial device has a problem. If the serial device works, the problem may be due to the onboard I/O or the address setting.
4. Make sure the COM settings and I/O address are configured correctly.

Keyboard

Nothing happens when a key on the keyboard was pressed.

1. Make sure the keyboard is properly connected.
2. Make sure there are no objects resting on the keyboard and that no keys are pressed during the booting process.

System Board

1. Make sure the add-in card is seated securely in the expansion slot. If the add-in card is loose, power off the system, re-install the card and power up the system.
2. Check the jumper settings to ensure that the jumpers are properly set.
3. Verify that all memory modules are seated securely into the memory sockets.
4. Make sure the memory modules are in the correct locations.
5. If the board fails to function, place the board on a flat surface and seat all socketed components. Gently press each component into the socket.
6. If you made changes to the BIOS settings, re-enter setup and load the BIOS defaults.