


**Board Layout and Jumper Settings**

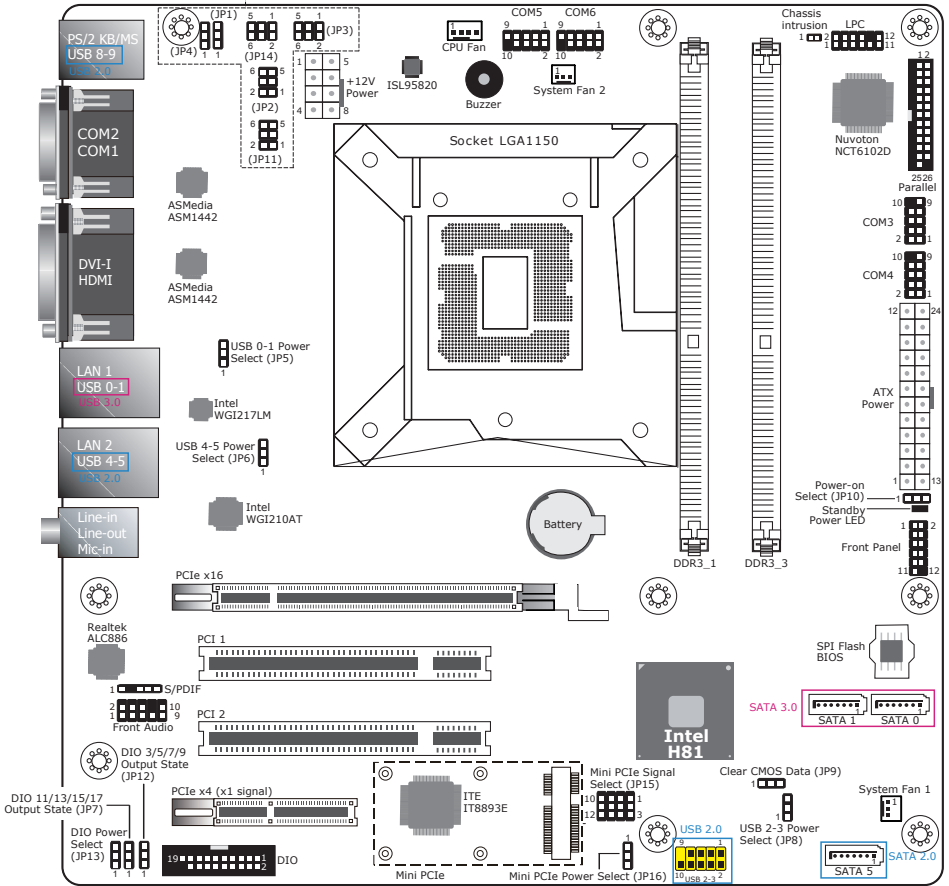

Note:  
 HD330-H81B supports LAN1 only; HD330-H81C supports 6 COM ports (COM1 to COM6);  
 HD330-H81B and HD330-H81D support 2 COM ports (COM1 and COM2).

Mini PCIe Power Select	JP16
+3.3V (default)	1-2 On
+3V_standby	2-3 On

Mini PCIe Signal Select	JP15
PCIe (default)	1-4-7-10, 2-5-8-11 On
mSATA	2-5-8-11, 3-6-9-12 On

<b>Digital I/O Power Select</b>	<b>JP13</b>
+5V_standby (default)	1-2 On
+5V	2-3 On
<b>Digital I/O Output State</b>	<b>DIO 3/5/7/9 (JP12)</b> <b>DIO 11/13/15/17 (JP7)</b>
+5V or +5V_standby (default)	1-2 On
GND	2-3 On
<b>Serial Mode Select</b>	<b>COM 1 (JP2), COM 2 (JP11)</b>
RS232 (default)	1-2 On
RS422 Full Duplex	3-4 On
RS485	5-6 On
<b>RS232 Power Select</b>	<b>COM 1 (JP3), COM 2 (JP14)</b>
RS232 (default)	1-3 On (RI), 2-4 On (DCD)
RS232 with power	3-5 On (+5V), 4-6 On (+12V)
<b>USB Power Select</b>	<b>USB 0-1 (JP5), 4-5 (JP6), 8-9 (JP4)</b>
+5V (default)	1-2 On
+5V_standby	2-3 On
<b>Clear CMOS Data</b>	<b>JP9</b>
Normal (default)	1-2 On
Clear CMOS Data	2-3 On
<b>Auto Power-on Select</b>	<b>JP10</b>
Power-on via power button (default)	1-2 On
Power-on via AC power	2-3 On
<b>PS/2 Keyboard/Mouse Power Select</b>	<b>JP1</b>
+5V (default)	1-2 On
+5V_standby	2-3 On



DFI reserves the right to change the specifications at any time prior to the product's release. This QR may be based on editions that do not resemble your actual products. For more documentation and drivers, please visit the download page at [go.dfi.com/HD330-H81](https://go.dfi.com/HD330-H81), or via the QR code to the right.

