


## Board Layout and Jumper Settings

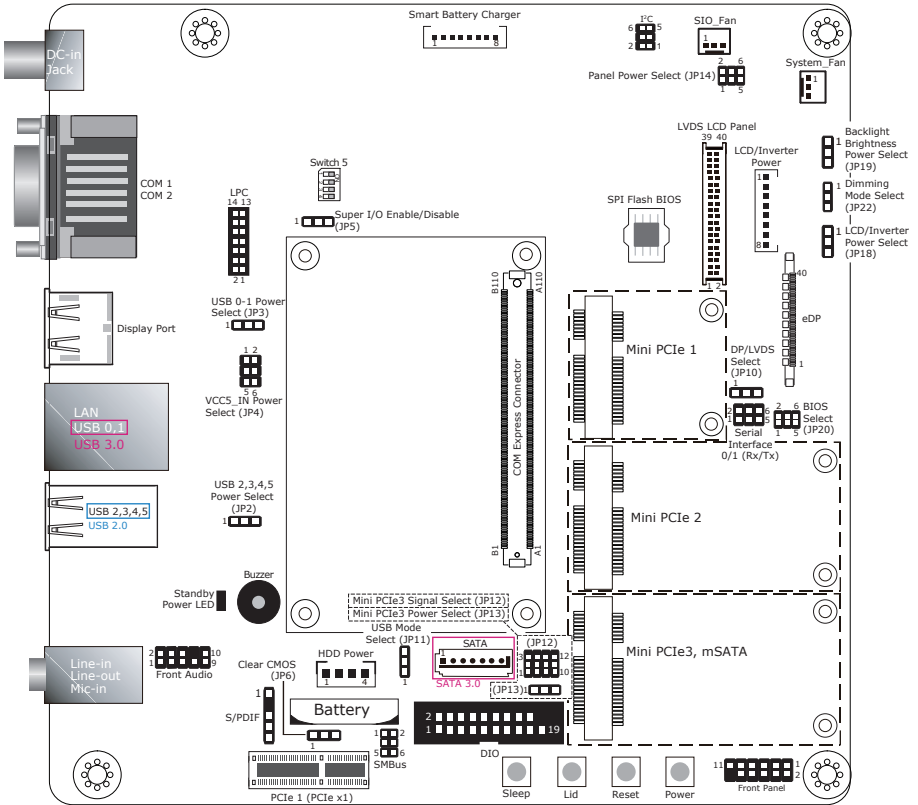

Switch 5	1 On; 2, 3, 4 Off	2 On; 1, 3, 4 Off	3 On; 1, 2, 4 Off	4 On; 1, 2, 3 Off
DC-IN Voltage	19V	12V (default)	5V	NC

JP14	1-2 On	3-4 On	5-6 On
Panel Power Select	+12V	+5V	+3.3V (default)

JP4	1-2 On	3-4 On	5-6 On
VCC5_IN Power Select	5VSB (default)	5V	NC

Clear CMOS	JP6
Normal (default)	1-2 On
Clear CMOS	2-3 On

Super I/O	JP5
Enable	1-2 On
Disable (default)	2-3 On

USB Power Select: 0,1 (JP3), 2,3,4,5 (JP2)		
+5V (default)	1-2 On	
+5V_standby	2-3 On	
USB Mode Select		
NC	1-2 On	
Host (default)	2-3 On	
Mini PCIe3 Power Select		
+3.3 V (default)	1-2 On	
+3.3 V_standby	2-3 On	
Dimming Mode Select		
PWM Mode (default)	1-2 On	
Voltage Mode	2-3 On	
LCD/Inverter Power Select		
+12V (default)	1-2 On	
+5V	2-3 On	
Backlight Brightness Power Select		
+5V (default)	1-2 On	
+3.3V	2-3 On	
Mini PCIe3 Signal Select		
Mini PCIe	1-2, 4-5, 7-8, 10-11 On	
mSATA (default)	2-3, 5-6, 8-9, 11-12 On	
LVDS/eDP Select		
eDP	1-2 On	
LVDS (default)	2-3 On	
BIOS Select		
Module SPI	1-3 On	2-4 On
NC	3-5 On	2-4 On
Carrier SPI0	1-3 On	4-6 On
Module SPI0 (default)	3-5 On	4-6 On



DFI reserves the right to change the specifications at any time prior to the product's release. This QR may be based on editions that do not resemble your actual products. For more documentation and drivers, please visit the download page at [go.dfi.com/COM100-B](http://go.dfi.com/COM100-B), or via the QR code to the right.

