


### Board Layout and Jumper Settings

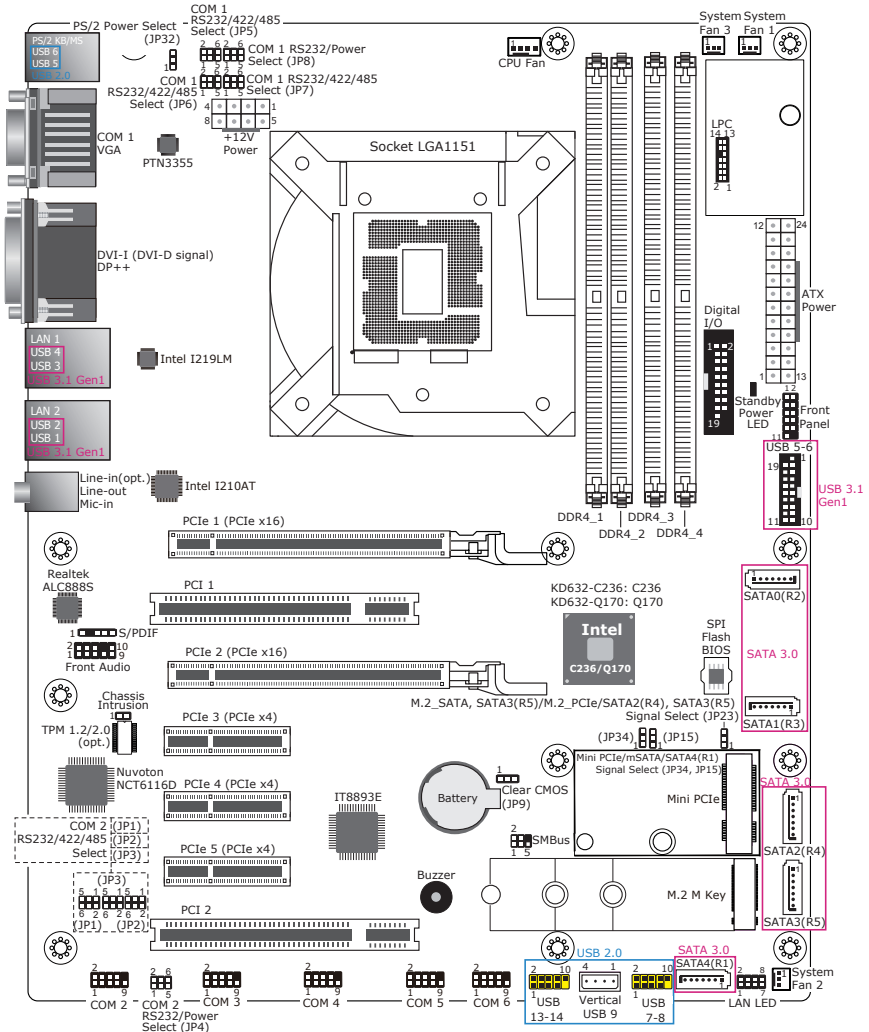

RS232/422/485 Select	JP5 (COM 1) JP1 (COM 2)	JP6/JP7 (COM 1) JP2/JP3 (COM 2)	RS232/Power Select	JP8 (COM 1) JP4 (COM 2)
RS232 (default)	1-3, 4-6 On	1-3, 2-4 On	RS232 (default)	1-3 (RI-), 2-4 (DCD-) On
RS422 Full Duplex	3-5, 4-6 On	3-5, 4-6 On	RS232 with power	3-5 (+5V), 4-6 (+12V) On
RS485	3-5, 2-4 On	3-5, 4-6 On		

#### Notes:

- When COM 1 RS232/422/485 is selected, JP6 and JP7 must be set in accordance to JP5.
- When COM 2 RS232/422/485 is selected, JP2 and JP3 must be set in accordance to JP1.

<b>M.2 SATA, SATA3(R5)/M.2 PCIe/SATA2(R4), SATA3(R5) Signal Select</b>	<b>JP23</b>
M.2 SATA, SATA3(R5) (default)	H (1-2) On
M.2 PCIe	H (1-2) On
SATA2(R4), SATA3(R5)	L (2-3) On

<b>PS/2 Power Select</b>	<b>JP32</b>
+5VDU (default)	1-2 On
+5V	2-3 On

<b>Clear CMOS</b>	<b>JP9</b>
Normal (default)	1-2 On
Clear CMOS	2-3 On

<b>Mini PCIe/mSATA/SATA4(R1) Signal Select</b>	<b>JP34</b>	<b>JP15</b>
Mini PCIe	L (2-3) On	L (1-2) On
mSATA (default)	H (1-2) On	L (1-2) On
SATA4(R1)	H (1-2) On	H (2-3) On

## Pin Assignments


### Front Panel

	Pin	Assignment		Pin	Assignment
<b>HD-LED</b>	<b>1</b>	NC	<b>PWR-LED</b>	<b>2</b>	LED Power
	<b>3</b>	HDD Power		<b>4</b>	LED Power
	<b>5</b>	Signal		<b>6</b>	Signal
<b>RESET</b>	<b>7</b>	GND	<b>ATX-SW</b>	<b>8</b>	GND
	<b>9</b>	Signal		<b>10</b>	Signal
	<b>11</b>	NC		<b>12</b>	---

**COM 1 Port: RS232/RS232 with Power/RS422/RS485**

**COM 2 Header: RS232/RS232 with Power/RS422/RS485**

**COM 3/4/5/6 Headers: RS232**

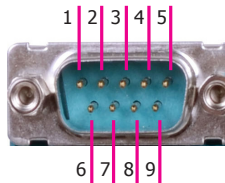

**COM 1**

Pin	RS232	RS232 with Power	RS422 Full Duplex	RS485
<b>1</b>	DCD-	+12V	RX+	DATA+
<b>2</b>	RD	RD	RX-	DATA-
<b>3</b>	TD	TD	TX+	NC
<b>4</b>	DTR-	DTR-	TX-	NC
<b>5</b>	GND	GND	GND	GND
<b>6</b>	DSR-	DSR-	NC	NC
<b>7</b>	RTS-	RTS-	NC	NC
<b>8</b>	CTS-	CTS-	NC	NC
<b>9</b>	RI-	+5V	NC	NC

### Front Audio

Pin	Assignment	Pin	Assignment
1	Mic2-L	2	GND
3	Mic2-R	4	NC
5	Line2-R	6	Mic2-JD
7	GND	8	---
9	Line2-L	10	Line2-JD

### Digital I/O

Pin	Assignment	Pin	Assignment
1	GND	2	+12V
3	DIO7	4	+12V
5	DIO6	6	GND
7	DIO5	8	+5V
9	DIO4	10	+5V
11	DIO3	12	GND
13	DIO2	14	+5V <sub>DU</sub>
15	DIO1	16	+5V <sub>DU</sub>
17	DIO0	18	GND
19	GND	20	---

### LPC

Pin	Assignment	Pin	Assignment
1	CLK	2	LAD1
3	RST#	4	LAD0
5	FRAME#	6	3V3
7	LAD3	8	GND
9	LAD2	10	---
11	INT_SERIRQ	12	GND
13	5VSB	14	5V

### USB 2.0 7-8/13-14 Headers

Pin	Assignment	Pin	Assignment
1	PWR	2	PWR
3	DATA-	4	DATA-
5	DATA+	6	DATA+
7	GND	8	GND
9	---	10	NC

### USB 3.1 Gen1 5-6 Header

Pin	Assignment	Pin	Assignment
1	PWR	20	---
2	RX-	19	PWR
3	RX+	18	RX-
4	GND	17	RX+
5	TX-	16	GND
6	TX+	15	TX-
7	GND	14	TX+
8	DATA-	13	GND
9	DATA+	12	DATA-
10	NC	11	DATA+

### LAN LED

Pin	Assignment	Pin	Assignment
1	GBE_LED_1000-	2	GBE_LED_100-
3	GBE_LED_LINK_ACT-	4	3V <sub>DU</sub>
5	LINK_1000_4	6	LINK_100_4
7	LINK_ACTIVITY_4	8	3V <sub>DU</sub>

### CPU Fan

Pin	Assignment
1	GND
2	+12V
3	Sense
4	Speed Control

### System Fan 1/2/3

Pin	Assignment
1	GND
2	Power
3	Sense

### +12V Power

Pin	Assignment	Pin	Assignment
1	GND	5	+12V
2	GND	6	+12V
3	GND	7	+12V
4	GND	8	+12V

### SATA 3.0 0(R2)/ 1(R3)/2(R4)/ 3(R5)/4(R1)

Pin	Assignment
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND

### S/PDIF

Pin	Assignment
1	+5V
2	---
3	SPDIF out
4	GND
5	SPDIF in

### ATX Power

Pin	Assignment	Pin	Assignment
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PS_ON#
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	PWR_OK	20	NC
9	+5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	GND

### SMBus

Pin	Assignment	Pin	Assignment
1	3VDU	2	GND
3	SMB_CLK	4	SMB_DATA
5	SMB_ALERT	6	---

### Chassis Intrusion

Pin	Assignment
1	Signal
2	GND



DFI reserves the right to change the specifications at any time prior to the product's release. For the latest information about the product, please refer to the user's manual at [go.dfi.com/KD632](http://go.dfi.com/KD632) (KD632-C236 and KD632-Q170 share the same quick reference and manual).

