


DFI®

CL630-CRM

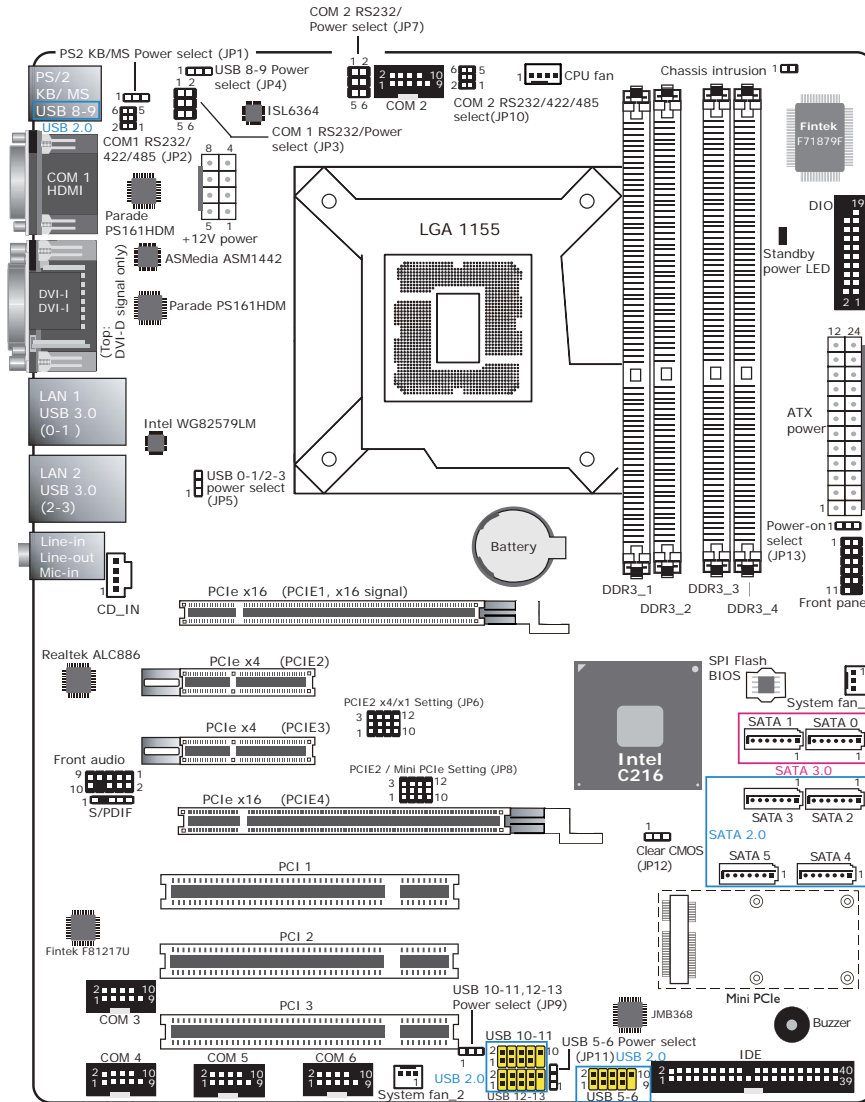

USB Power: 8-9 (JP4), 0-1,2-3 (JP5), 5-6(JP11), 10-11,12-13 (JP9)	
+5V (default)	1-2 On
+5V_standby	2-3 On

RS232/RS422/RS485 Select: COM 1 (JP2), COM 2 (JP10)	
RS232 (default)	1-2 On
RS422 Full Duplex	3-4 On
RS485	5-6 On

PS/2 Power		JP1
+5V (default)	1-2 On	
+5V_standby	2-3 On	

RS232/Power: COM 1 (JP3), COM 2 (JP7)	
RS232 (default)	1-3 (RI), 2-4 (DCD) On
RS232 with power	3-5 (+5V), 4-6 (+12V) On

Power-on Select		JP13
Power-on via power button (default)	1-2 On	
Auto Power-on	2-3 On	

PCIe2/Mini PCIe Configuration Settings			
PCIe2	Mini PCIe	JP6	JP8
x4	Supported	2-3, 5-6, 8-9,11-12 On (default)	1-2,4-5, 7-8,10-11 On (default)
x1	Not Supported	1-2,4-5, 7-8,10-11 On	2-3,5-6, 8-9,11-12 On
Not Supported	Supported	1-2,4-5, 7-8,10-11 On	1-2,4-5, 7-8,10-11 On

Clear CMOS		JP12
Normal (default)		1-2 On
Clear CMOS		2-3 On

Note:
The default settings of JP6 and JP8 are the best configurations for processors supporting 20 lanes of PCI Express bus. However, not all processors provide 20 lanes of PCI Express bus (based on Intel's official document). If your processor only supports 16 lanes of PCI Express bus, set JP6 to 1-2, 4-5, 7-8, 10-11 On and JP8 to 2-3, 5-6, 8-9, 11-12 On (Mini PCIe not supported), or JP8 to 1-2, 4-5, 7-8, 10-11 On (Mini PCIe supported) as the table illustrates above.

Battery Notice



Battery Usage

The lithium ion battery powers the real-time clock and CMOS memory. It is an auxiliary source of power when the main power is shut off.



Safety Measures

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommend by the manufacturer.
- Dispose of used batteries according to local ordinance.



Mesure de Sécurité de l'usage de Batterie

Batterie:

- Danger d'explosion si la batterie n'est pas correctement remplacée.
- Remplacez seulement avec le même type ou équivalent recommandé par le fabricant.
- Traitez des batteries usées selon le règlement local.